



# **HINO-EPC System**

## **Operation Manual**



R.2A  
May 2003

# INTRODUCTION

Welcome to Hino EPC world.

We are pleased to release Operation Manual R.2A of Hino EPC System.

Hino EPC (Electronic Parts Catalog) is a system to inquire or search part numbers for vehicles produced and supplied by Hino Motors, Ltd. This manual gives you basic operating instructions of Hino EPC.

**Please note the following when you use Hino EPC:**

1. Hino EPC only covers original equipment parts produced and/or supplied by Hino Motors, Ltd in Japan.  
Parts equipped locally at distributors, dealers or service workshops are not contained in Hino EPC.
2. Hino EPC sometimes displays alternative part number(s) because of part modifications. Be sure to confirm which part is equipped in the actual vehicle.
3. The content of Hino EPC is subject to change without notice.  
You are requested to always install the latest information.

**HINO EPC runs with two kind of CD-ROM.**

1. "System EPC" :This is program to search catalog data.
  2. "Data EPC": This is content of catalog and will be updated from time to time.
- "System EPC" can be freely copied or used without time limit, while "Data EPC" has built-in time limit function in order for promotion to diffuse the latest information. "Data EPC" will expire around 12 months after issue date.

**The following hardware and software specifications must be met to install and run Hino EPC.**

1. Windows NT, Windows 98, Windows 2000  
(Windows 95 is not supported.)
2. 40MB free disk space for installation of System EPC.  
700MB or over free disk space for installation of both "System EPC" and "Data EPC".
3. 64MB RAM
4. Pentium 166MB processor or over
5. CD-ROM device equipped
6. Monitor : 1024x800 resolution or over

All the title and copyright in and to the software are owned by Hino Motors Ltd. You may not copy or reproduce the software or any related documentation. You shall acknowledge that you are receiving only a limited license to use the software and related documentation.

Hino Motors, Ltd. shall not be liable for any consequential, incidental or indirect damages arising out of the use of the software.

The contents of the software and/or any related documentation is subject to change without notice.

May 2003  
Hino Motors, Ltd.

# INDEX

<b>INTRODUCTION</b>	<b>1</b>
<b>INDEX</b>	<b>2</b>
<b>INSTALLATION AND SETUP</b>	<b>6</b>
<b>1. Outline of Installation and Setup</b>	<b>8</b>
1-1. Outline of Installation and Setup	9
1-1-1. Initial Installation and Setup	9
1-1-2. New Release Setup	9
<b>2. Install "System EPC"</b>	<b>10</b>
2-1. Installation	11
2-1-1. Installation	11
2-1-2. Uninstallation	13
<b>3. Start Hino EPC System</b>	<b>14</b>
3-1. Start Hino EPC System	15
<b>4. Setup System Environment</b>	<b>16</b>
4-1. Setup System Environment	17
4-2. Setup CD-Drive	19
4-2-1. Initial Setup	19
4-2-2. New Release Setup	23
4-3. Copy "Data EPC" into PC's Disk	25
4-3-1. Initial Setup	25
4-3-2. New Release Setup	31
4-4. Check CD-drive	34

# INDEX

<b>SEARCHING OPERATION</b>	<b>36</b>
<b>1. Outline of Searching Operation</b>	<b>38</b>
1-1. Outline of Searching Operation	39
1-1-1. Search Part Number	39
1-1-2. Search Part Number by Group Code	43
1-1-3. Search Applicable Model for Part Number	43
<b>2. HINO EPC Screen</b>	<b>44</b>
2-1. HINO EPC Screen	45
2-1-1. HINO EPC Screen	46
2-1-2. Language	46
<b>3. Vehicle Information</b>	<b>48</b>
3-1. Outline of Vehicle Information	49
3-1-1. When Model is Available	50
3-1-2. When Model is Not Available	51
3-1-3. History Function	52
3-1-4. When VIN is available	52
3-2. Explanation of Screen	53
3-2-1. Explanation of Each Column	53
3-2-2. Explanation of PF Key	55
3-3. Enter Model (6-character) and Chassis No.	58
3-4. Enter Model (6-character) and Select Vehicle Spec.	59
3-5. Enter Model (1 to 5-character) and Select CAT-NO.	61
3-6. Select CAT-NO. Directly	62
3-7. History Function	63
3-8. When VIN is available	64

# INDEX

<b>4. General Search</b>	<b>66</b>
4-1. Outline of General Search	67
4-1-1. Outline of General Search	68
4-1-2. Search KEY-NO. Using Illustration Index	68
4-1-3. Search KEY-NO. by FIG-NO.	68
4-1-4. Enter KEY-NO.	68
4-1-5. Search KEY-NO. by Part Description	68
4-2. Display General Search Screen	69
4-3. Explanation of Screen	70
4-3-1. Explanation of Each Column	70
4-3-2. Explanation of PF Key	71
4-4. Search KEY-NO. Using Illustration Index	73
4-4-1. Illustration Index (Details)	73
4-4-2. Illustration Index (Component)	74
4-5. Search KEY-NO. by FIG-NO.	76
4-6. Input KEY-NO.	77
4-7. Search KEY-NO. by Part Description	78
<b>5. Illustration</b>	<b>80</b>
5-1. Explanation of Illustration Screen	81
5-1-1. Explanation of Each Column	81
5-1-2. Explanation of PF-key	82
5-2. Search Part Number	85
5-3. Function of Illustration Screen	86
5-3-1. Model	86
5-3-2. Part Description	87
5-3-3. KEY-NO. List	87
5-4. Display All The Illustrations	88
5-5. KEY-NO. List	89
5-6. Zooming-in	90
5-6-1. Zooming-in	90
5-6-2. Scrolling	91

# INDEX

<b>6. Part Number List</b>	<b>92</b>
6-1. Outline of Part Number List	93
6-1-1. Search Applicable Part Number	93
6-1-2. Various Functions	93
6-2. Explanation of Screen	94
6-2-1. Explanation of Each Column	94
6-2-2. Explanation of PF-key	96
6-3. Search Part Number	99
6-4. Save Data	100
6-4-1. Save Data	100
6-4-2. Call Saved Data	101
6-5. Memo Function	102
6-5-1. Input Memo	102
6-5-2. Delete Memo	103
6-5-3. Memo List	104
6-6. D.M.S Connection	106
6-6-1. D.M.S Connection	106
6-6-2. D.M.S Setting	107
6-7. Reference Price	108
 <b>7. KEY-NO. Search</b>	 <b>110</b>
7-1. Outline of KEY-NO.	111
7-1-1. Search by KEY-NO.	111
7-1-2. Search by GROUP CODE	111
7-1-3. Search Applicable Model	111
7-2. Display KEY-NO. Search Screen	112
7-3. Explanation of Screen	113
7-3-1. Explanation of Each Column	113
7-3-2. Explanation of PF-key	114
7-4. Search Part Number by GROUP CODE	116
7-4-1. Set GROUP CODE	116
7-4-2. Set GROUP CODE Contents	118
7-4-3. Search Part Number by GROUP CODE	119
7-5. KEY-NO. Search	121
7-6. Search Applicable Model for Part Number	122

# INSTALLATION AND SETUP



1. Outline of Installation and Setup	8
2. Install "System EPC"	10
3. Start Hino EPC System	14
4. Setup System Environment	16





# 1. Outline of Installation and Setup




Outline of initial installation and setup procedures of HINO EPC is explained in this chapter.

<b>1-1. Outline of Installation and Setup</b>	<b>9</b>
1-1-1. Initial Installation and Setup	9
1-1-2. New Release Setup	9

## 1-1. Outline of Installation and Setup


### 1-1-1. Initial Installation and Setup

Before using Hino EPC, be sure to install and setup "System EPC" first.

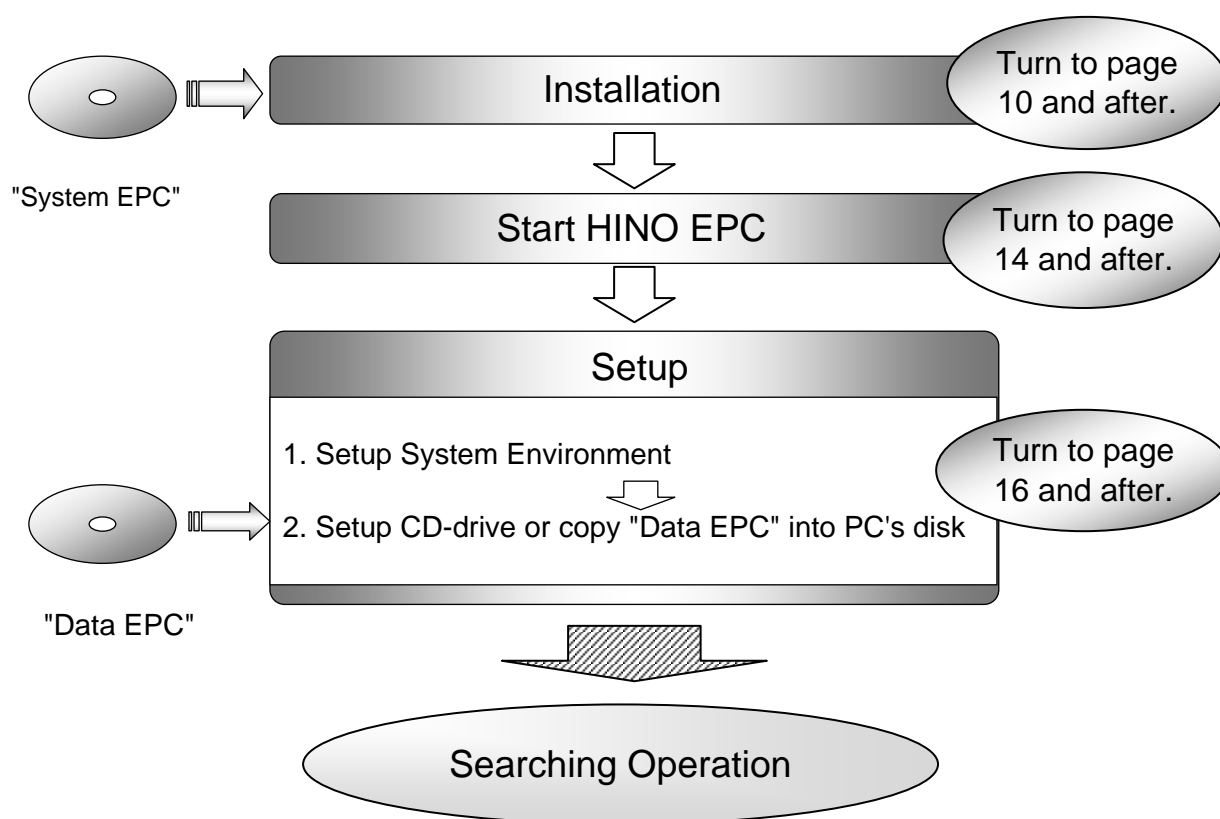

### 1-1-2. New Release Setup

When you get a newly-released "Data EPC", be sure to setup CD-NO.

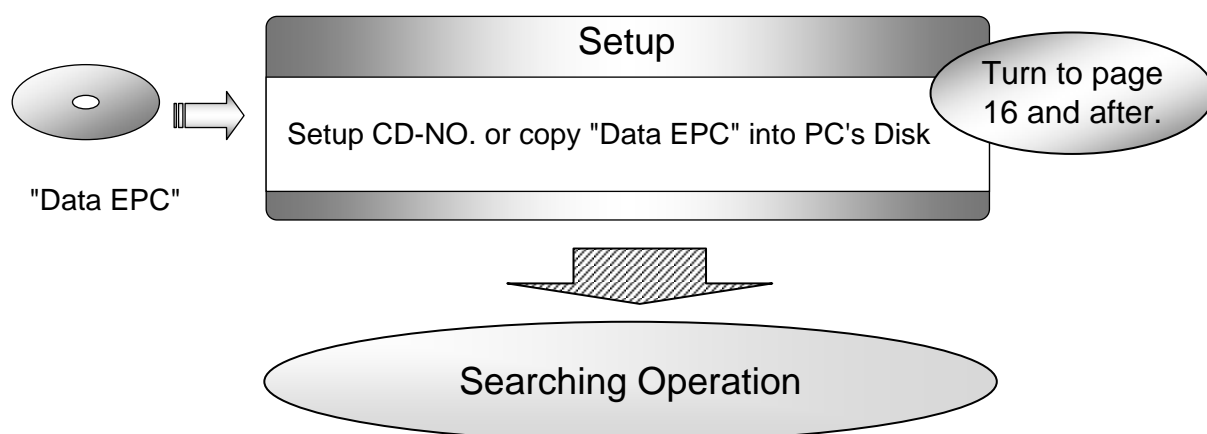

# 2. Install "System EPC"



In this part, the procedure to install "System EPC" is explained.


<b>2-1. Install "System EPC"</b>	<b>11</b>
2-1-1. Installation	11
2-1-2. Uninstallation	13

## 2-1. Install "System EPC"

Before using Hino EPC, be sure to install "System EPC" first.



### 2-1-1. Installation

Before installing "System EPC", be sure to close any other applications as well as virus-scanning programs.

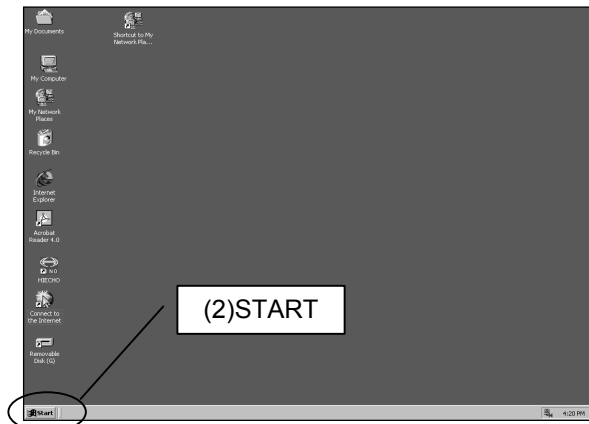


(1) Insert "System EPC" into CD-drive.

Almost all PC's detect "System EPC" automatically and you can skip the following steps through (2) to (6). Only when PC does not work, follow the steps (2) to (6).

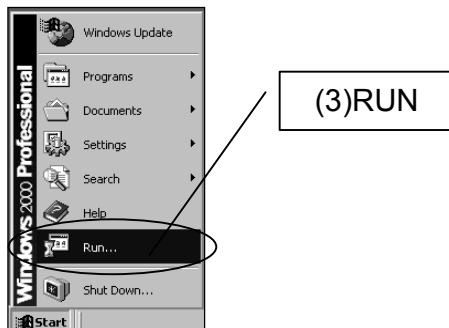

(2) Click on START button.


(3) Double-click on RUN.




(4) "RUN" box is displayed.

(5) Enter CD-Drive no. and "Setup.exe" into OPEN column. (Eg. : D:\Setup.exe)

(6) Click on OK button.




*Continued*

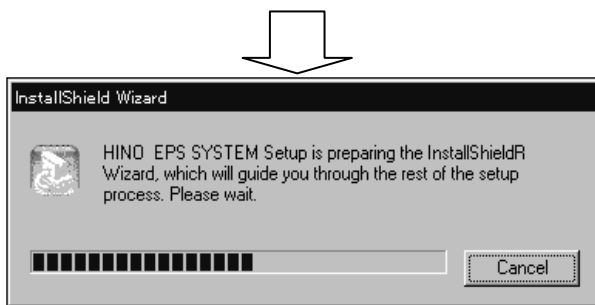

(7) Wait until indicator bar reaches 100%.


(8) "HINO EPC SYSTEM" screen is displayed.

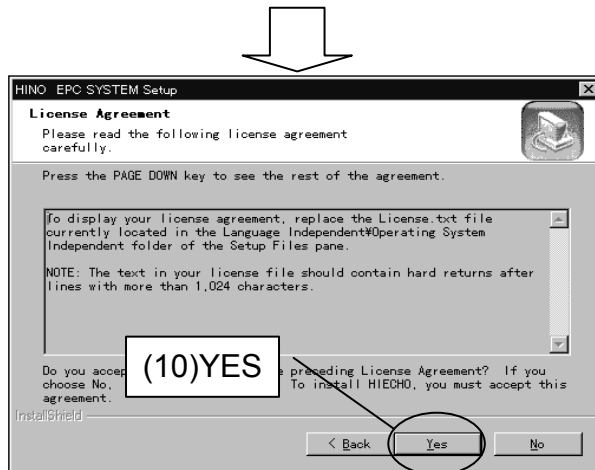

(9) "License Agreement" box is displayed.

(10) Read License Agreement carefully.  
If you agree, click on Yes button.

If you disagree, click on No button and terminate installation.

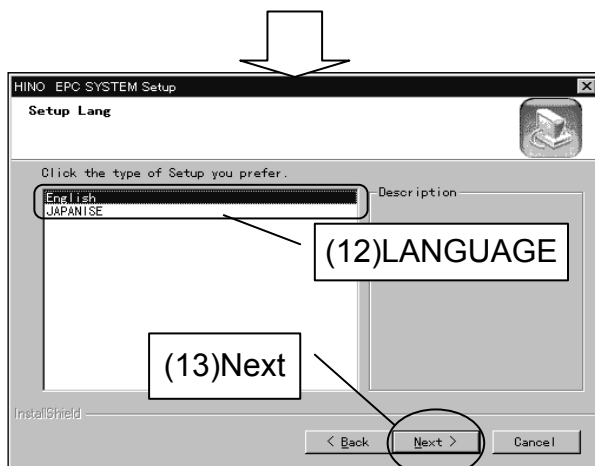


(11) SETUP LANG box is displayed.

(12) Select LANGUAGE by clicking on it.

(13) Click on NEXT button.


If you wish to terminate installation, click on CANCEL button.

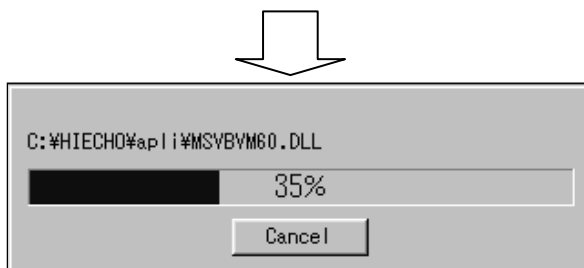

(14) Installation starts.

(15) Wait until indicator bar reaches 100%.

*Continued*

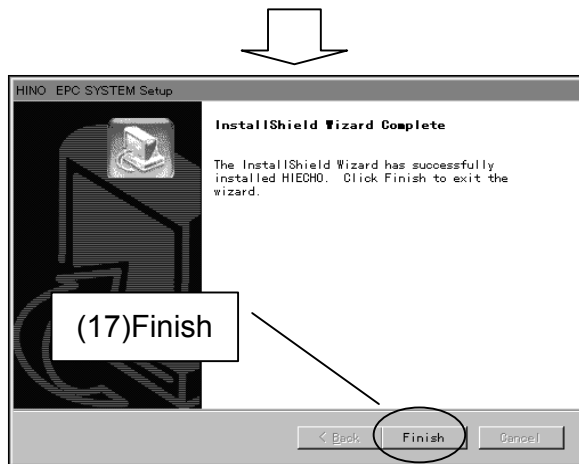


(16) When installation succeeds, the message saying InstallShield Wizard Complete is displayed.

(17) Click on Finish button.


(18) Installation has been completed.

## 2-1-2. Uninstallation

This is an explanation of uninstallation of HINO EPC.

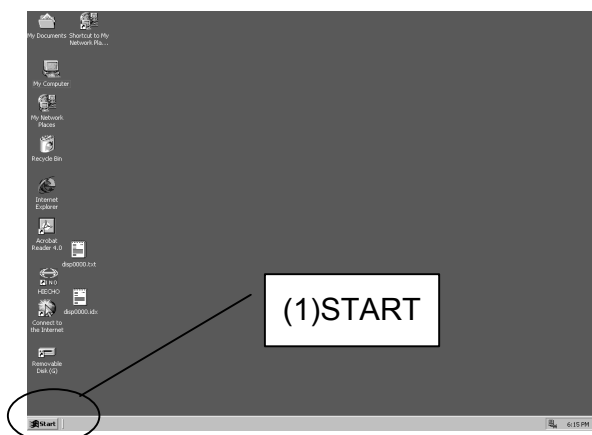

(1) Click on START button on desktop screen.

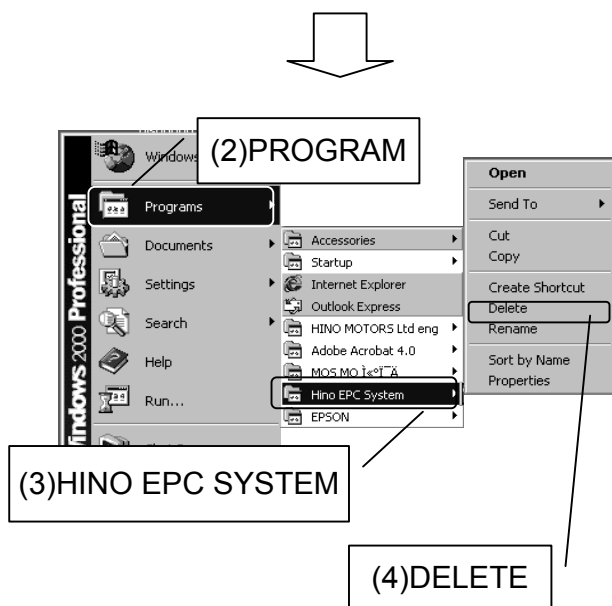

(2) Click on PROGRAM.

(3) Point cursor to HINO EPC SYSTEM and right-click on it.

(4) Click on DELETE.

(5) Uninstallation has been completed.

# 3. Start Hino EPC System




The way to start HINO EPC system is explained in this chapter.

## 3-1. Start Hino EPC System


15

## 3-1.Start Hino EPC System


When installation is completed, Hino EPC icon is created on Desktop screen.  
Start Hino EPC system double-clicking on the icon.

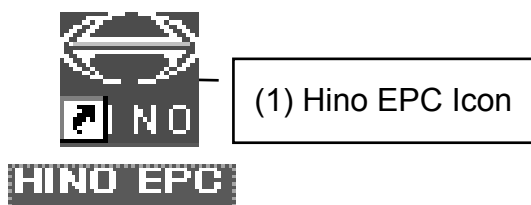

(1) Double-click on the icon of Hino EPC.

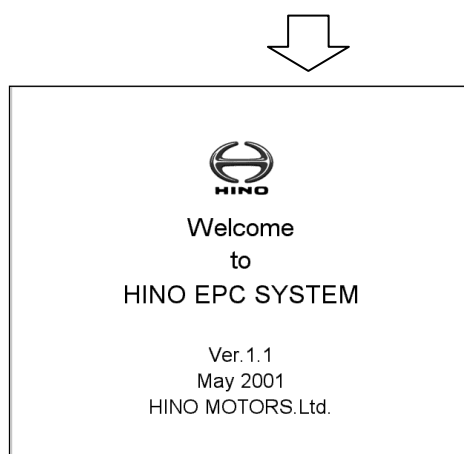

(2) "Welcome to HINO EPC SYSTEM" screen is displayed.

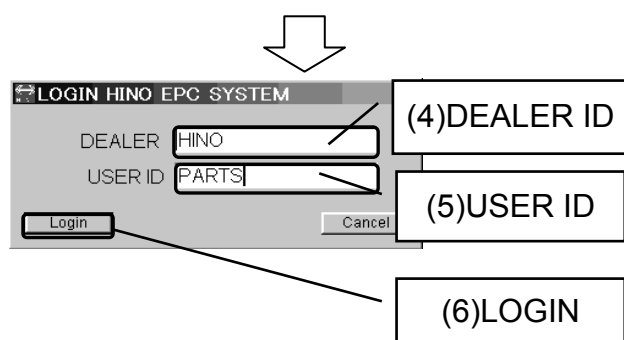


(3) Login box appears.

(4) Input any alphanumeric letters in DEALER column.

(5) Input any alphanumeric letters in USER ID column.

(6) Click on LOGIN button.

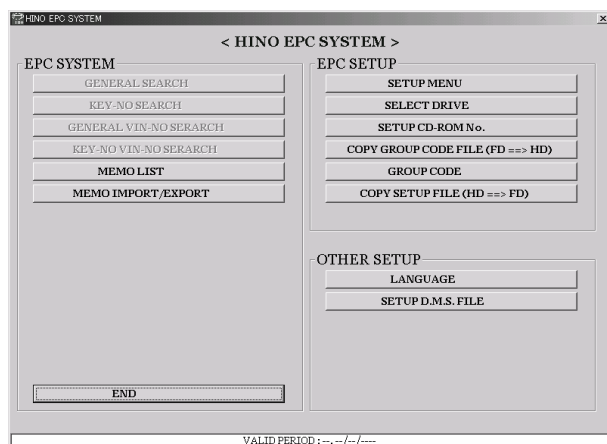

(7) "HINO EPC SYSTEM" screen is displayed.

(8) HINO EPC SYSTEM has been launched.



# 4. Setup System Environment




Setting-up system environment is explained in this chapter.


<b>4-1. Setup System Environment</b>	<b>17</b>
<b>4-2. Setup CD-Drive</b>	<b>19</b>
4-2-1. Initial Setup	19
4-2-2. New Release Setup	23
<b>4-3. Copy "Data EPC" into PC's Disk</b>	<b>25</b>
4-3-1. Initial Setup	25
4-3-2. New Release Setup	31
<b>4-4. Check CD-drive</b>	<b>34</b>

## 4-1.Setup System Environment

Setup system environment of Hino EPC.

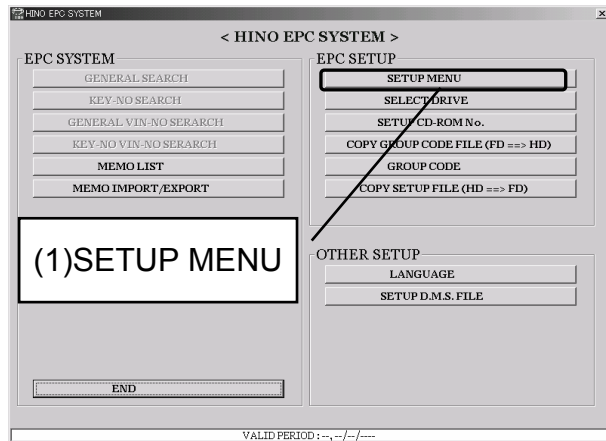


(1) Click on SETUP MENU of "HINO EPC SYSTEM" screen.

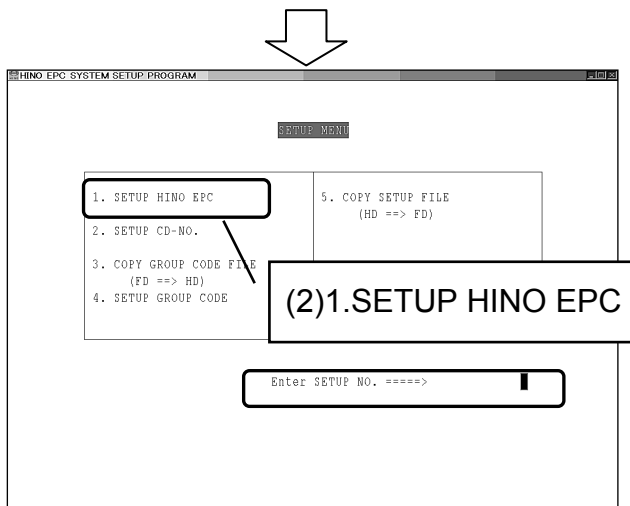


(2) SETUP MENU screen is displayed.

(3) Click on 1.SETUP HINO EPC.

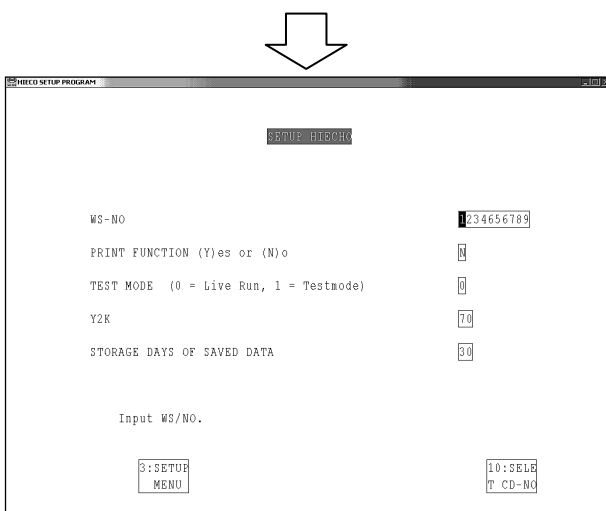


(4) "SETUP HINO EPC" screen is displayed.  
Fill-in each column subject to the following instructions.

*Continued*

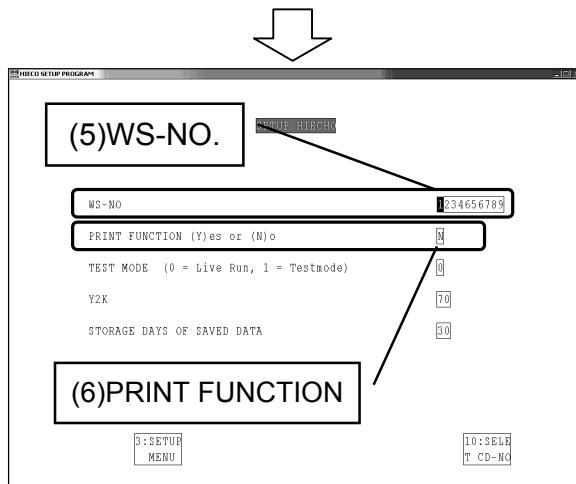


(5) WS-NO (Workstation No.):  
Confirm if "W00000001" is already in the column, and move the cursor to the next column by pressing down the arrow key.

(6) PRINT FUNCTION:  
Confirm if "Y" is already in the column, and move cursor to next column by pressing down the arrow key.

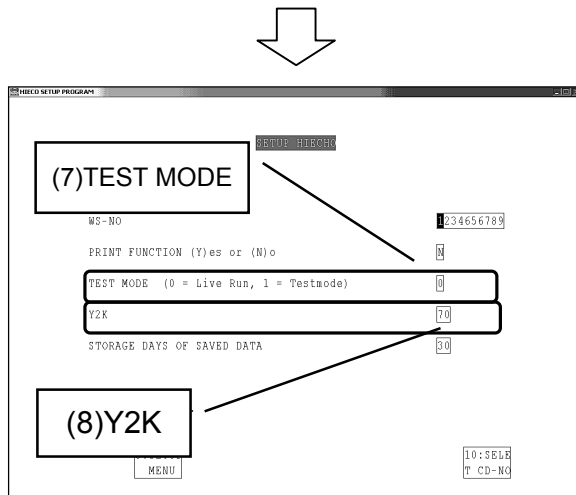

(7) TEST MODE:  
Confirm if "0"(zero) is already in the column, and move the cursor to next column by pressing down the arrow key.

(8) Y2K:  
Confirm if "70" is already in the column, and move the cursor to next column by pressing down the arrow key.

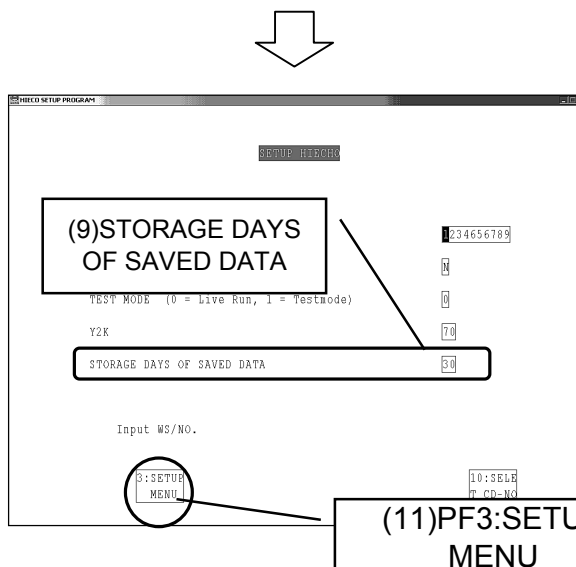

(9) STORAGE DAYS OF SAVED DATA:  
Confirm if "99" is already in the column.


(10) Setup has been completed.

(11) Press PF3: SETUP MENU and screen goes back to "HINO EPC SYSTEM" screen.


## 4-2. Setup CD-Drive

This is an explanation of setting CD-Drive.  
Refer to 4-2-1 in case of initial setup.  
Refer to 4-2-2. in case of new release setup.

### 4-2-1.Initial Setup

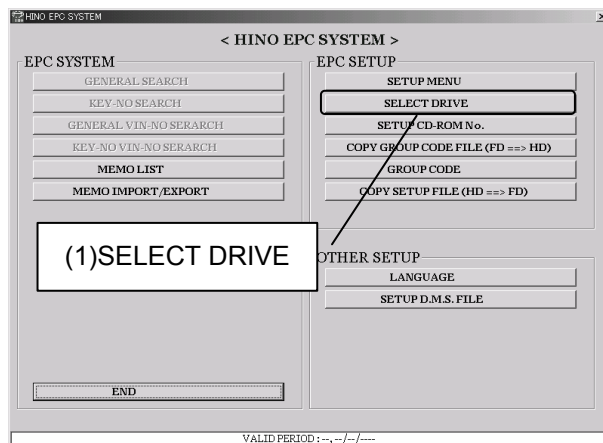

- (1) Click on SELECT DRIVE  
of "HINO EPC SYSTEM" screen.

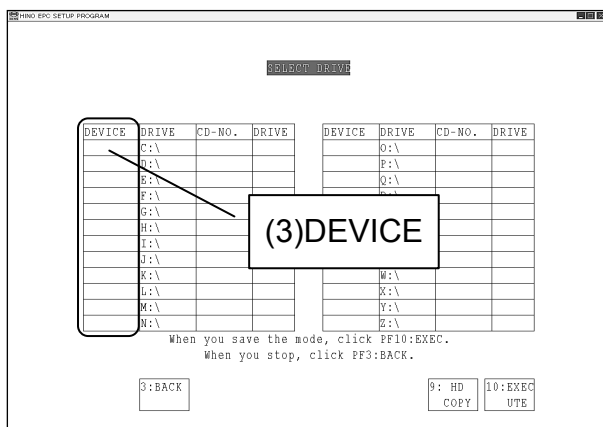


- (2) "SELECT DRIVE" screen  
is displayed.
- (3) Click on DEVICE column  
to the left of DRIVE NO. which  
your PC uses for CD-ROM.

When the drive no. is not available,  
follow the instruction of 4-4.Check  
CD-Drive.




*Continued*

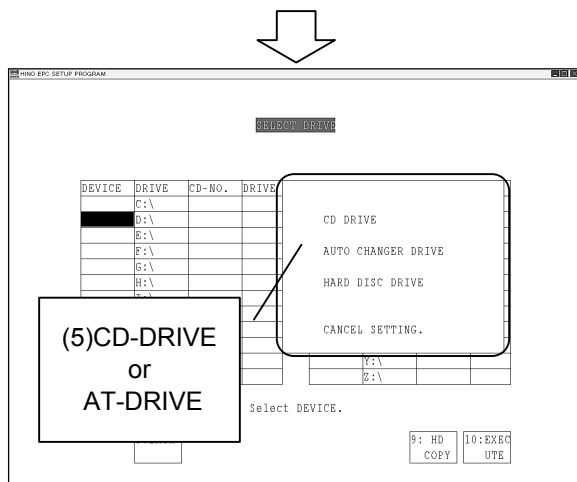


(4) A box appears.

(5) Click on either CD-DRIVE or AUTO-CHANGER DRIVE.

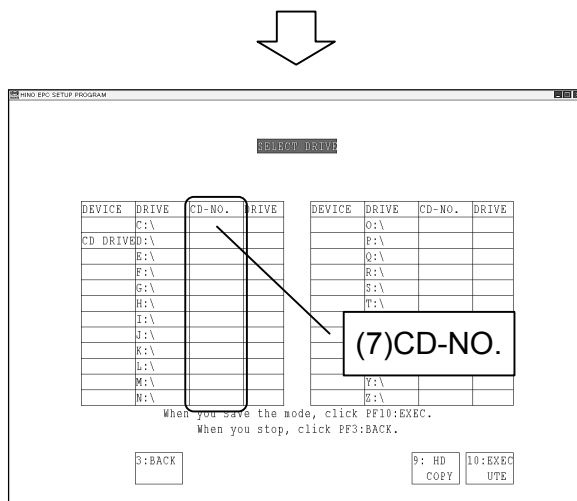

(6) Type of drive is indicated in UNIT column.

(7) Click on CD-NO. column.

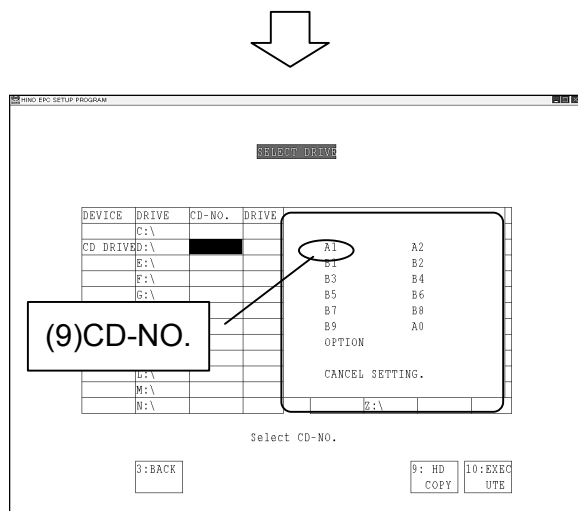


(8) A box appears.

(9) Click on the same CD-NO as printed on "Data EPC".

When inserting "Data EPC" into CD-drive and clicking on OPTION, the system automatically detects CD-NO.


*Continued*

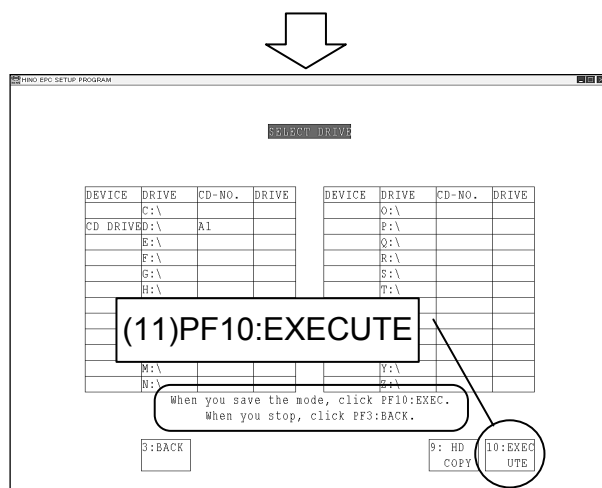


(10) CD-NO. is indicated.

(11) Press PF10: EXECUTE.

(12) Press PF3: BACK, and screen goes back to HINO EPC SYSTEM.

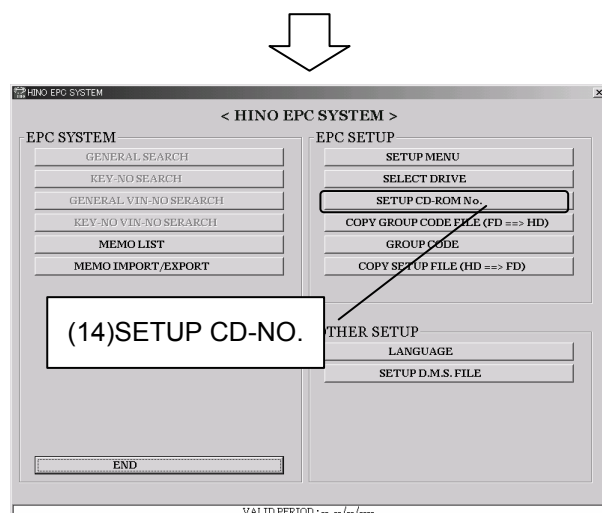


(13) Click on SETUP CD-NO. of "HINO EPC SYSTEM" screen.

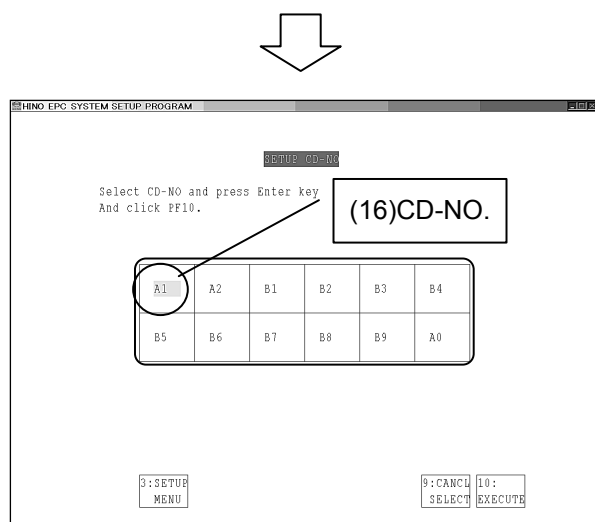

(14) "SETUP CD-NO." screen is displayed.


(15) Click on the same CD-NO. as printed on "Data EPC".

*Continued*

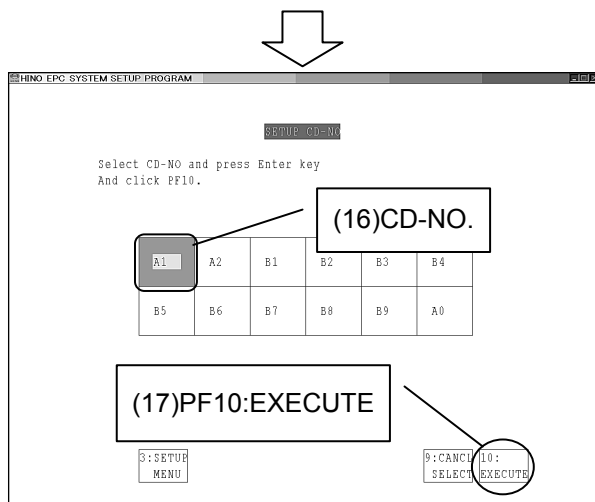


(16) The CD-NO. is highlighted in red.

(17) Press PF10:EXECUTE.

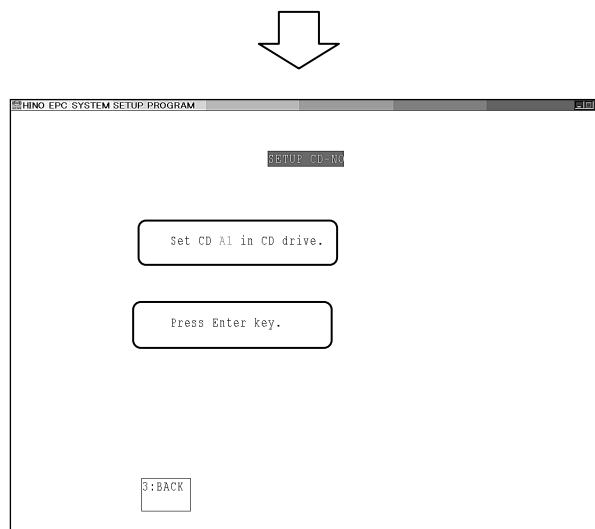

(18) Confirming the message appeared, insert "Data EPC" into the drive and press Enter key.

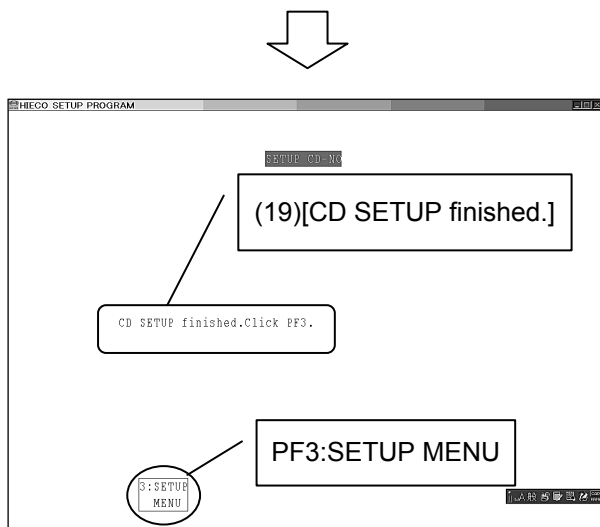


(19) [CD SETUP finished.] is displayed.


(20) Press PF3:SETUP MENU and screen goes back to "HINO EPC SYSTEM"screen.

## 4-2-2. New Release Setup


When you get a newly-released "Data EPC", be sure to implement the following process.

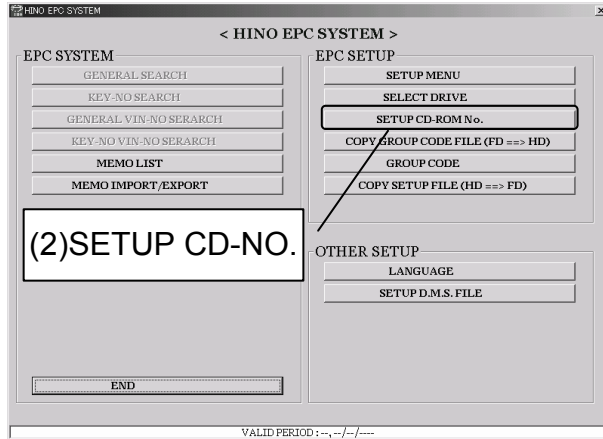

- (1) Click on SETUP CD-ROM No. of "HINO EPC SYSTEM" screen.

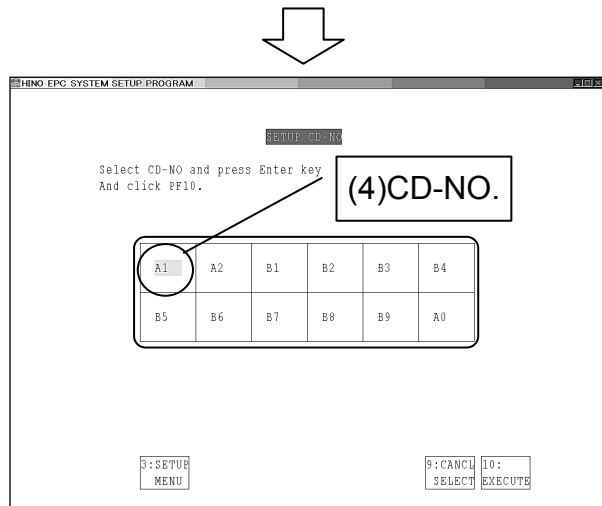


- (2) "SETUP CD-ROM No." screen is displayed.
- (3) Click on the same CD-ROM No. as printed on newly-released "Data EPC".

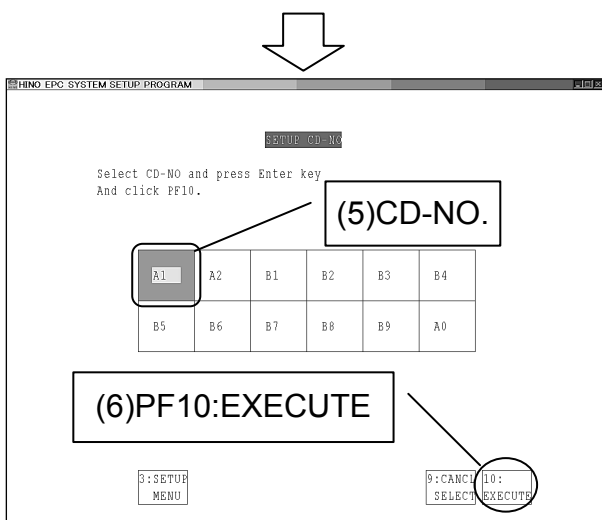


- (4) The CD-ROM No. is highlighted in red.
- (5) Press PF10: EXECUTE.

*Continued*



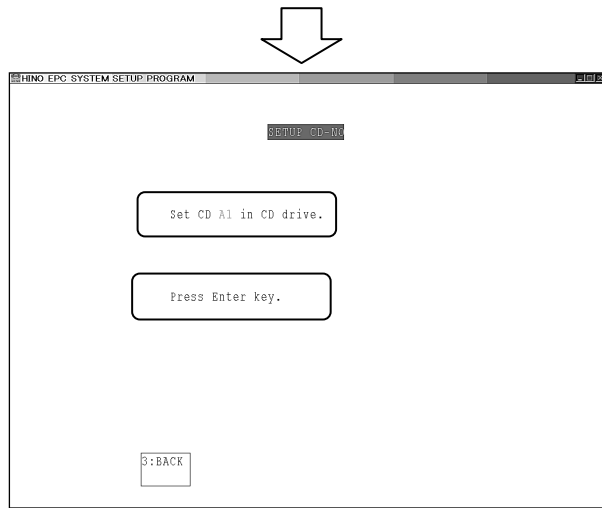

(6) Confirming the message appeared, insert "Data EPC" into the drive and press Enter key.

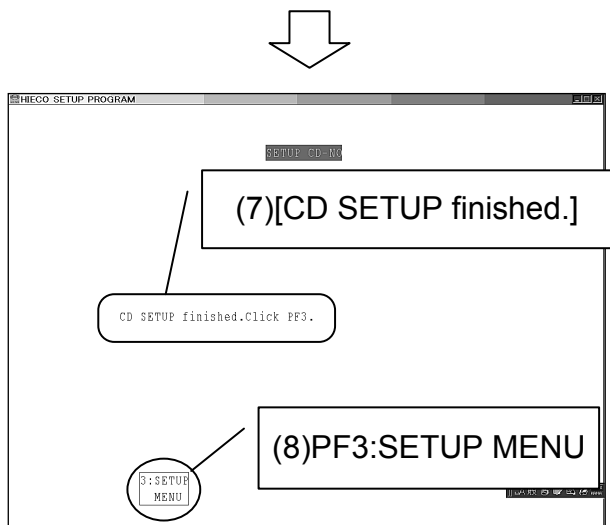


(7) [CD SETUP finished.] is displayed.

(8) Press PF3:SETUP MENU and screen goes back to "HINO EPC SYSTEM" screen.


## 4-3. Copy "Data EPC" into PC's Disk

When you copy "Data EPC" into PC's disk, 700MB or over free disk space is necessary. 4-3-1 explains initial setup, while 4-3-2 explains new release.

### 4-3-1. Initial Setup

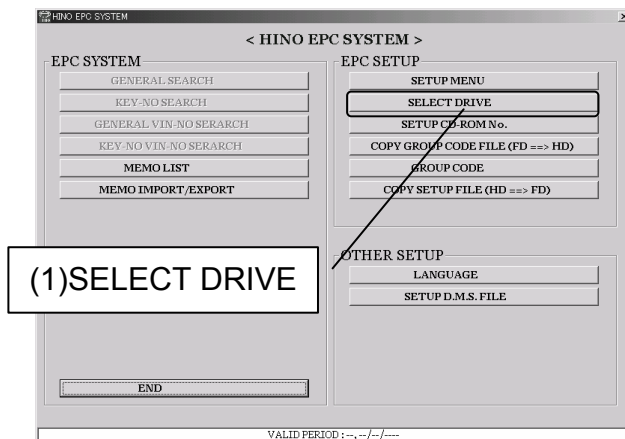

- (1) Click on SELECT DRIVE of "HINO EPC SYSTEM" screen.

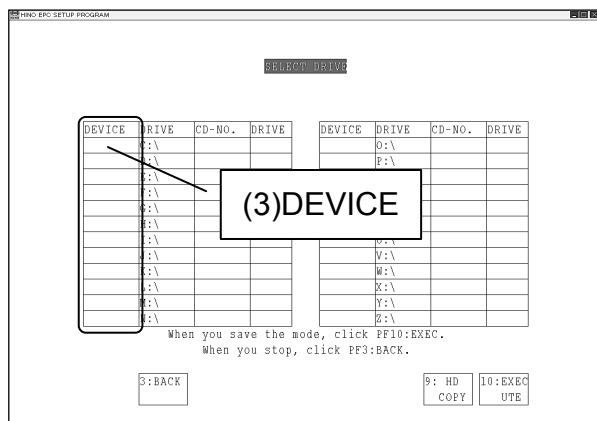


- (2) "SELECT DRIVE" screen is displayed.

- (3) Click on DEVICE column to the left of DRIVE NO. which your PC uses for CD-ROM.

When the drive no. is not available, follow the instruction of 4-4. Check CD-Drive.




*Continued*

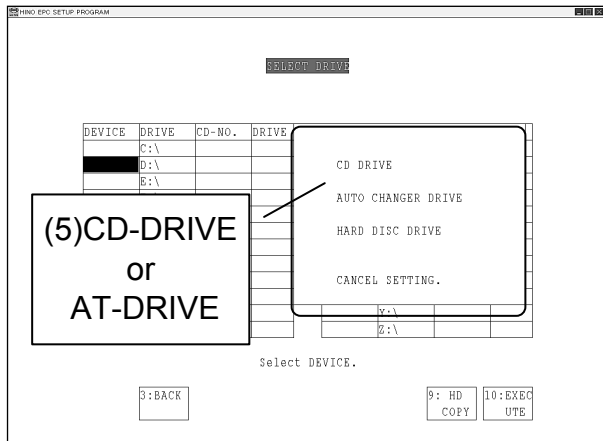


(4) A box appears.

(5) Click on either CD-DRIVE or AUTO-CHANGER DRIVE.

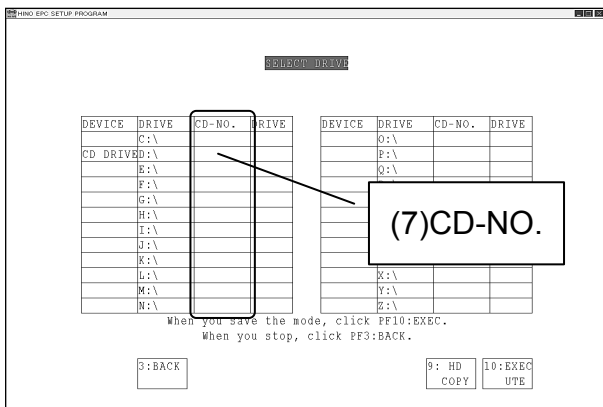

(6) Type of drive is indicated in DEVICE column.


(7) Click on CD-NO. column.

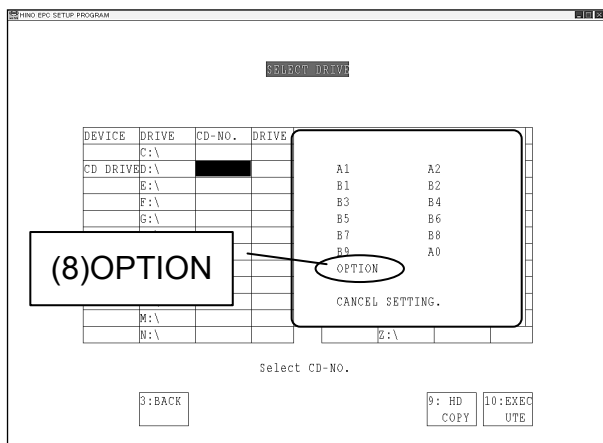

(8) A box appears.  
Click on OPTION.




*Continued*

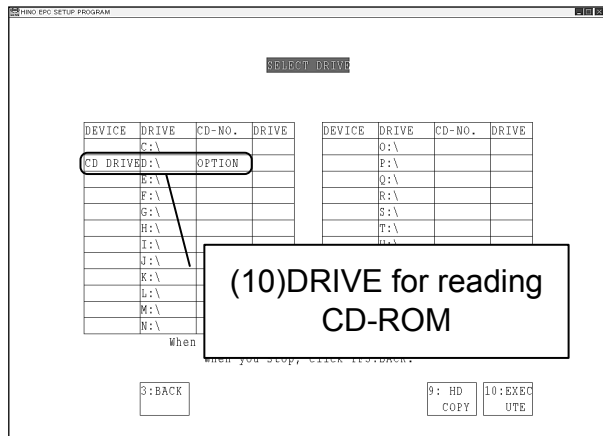


(9) "OPTION" is indicated in CD-NO. column.

(10) The drive for reading CD-ROM has been set. The next step is setting the drive to which "Data EPC" is copied.

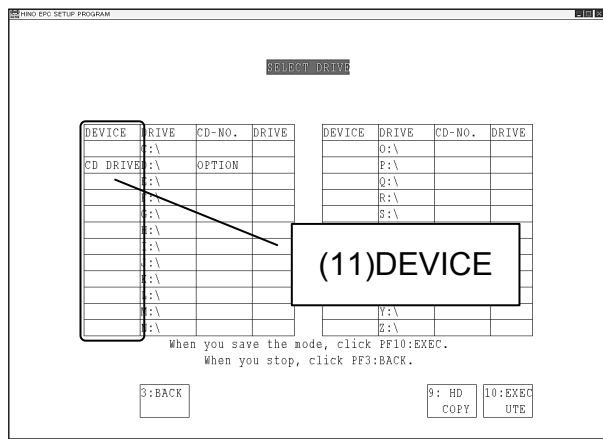

(11) Click on DEVICE column to the left of DRIVE-NO. which your PC uses for local hard disk.

When the drive no. is not available, follow the instruction of 4-4. Check CD-Drive.

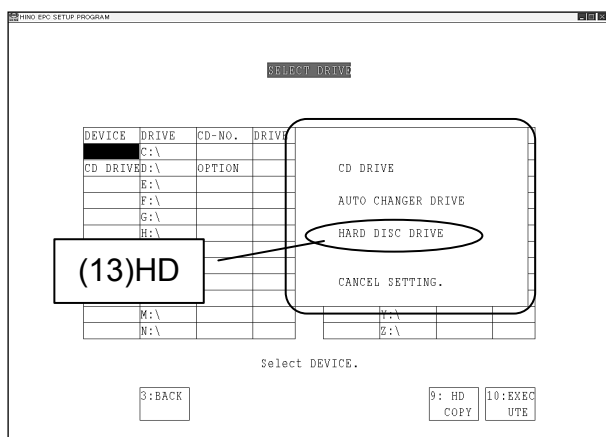


(12) A box appears.

(13) Click HARD DISK DRIVE.


*Continued*



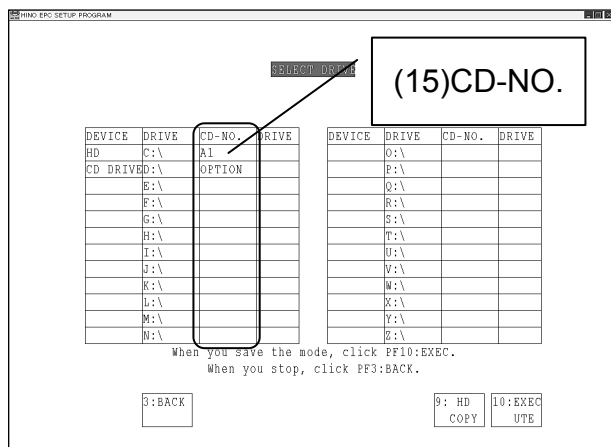

(14) HD is indicated in DEVICE column.


(15) Click on CD-NO. column.

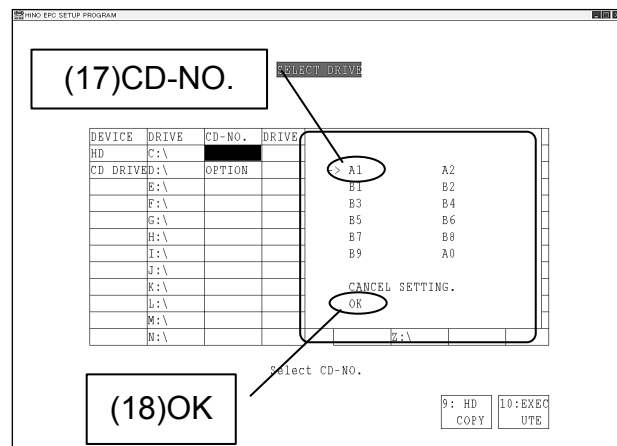

(16) A box appears.

(17) Click on the same CD-NO. as printed on "Data EPC".


(17) Click on OK.

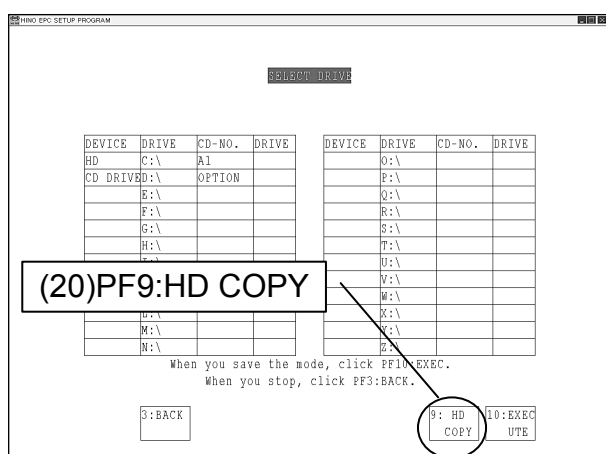

(18) The CD-NO. selected is indicated in CD-NO. column.


(19) Press PF9: HD COPY.

*Continued*

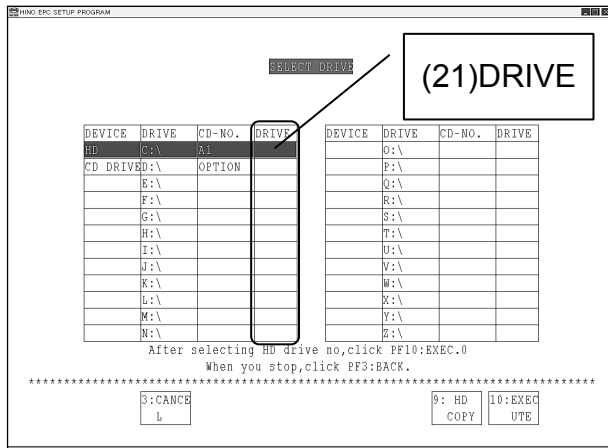


(20) The columns are highlighted in blue.

(21) Click on DRIVE column.

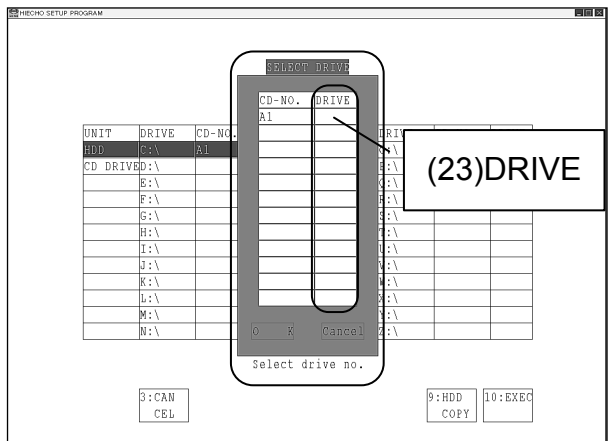

(22) A box appears.

(23) Click on DRIVE column.

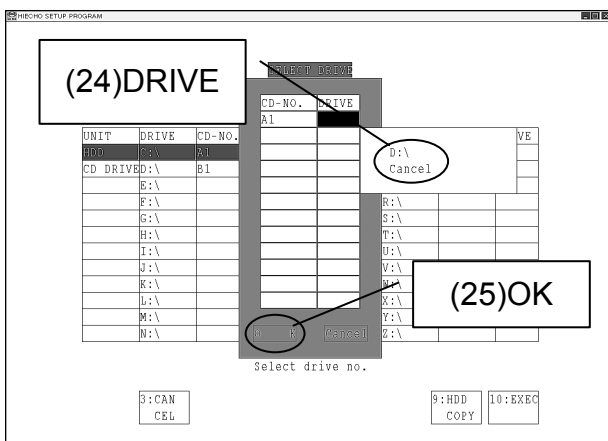


(24) A box appears.  
Click on drive-no. from which "Data EPC" is copied.

(25) Click OK.

*Continued*




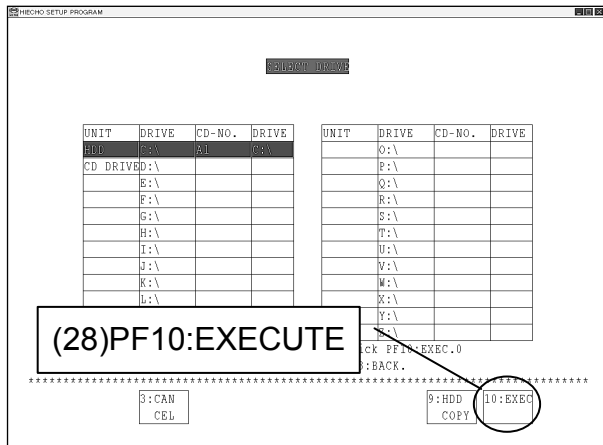

(26) Drive-no. selected is indicated in DRIVE column.


(27) Insert "Data EPC" into drive.

(28) Press PF10:EXECUTE..

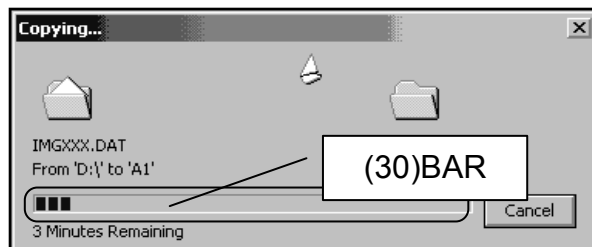

(29) Copy of "Data EPC" to HD starts.

(30) Wait until indication bar reaches 100%.

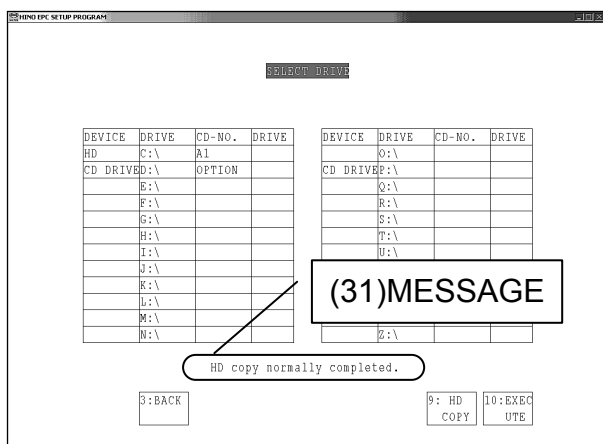


(31) A message saying copy has been completed is indicated.


(32) Copy to HD has been completed.

(33) Press PF3:SETUP MENU and screen goes back to "HINO EPC SYSTEM" screen.

## 4-3-2. New Release Setup

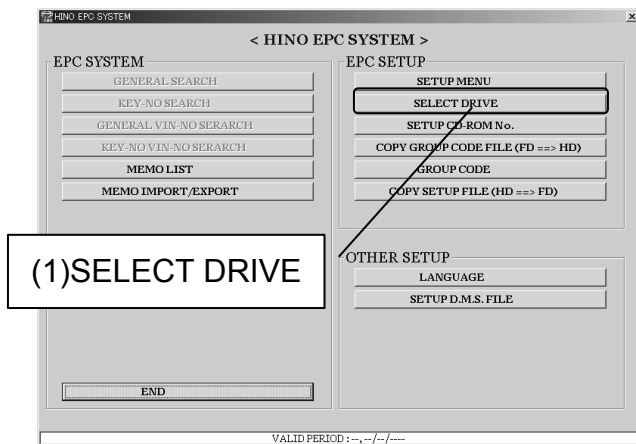


- (1) Click on SELECT DRIVE of "HINO EPC SYSTEM" screen.

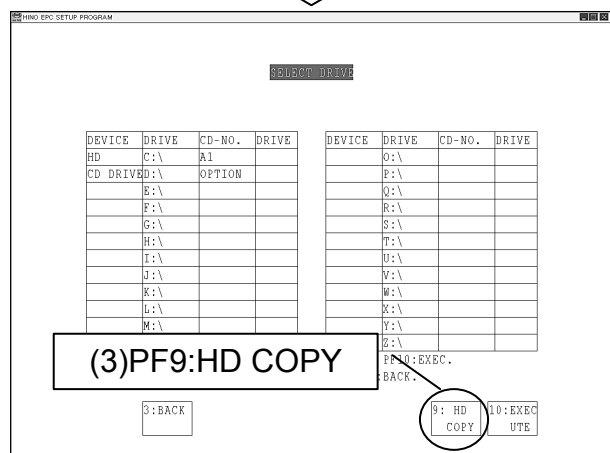

- (2) "SELECT DRIVE" screen is displayed.

- (3) Press PF9: HD COPY.

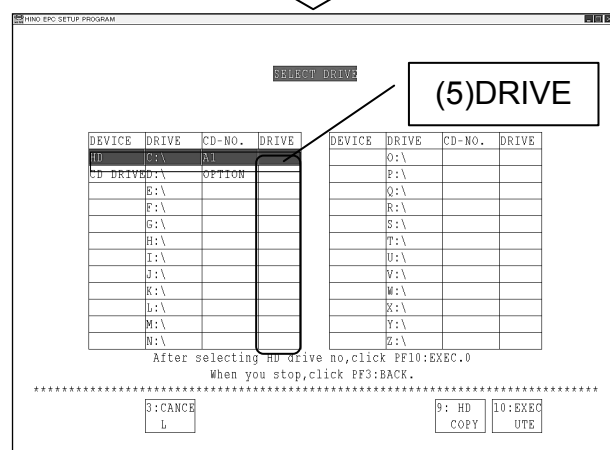


- (4) The columns are highlighted in blue.


- (5) Click on DRIVE column.

*Continued*




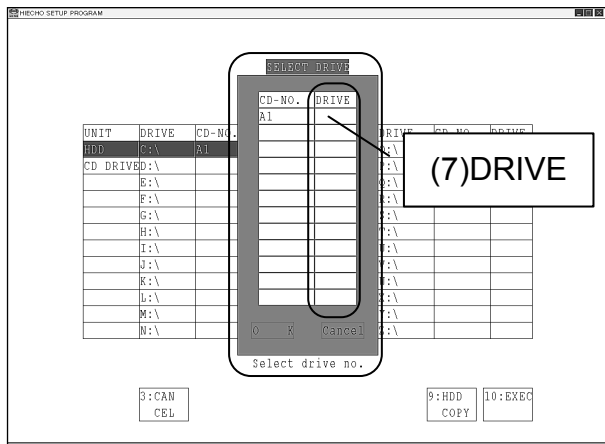

(7) Click on DRIVE column.

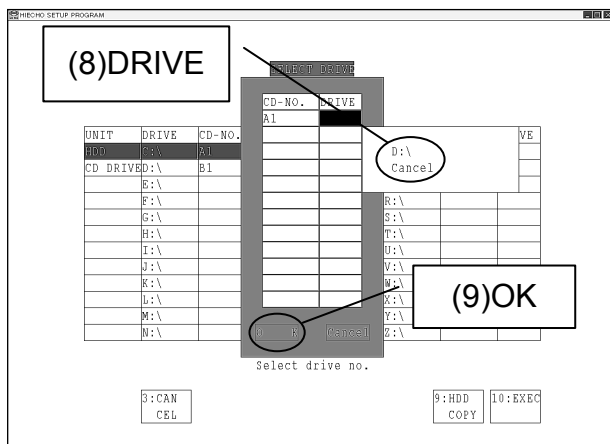


(9) Click OK.

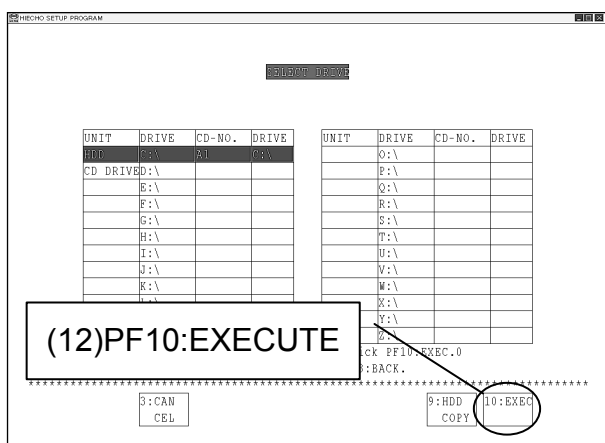


(12) Press PF10:EXECUTE.



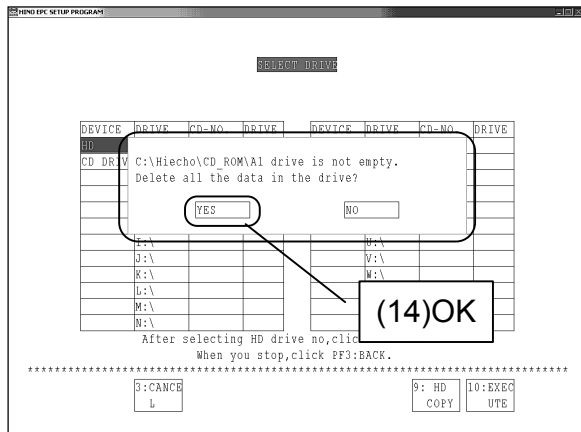


(13) A message saying drive is not empty is displayed when data already exist in HD.

(14) Click on OK button.

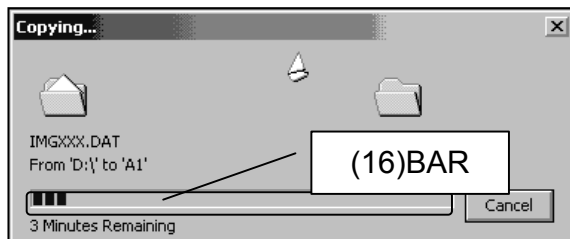

(15) Copy of "Data EPC" to HD starts.

(16) Wait until indication bar reaches 100%.

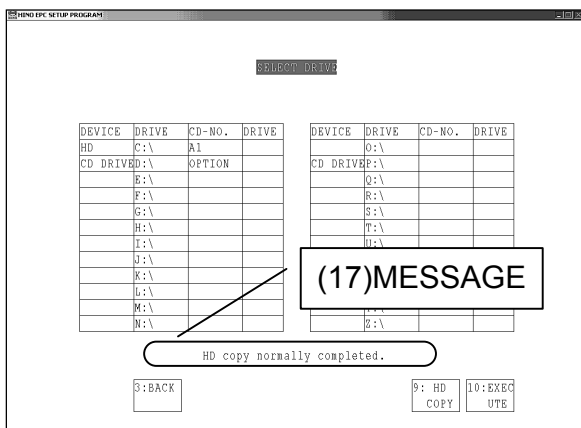


(17) A message saying copy has been completed is indicated.

(18) Copy to HD has been completed.


(19) Press PF3:SETUP MENU and screen goes back to "HINO EPC SYSTEM" screen.

## 4-4. Check CD-Drive

Check drive of PC before setting-up.

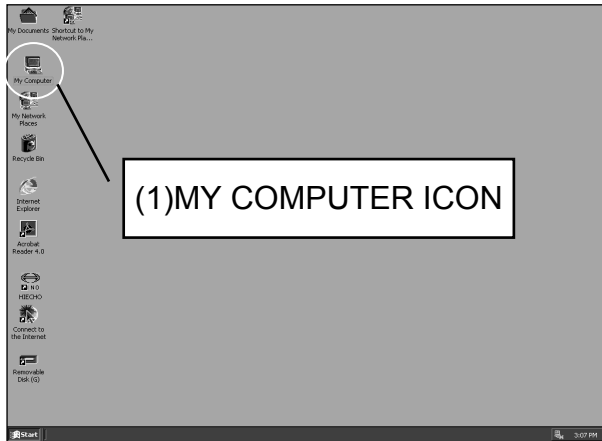


(1) Double-click on MY COMPUTER icon on PC Desktop screen.

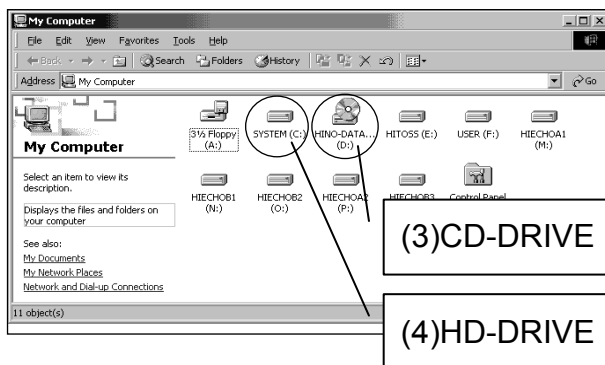

(2) "MY COMPUTER" box is displayed.

(3) Check which drive no. PC uses for reading CD-ROM data.

(4) Check which drive no. is the local hard disk of PC which you copy "Data EPC" into.

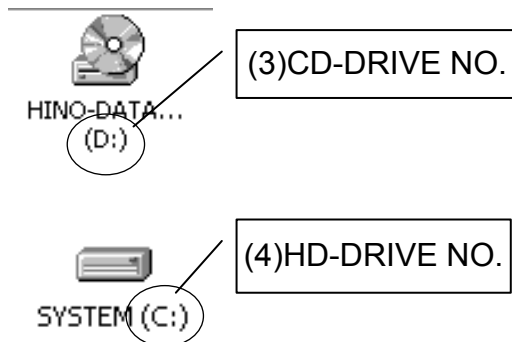





# SEARCHING OPERATION

1.Outline of Searching Operation	38
2.Hino EPC Screen	44
3.Vehicle Information	48
4.General Search	66
5.Illustration	80
6.Part Number List	92
7.Key-no Search	110



# 1. Outline of Searching Operation



Outline of searching operation of Hino EPC is explained in this chapter.

<b>1-1. Outline of Searching Operation</b>	<b>39</b>
1-1-1. Search Part Number	39
1-1-2. Search Part Number by GROUP CODE	43
1-1-3. Search Applicable Model for Part Number	43

## 1-1. Outline of Searching Operation

HINO EPC has the following three search functions..


1. Search Part Number

2. Search Part Number by GROUP CODE

3. Search Applicable Model for Part Number

### 1-1-1. Search Part Number

You can search part number entering vehicle information and selecting KEY-NO.

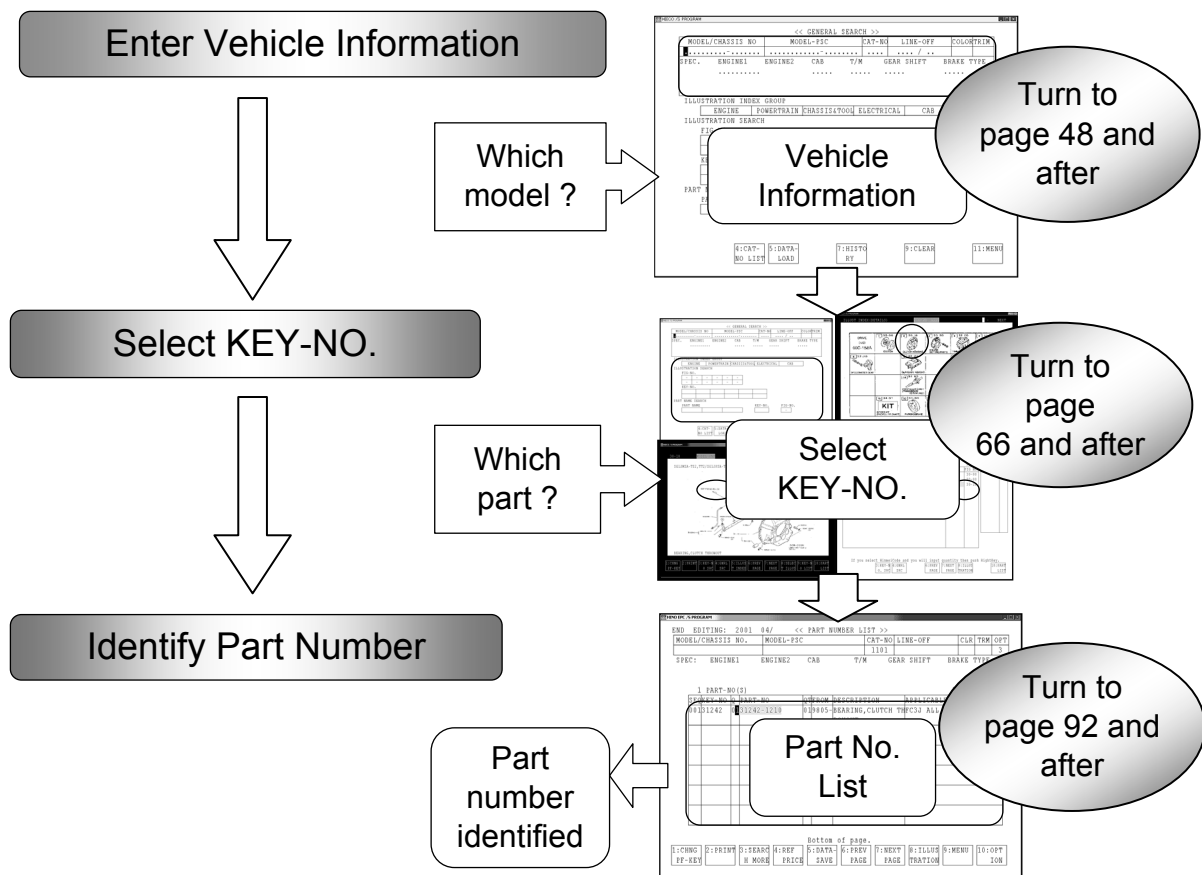




## Enter Vehicle Information

Hino EPC consists of separate volumes per model series.  
The separate volumes are named CAT-NO in Hino EPC.  
CAT-NO is automatically defined by entering vehicle information.

There are five ways to define CAT-NO.

(1) Enter MODEL(6-character) and CHASSIS NO.

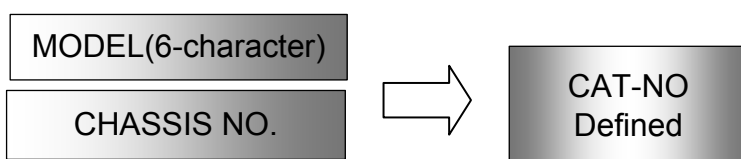


Turn to page  
58 and after

(2) Enter MODEL(6-character) and select VEHICLE SPEC.




Turn to page  
59 and after

(3) Enter MODEL(1to5-character) and select CAT-NO.

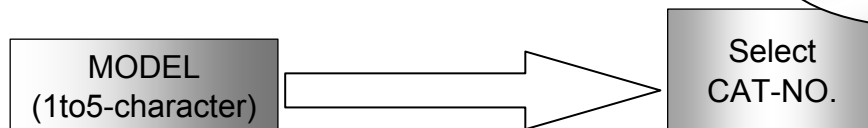


Turn to page  
61 and after

(4) Select CAT-NO. directly.

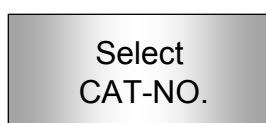

Turn to page 62  
and after

(5) Select CAT-NO using past search HISTORY.



Turn to page 63  
and after


## Select KEY-NO.

There are four ways to search KEY-NO.


Turn to page 73  
and after

(1) When KEY-NO. is found in ILLUSTRATION.

A vehicle consists of such UNIT as ENGINE, POWERTRAIN, CAB and CHASSIS, and each UNIT consists of some COMPONENTS. HINO EPC provides ILLUSTRATION INDEX per such UNIT, and you can display ILLUSTRATION of COMPONENT selecting FIG-NO. ILLUSTRATION of COMPONENT shows KEY-NO. assigned to each part.

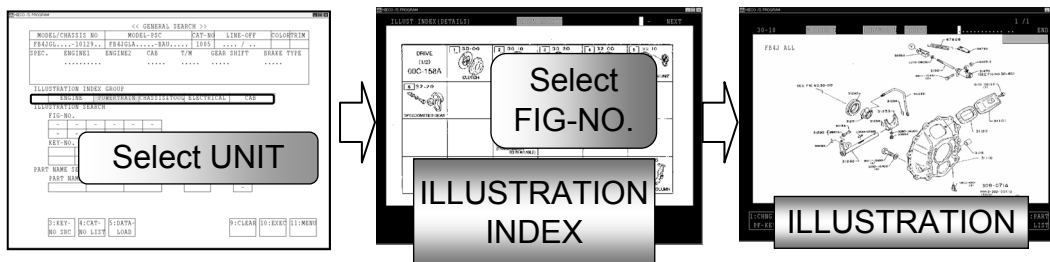

(2) When FIG-NO. is available, you can proceed directly to ILLUSTRATION by entering it.

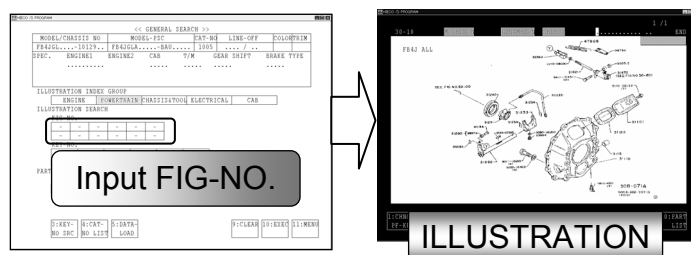

Turn to page 76  
and after

(3) When KEY-NO. is available, PART NUMBER can be searched directly.

Turn to page 77 and after


(4) When PART DESCRIPTION is available, you can search PART NUMBER by entering PART DESCRIPTION.

Turn to page 78 and after

## Identify Part Number


When PART NUMBER is specified, various functions can be used.

- Save PART NUMBER in PC's Disk.
- Record MEMO for the PART NO.
- Connect with D.M.S.
- Display PRICE of PART NUMBER.

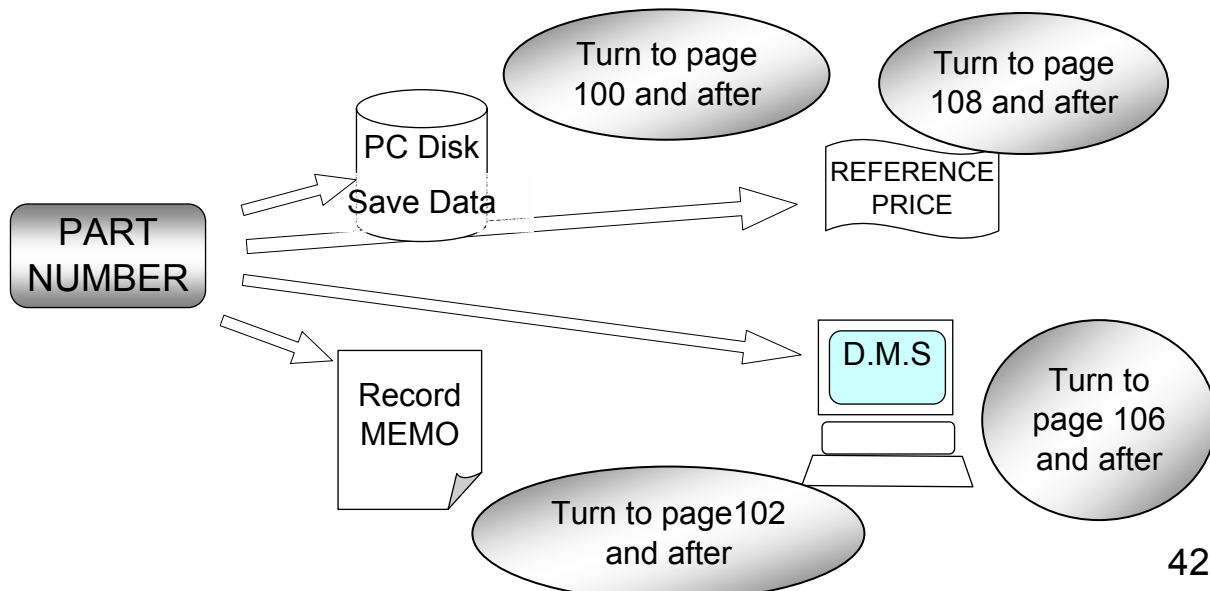


## 1-1-2. Search PART NUMBER by GROUP CODE

You can register in advance GROUP CODE containing KEY-NO's to search PART NUMBERS.

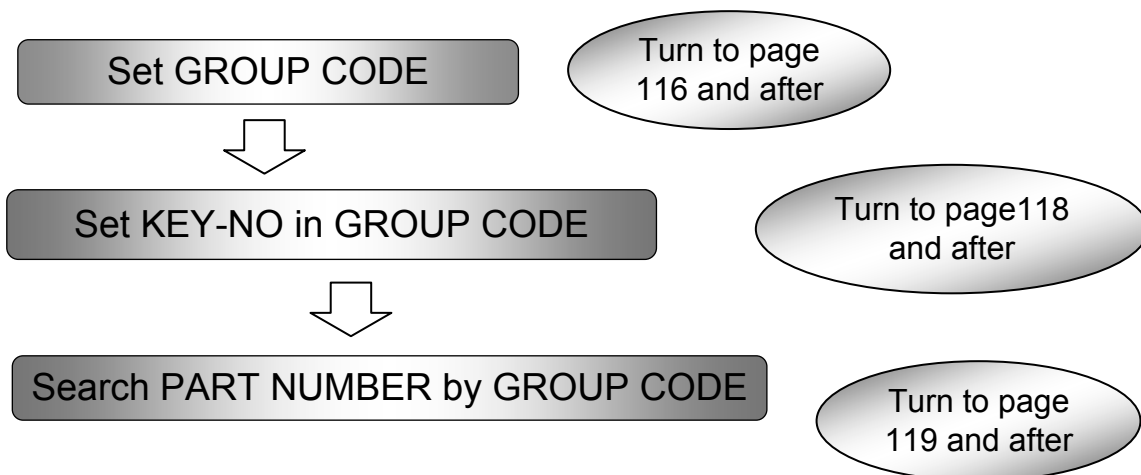


GROUP CODE can be used for all the CAT-NO. and models.

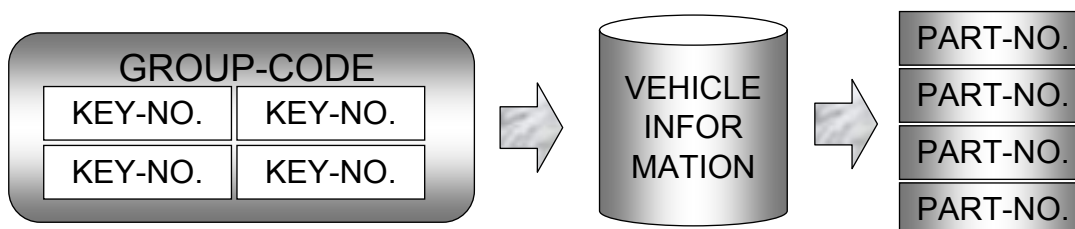

## 1-1-3. Search Applicable Model for Part Number

Applicable model for part number can be searched.

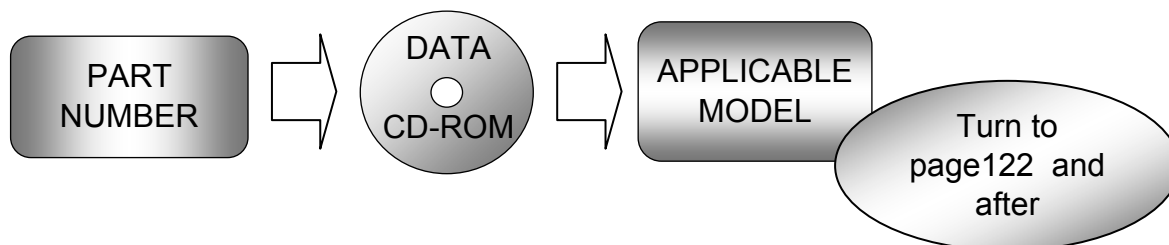

# 2. Hino EPC Screen




Hino EPC screen is explained in this chapter.

<b>2-1. Hino EPC Screen</b>	<b>45</b>
2-1-1 Hino EPC Screen	45
2-1-2 Language	46

## 2-1. Hino EPC Screen

This is an explanation of menu of Hino EPC screen.  
Please familiarize yourself with each area of the menu.

### 2-1-1. Hino EPC Screen

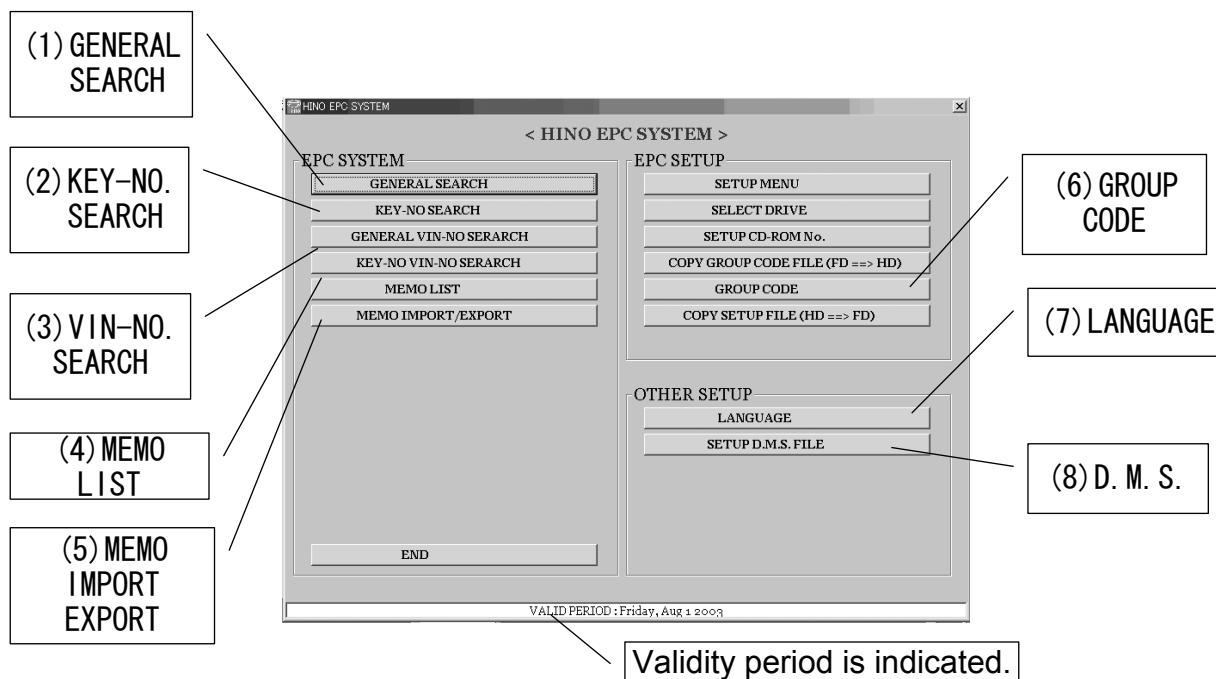

(1) GENERAL SEARCH is for searching part number.

(Refer to 4.General Search)

(2) KEY-NO. SEARCH is for searching part number by KEY-NO.

(Refer to 7.Key-no Search)

(3) VIN-NO. SEARCH is for searching part number by VIN.

(Refer to 3-8.When VIN is available)

(4) MEMO LIST is for recording memo for each part number.

(Refer to 6-5.MEMO FUNCTION)

*Continued*

(5) MEMO IMPORT/EXPORT

(6) SETUP GROUP CODE is for registration of GROUP CODE.

(Refer to 7-4. Search Part Number by Group Code)

(7) LANGUAGE is for selecting language displayed in Hino EPC.


(Refer to 2-1-2. Language)

(8) SETUP D.M.S. FILE is for setting-up D.M.S. connection.


(Refer to 6-6. D.M.S. Connection)

## 2-1-2.Language

Select language displayed in Hino EPC.

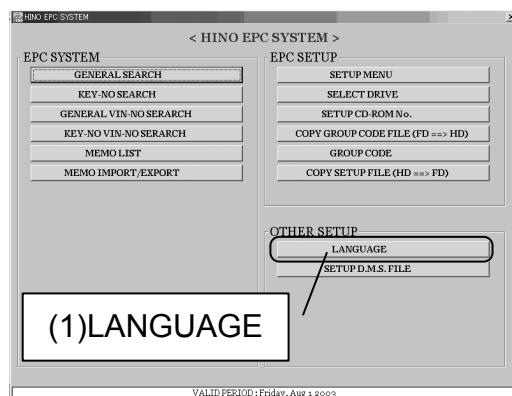


(1) Click on LANGUAGE.

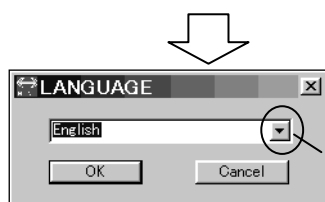


(2) "LANGUAGE" box is displayed.

(3) Click on PULL-DOWN button.

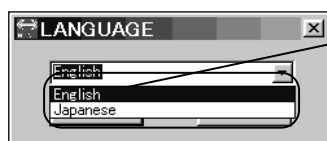

(4) Click on the language you prefer.

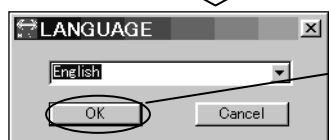

(5) Click on OK button.

(6) LANGUAGE SETUP  
has been completed.





# 3. Vehicle Information



The first step to search part number is to enter vehicle information.  
This chapter explains how to enter vehicle information.

<b>3-1. Outline of Vehicle Information</b>	<b>49</b>
3-1-1. When Model Is Available	50
3-1-2. When Model Is Not Available	51
3-1-3. History Function	52
3-1-4. When VIN Is Available	52
<b>3-2. Explanation of Screen</b>	<b>53</b>
3-2-1. Explanation of Each Column	53
3-2-2. Explanation of PF-key	55
<b>3-3. Enter Model (6-character) and Chassis No.</b>	<b>58</b>
<b>3-4. Enter Model (6-character) and Select Vehicle Spec.</b>	<b>59</b>
<b>3-5. Enter Model (1to5-Character) and Select CAT-NO.</b>	<b>61</b>
<b>3-6. Select CAT-NO. Directly</b>	<b>62</b>
<b>3-7. History Function</b>	<b>63</b>
<b>3-8. When VIN is Available</b>	<b>64</b>

## 3-1.Outline of Vehicle Information

You can search part numbers entering vehicle information found on ID-plate or VIN. Even if the information is not available, you can search applicable model by selecting CAT-NO.

You can select VEHICLE INFORMATION in the following four ways:

1.When full model code and chassis no. are available, you can identify applicable model.


2.When full model or chassis no. are not available, you can select spec. and identify applicable mode.

3.You can identify applicable model using history function.

4. When VIN is available, you can it.


### 3-1-1. When Model Is Available

Check model(6-character) and chassis number.

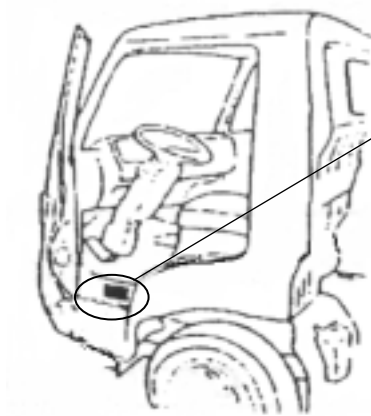

ID-PLATE

ID plate is located on the driver's door side in a typical case.  
(If the plate is missing ,  
search chassis no. on the chassis frame.)

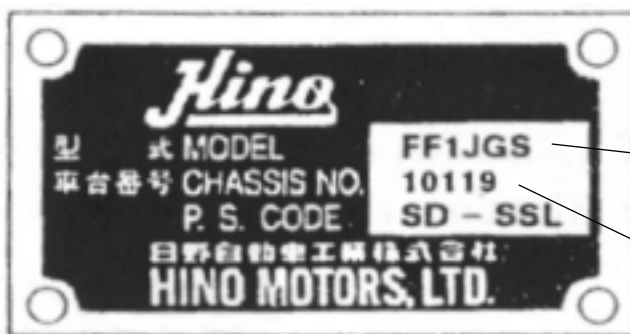

ID-PLATE


MODEL(6-character)

CHASSIS NO.

*Continued*

Hino EPC consists of separate volumes per model series.  
The separate volumes are named CAT-NO in Hino EPC.  
CAT-NO is automatically defined by entering vehicle information.

(1) Enter Model and chassis no.

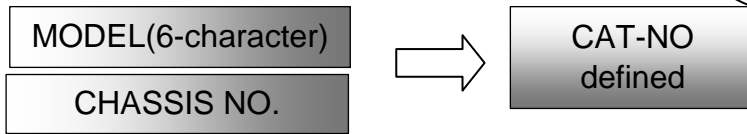

Turn to page 58 and after

(2) Enter Model and select vehicle spec.




Turn to page 59 and after

### 3-1-2.When Model Is Not Available


When model is not available, you can identify CAT-NO by the following two ways.

(3) Enter MODEL(1to5-character) and select CAT-NO.



Turn to page 61 and after

(4) Select CAT-NO. directly.



Turn to page 62  
and after

### 3-1-3.History Function

You can identify CAT-NO using History Function.

(5) Select CAT-NO using past search HISTORY



Turn to page 63  
and after

### 3-1-4.When VIN Is Available

With VIN, CAT-NO is specified.



Turn to page 64  
and after

## 3-2. Explanation of Screen

### 3-2-1.Explanation of Each Column

The screenshot shows the 'HINO EPC SYSTEM PROGRAM' screen. At the top, it says '<< GENERAL SEARCH >>'. Below this is a table with columns: MODEL/CHASSIS NO., MODEL-PSC, CAT-NO., PRODUCTN.DATE, COLOR, and TRIM. Below the table are fields for SPEC., ENGINE1, ENGINE2, CAB, T/M, GEAR SHIFT, and BRAKE TYPE. Further down is an 'ILLUSTRATION INDEX GROUP' section with fields for ENGINE, POWERTRAIN, CHAS, and CAB. Below that are fields for FIG-NO., KEY-NO., and a DESCRIPTION SEARCH section with fields for DESCRIPTION, KEY-NO., and FIG-NO. At the bottom are five buttons: 4:CAT-NO LIST, 5:DATA-LOAD, 7:HISTORY, 9:CLEAR, and 11:MENU. Numbered callouts point to the following fields:

- (1) MODEL: Points to the MODEL/CHASSIS NO. field.
- (2) CHASSIS-NO.: Points to the CHASSIS NO. field.
- (3) MODEL-PSC: Points to the MODEL-PSC field.
- (4) CAT-NO.: Points to the CAT-NO. field.
- (5) PRODUCTN DATE: Points to the PRODUCTN.DATE field.
- (6) COLOR: Points to the COLOR field.
- (7) TRIM: Points to the TRIM field.
- (8) SPEC: Points to the SPEC. field.

#### (1) MODEL

Input column of MODEL (6-character).  
When FULL MODEL is not available, you can enter PARTIAL MODEL (1to5-character).

#### (2) CHASSIS NO.

Input column of CHASSIS NO. .

#### (3) MODEL-PSC

MODEL and PSC (Production Series Code) column. These are displayed when MODEL and CHASSIS NO. are entered.

#### (4) CAT-NO.

Hino EPC consists of separate volumes per model series.  
The separate volumes are named CAT-NO in Hino EPC.  
CAT-NO is automatically defined by entering vehicle information.

*Continued*

**(5) PRODUCTION DATE**

VEHICLE PRODUCTION DATE column (YEAR and MONTH).

**(6) COLOR**

Color code column for exterior parts of cab trimming.  
This is only displayed when model is "Dutro".

**(7) TRIM**


Color code column for interior parts of cab trimming.  
This is only displayed when model is "Dutro".

**(8) SPEC**

When MODEL is specified, SPEC of the MODEL is displayed automatically. When MODEL is not specified, PART NUMBER is searched by selecting CAT-NO.

## 3-2-2.Explanation of PF-Key

This is an explanation of PF-key in screens.  
You can start each PF by clicking on PF column at the bottom of screen or pressing function key on keyboard.

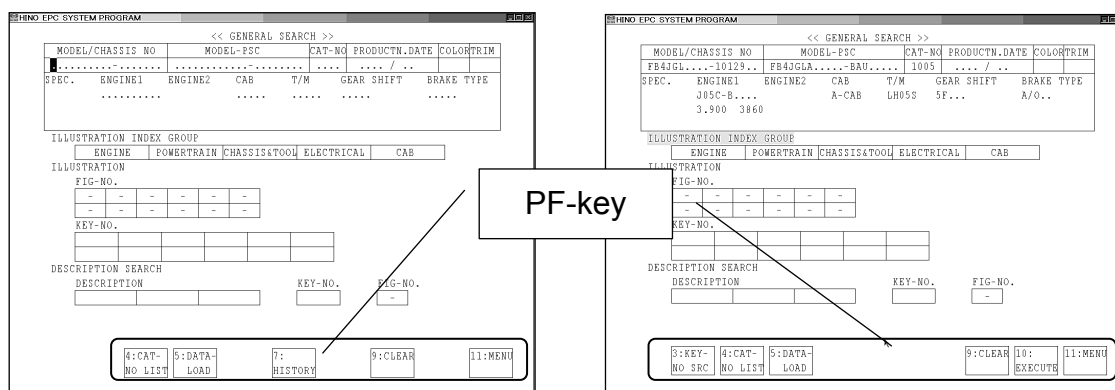


### (1) PF-key in "GENERAL SEARCH" screen

3:KEY- NO SRC	Calls "KEY-NO SEARCH" screen. (Refer to 7.KEY-NO.SEARCH)
4:CAT- NO. LIST	Calls "CATALOG NO LIST" screen. (Refer to 3-6.Select CAT-NO.)
5:DATA -LOAD	Calls "PART NUMBER LIST"screen. (Refer to 6-4-2.Call Saved Data)
7: HISTORY	Calls "HISTORY FUNCTION" screen.
9: CLEAR	Cancels entered data.
10: EXECUTE	Executes search.
11:MENU	Calls "HINO EPC SYSTEM" initial menu screen.

*Continued*



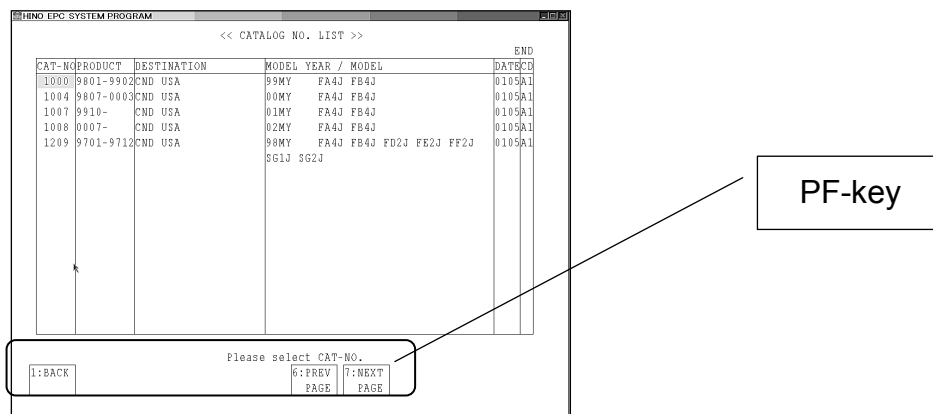


## (2) PF-key in "CATALOG NO.LIST" screen

1: BACK Calls "KEY-NO.SEARCH" screen.

6: PREV PAGE Calls the previous page.

7: NEXT PAGE Calls the next page.

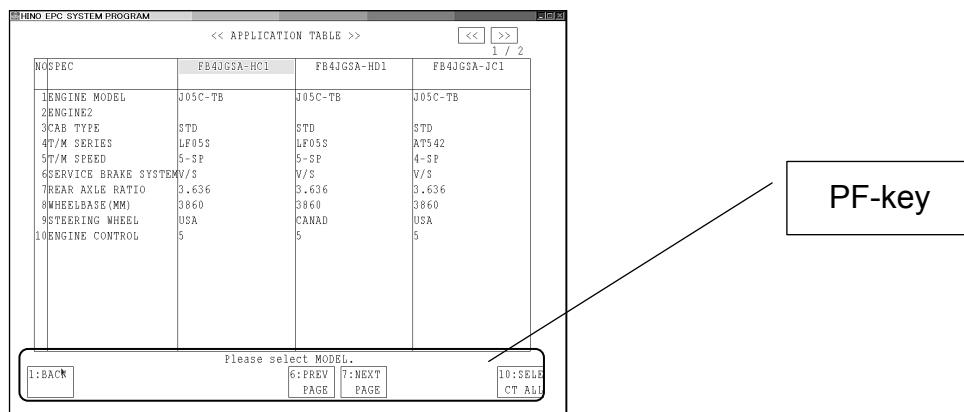


## (3) PF-key in "APPLICATION TABLE" screen

1: BACK Calls "GENERAL SEARCH" screen.

6: PREV PAGE Calls the previous page of "APPLICATION TABLE" screen.

7: NEXT PAGE Calls the next page of "APPLICATION TABLE" screen.

10: SELECT ALL Select all the model displayed on APPLICATION TABLE.  
(Refer to 3-4. Enter Model(6-character) and Select Vehicle Spec.

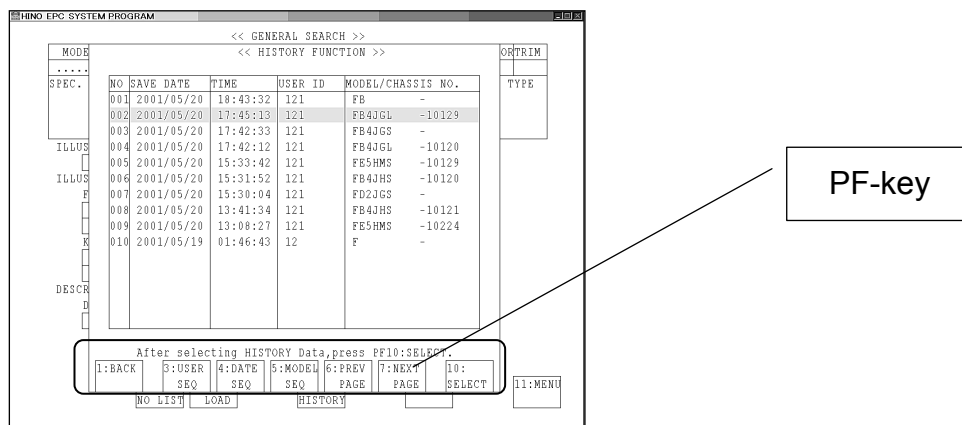

## PF-key in "HISTORY FUNCTION" screen

1: BACK	Calls "GENERAL SEARCH" screen.
3:USER SEQ	Sorts HISTORY data in the order of USER-ID.
4:DATE SEQ	Sorts HISTORY data in the order of DATE.
5:MODEL SEQ	Sorts HISTORY data in the order of MODEL/CHASSIS NO.
6:PREV PAGE	Calls the previous page of "HISTORY FUNCTION" screen.
7:NEXT PAGE	Calls the next page of "HISTORY FUNCTION" screen.
10: SELECT	Fixes selected data.

### 3-3.Enter Model (6-character) and Chassis No.

CAT-NO is identified by entering MODEL(6-character)  
and CHASSIS NO.

(1) Enter MODEL (6-character).  
(Eg. FB4JGS)

(2) Press Enter KEY.

(3) Enter CHASSIS NO.  
(Eg. 10129)

(4) Press Enter KEY.

(5) The columns of MODEL-PSC, CAT-NO.  
and SPEC are displayed.  
(Eg. FB4JGLA-BAU)

(When model is "Dutro", COLOR and  
TRIM columns are also displayed.

(6) The procedure is finished.

## 3-4. Enter Model (6-character) and Select Vehicle Spec.

When only MODEL (6-character) is available, select CAT-NO. from CAT-NO. LIST.

MODEL/CHASSIS NO. MODEL-PSC CAT-NO. PRODUCTN.DATE COLOR/TRIM

FB4JGS FB4JGS FB4JGS / /

ENGINE1 ENGINE2 CAB T/M GEAR SHIFT BRAKE TYPE

ILLUSTRATION INDEX GROUP

ENGINE POWERTRAIN CHASSIS&TOOL ELECTRIC

ILLUSTRATION

FIG-NO.

KEY-NO.

DESCRIPTION SEARCH

DESCRIPTION KEY-NO. FIG-NO.

4:CAT-NO LIST 5:DATA-LOAD 7:HISTORY 9:CLEAR 11:MENU

(1) Enter VEHICLE MODEL (6-character).  
(Eg. FB4JGS)

(2) Press Enter KEY four times to move the cursor to CAT-NO. column.



CAT-NO PRODUCT DESTINATION MODEL YEAR / MODEL END

1000	801-9902	CND USA	99MY FA4J FB4J	0105A1
1004	807-0003	CND USA	00MY FA4J FB4J	0105A1
1007	990-	CND USA	01MY FA4J FB4J	0105A1
1008	007-	CND USA	02MY FA4J FB4J	0105A1
1209	701-712	CND USA	98MY FA4J FB4J FD2J FE2J FF2J	0105A1
			SG1J SG2J	

Please select CAT-NO.

1:BACK 6:PREV PAGE 7:NEXT PAGE

(3) "CATALOG NO. LIST" screen is displayed.

(4) Click on CAT-NO. you want to see while checking PRODUCT (production date), DESTINATION and MODEL YEAR / MODEL.

(The above steps (3) and (4) may be skipped when the model has only one CAT-NO.



NO SPEC FB4JGSA-HC1 FB4JGSA-HD1 FB4JGSA-JC1

1	ENGINE MODEL	005C-TB	005C-TB	005C-TB
2	ENGINE2			
3	CAB TYPE	STD	STD	
4	T/M SERIES	LF05S	LF05S	
5	T/M SPEED	5-SP	5-SP	
6	SERVICE BRAKE SYSTEM	V/S	V/S	
7	REAR AXLE RATIO	3.636	3.636	3.636
8	WHEELBASE (MM)	3860	3860	3860
9	STEERING WHEEL	USA	CANAD	USA
10	ENGINE CONTROL	5	5	5

Please select MODEL.

1:BACK 6:PREV PAGE 7:NEXT PAGE 10:SEL CT ALL

(5) "APPLICATION TABLE" screen is displayed.

(6) Click on MODEL you want to see while verifying SPEC.  
The specs different from those of other models are highlighted in blue.

You can select all the models, pressing PF10 SELECT ALL.



*Continued*

↓

(8) PRODUCTION DATE

< GENERAL SEARCH >>									
FB4JGS.....	FB4JGS.....	DEL-PSC	CAT-NO	PRODUCTN.DATE	COLORTRIM				
J05C-TD...	J05C-TD...	STD..	LF053	5-SP.	V/S..				
3.636	3860	USA	5						

(9) SPEC

ILLUSTRATION INDEX GROUP

ENGINE	POWERTRAIN	CHASSIS&TOOL	ELECTRICAL	CAB
--------	------------	--------------	------------	-----

ILLUSTRATION

FIG-NO.

-	-	-	-	-
---	---	---	---	---

KEY-NO.

--	--	--	--	--

DESCRIPTION SEARCH

DESCRIPTION

	KEY-NO.	FIG-NO.
		-

4:CAT-  
NO LIST

5:DATA-  
LOAD

7:  
HISTORY

9:CLEAR

11:MENU

(7) "GENERAL SEARCH" screen appears and MODEL-PSC, CAT-NO. and SPEC are displayed.

(8) Enter vehicle product year and month in PRODUCTION DATE column. (Optional)

When the PRODUCTION DATE is entered, the system searches all the VEHICLES produced during the period of one year before and after the PRODUCTION DATE selected.

(9) The procedure is finished.

### 3-5. Enter Model (1to5-character) and Select CAT-NO.

When MODEL(1to5-character) is available, you can enter VEHICLE INFORMATION and select CATALOG NO.

SCREEN: EPC SYSTEM PROGRAM

<< GENERAL SEARCH >>

MODEL/CHASSIS NO.	MODEL-PSC	CAT-NO	PRODUCTN.DATE	COLOR/TRIM
FB.....	.....	.....	.....	.....
SPEC.	ENGINE1	ENGINE2	CAB	T/M
.....	.....	.....	.....	.....
.....	.....	.....	.....	.....

ILLUSTRATION INDEX GROUP

ENGINE	POWERTRAIN	CHASSIS&TOOL	ELECTRICAL	CAB
.....	.....	.....	.....	.....

ILLUSTRATION

FIG-NO.

-	-	-	-	-
-	-	-	-	-

KEY-NO.

-	-	-	-	-
-	-	-	-	-

DESCRIPTION SEARCH

DESCRIPTION

-	-	-	-	-
-	-	-	-	-

KEY-NO.

-	-	-	-	-
-	-	-	-	-

FIG-NO.

-	-	-	-	-
-	-	-	-	-

4:CAT-NO LIST 5:DATA-LOAD 7:HISTORY 9:CLEAR 11:MENU

(1) Enter MODEL (1to5character)  
(Eg. "F", "FD", "FD1J", "XZU" etc.)

(2) Press Enter key.



SCREEN: EPC SYSTEM PROGRAM

<< CATALOG NO. LIST >>

CAT-NO	PRODUCT	DESTINATION	MODEL YEAR / MODEL	DATE
1000	9801-9902	CND USA	99MY FA4J FB4J	0105A1
1004	9807-0003	CND USA	00MY FA4J FB4J	0105A1
1005	9901-	AUS	FB4J	0105A1
1007	9901-	CND USA	01MY FA4J FB4J	0105A1
1008	0007-	CND USA	02MY FA4J FB4J	0105A1
1010	9101-9902	CND USA	92-97MY FA15 FB15	0105A1
1209	9701-9711	CND	984J FD2J FE2J FF2J	0105A1

Please select CAT-NO.

1:BACK 6:PREV PAGE 7:NEXT PAGE

(3) "CATALOG NO. LIST" screen is displayed.

(4) Click CAT-NO. you want to see, while checking PRODUCT (Production Date), DESTINATION and MODEL YEAR/MODEL.

SCREEN: EPC SYSTEM PROGRAM

<< GENERAL SEARCH >>

MODEL/CHASSIS NO.	MODEL-PSC	CAT-NO	PRODUCTN.DATE	COLOR/TRIM
FB.....	.....	1000	.....	.....
SPEC.	ENGINE1	ENGINE2	CAB	T/M
.....	.....	.....	.....	.....
.....	.....	.....	.....	.....

ILLUSTRATION INDEX GROUP

ENGINE	POWERTRAIN	CHASSIS&TOOL	ELECTRICAL	CAB
.....	.....	.....	.....	.....

ILLUSTRATION

FIG-NO.

-	-	-	-	-
-	-	-	-	-

KEY-NO.

-	-	-	-	-
-	-	-	-	-

DESCRIPTION SEARCH

DESCRIPTION

-	-	-	-	-
-	-	-	-	-

KEY-NO.

-	-	-	-	-
-	-	-	-	-

FIG-NO.

-	-	-	-	-
-	-	-	-	-

4:CAT-NO LIST 5:DATA-LOAD 7:HISTORY 9:CLEAR 11:MENU

(5) "GENERAL SEARCH" screen is displayed.

(6) Enter vehicle product year and month in PRODUCTION DATE column. (Optional)

When the PRODUCTION DATE is entered, the system searches all the VEHICLES produced during the period of one year before and after the PRODUCTION DATE selected.

(7) Enter SPEC of VEHICLE MODEL. (Optional)

(8) The procedure is finished.

## 3-6. Select CAT-NO. Directly

When VEHICLE INFORMATION is not available,  
you can proceed directly to CAT-NO.

HINO EPC SYSTEM PROGRAM

<< GENERAL SEARCH >>

MODEL/CHASSIS NO	MODEL-PSC	CAT-NO	PRODUCTN.DATE	COLOR/TRIM
SPEC.	ENGINE1	ENGINE2	CAB	T/M
			GEAR SHIFT	BRAKE TYPE

ILLUSTRATION INDEX GROUP

ENGINE POWERTRAIN CHASSIS&TOOL ELECTRICAL CAB

ILLUSTRATION

FIG-NO.

KEY-NO.

DESCRIPTION SEARCH

DESCRIPTION KEY-NO. FIG-NO.

4:CAT-NO LIST 5:DATA-LOAD 7:HISTORY 9:CLEAR 11:MENU

(1) Click on PF4:CAT-NO.LIST.

HINO EPC SYSTEM PROGRAM

<< CATALOG NO. LIST >>

CAT-NO	PRODUCT	DESTINATION	MODEL YEAR / MODEL	DATECD	NEXT
1000	9801-9902	CND USA	99MY FA4J FB4J	0105A1	
1004	9807-0003	CND USA	00MY FA4J FB4J	0105A1	
1005	9811	AUS	FB4J	0105A1	
1007	9910	CND USA	01MY FA4J FB4J	0105A1	
1008	0007	CND USA		0105A1	
1010	9101-9612	CND USA		0105A1	
1101	9805	AUS		0105A1	
1102	9512	AUS		0105A1	
1150	9910-0112	AUS		0105A1	
1160	9910-0112	AUS	XZU40 XZU41 XZU42 XZU43	0105A1	
1200	9801-9902	CND USA	99MY FD2J FE2J	0105A1	
1201	9806	AUS	FD1J FD2J FF1J GD1J	0105A1	
1203	9807-0003	CND USA	00MY FD2J FE2J FF2J	0105A1	
1206	9911	CND USA	01MY FD2J FE2J FF2J	0105A1	
1208	9205-9612	CND USA	93-97MY FD5H	0105A1	
1209	9701-9712	CND USA	98MY FA4J FB4J FD2J FE2J FF2J	0105A1	
			SG1J SG2J		

Please select CAT-NO.

1:BACK 6:PREV PAGE 7:NEXT PAGE

(2) "CAT-NO. LIST" screen is displayed.

(3) Click on CAT-NO. you want to see while checking PRODUCTION DATE, DESTINATION and MODEL YEAR / MODEL.

HINO EPC SYSTEM PROGRAM

<< GENERAL SEARCH >>

MODEL/CHASSIS NO	MODEL-PSC	CAT-NO	PRODUCTN.DATE	COLOR/TRIM
FB.....	FB.....	1000	/ .. / ..	
SPEC.	ENGINE1	ENGINE2	CAB	T/M
			GEAR SHIFT	BRAKE TYPE

ILLUSTRATION INDEX GROUP

ENGINE POWERTRAIN CHASSIS&TOOL ELECTRICAL CAB

DESCRIPTION SEARCH

DESCRIPTION KEY-NO. FIG-NO.

7:HISTORY 9:CLEAR 11:MENU

(4) "GENERAL SEARCH" screen is displayed.

(5) Enter vehicle product year and month in PRODUCTION DATE column. (Optional)

When the PRODUCTION DATE is entered, the system searches all the VEHICLES produced during the period of one year before and after the PRODUCTION DATE selected.

(6) Enter SPEC of VEHICLE MODEL. (Optional)

(7) The procedure is finished.

## 3-7. HISTORY FUNCTION

You can select vehicle information using History Function.

RHINO EPC SYSTEM PROGRAM

<< GENERAL SEARCH >>

MODEL/CHASSIS NO	MODEL-PSC	CAT-NO	PRODUCTN.DATE	COLORTRIM
.....	.....	.....	..... / ..	.....

SPEC. ENGINE1 ENGINE2 CAB T/M GEAR SHIFT BRAKE TYPE

.....

ILLUSTRATION INDEX GROUP

ENGINE POWERTRAIN CHASSIS&TOOL ELECTRICAL CAB

ILLUSTRATION

FIG-NO.

-	-	-	-	-
-	-	-	-	-

KEY-NO.

--	--	--	--	--

(1)PF7:HISTORY

KEY-NO. FIG-NO.

4:CAT-NO LIST 5:DATA-LOAD 7:HISTORY 9:CLEAR 11:MENU

(1) Click PF7:HISTORY

RHINO EPC SYSTEM PROGRAM

<< GENERAL SEARCH >>

<< HISTORY FUNCTION >>

MODE	NO	SAVE DATE	TIME	USER ID	MODEL/CHASSIS NO.	ORTRIM	TYPE
.....	001	2001/05/20	18:43:32	121	FB	-	
.....	002	2001/05/20	17:45:13	121	FB4JGL -10129		
.....	003	2001/05/20	17:42:33	121	FB4JGS -		
.....	004	2001/05/20	17:42:12	121	FB4JGL -10120		
.....	005	2001/05/20	15:33:42	121	FE5HMS -10129		
.....	006	2001/05/20	19:31:52				
.....	007	2001/05/20	15:30:04				
.....	008	2001/05/20	13:41:34				
.....	009	2001/05/20	13:08:27				
.....	010	2001/05/19	01:46:43	12	F	-	

ILLUS

.....

After selecting HISTORY Data, press PF10:SELECT.

1:BACK 3:USER SEQ 4:DATE SEQ 5:MODEL SEQ 6:PREV PAGE 7:NEXT PAGE 10:SELECT 11:MENU

(3)HISTORY DATA

(4)PF10: SELECT

(2) "HISTORY FUNCTION" screen is displayed.

You can sort History data in the order of USER-ID, DATE or CHASSIS NO., by clicking PF3: USER SEQ, PF4: DATE SEQ, or PF5: MODEL SEQ respectively.

(3) Click on the record you want to see.

(4) Click PF10:SELECT.

**SORTING**

RHINO EPC SYSTEM PROGRAM

<< GENERAL SEARCH >>

MODEL/CHASSIS NO	MODEL-PSC	CAT-NO	PRODUCTN.DATE	COLORTRIM
FB4JGL....-10129..	FB4JGLA....-BAU....	1005	.... / ..	

SPEC. ENGINE1 ENGINE2 CAB T/M GEAR SHIFT BRAKE TYPE

J05C-B.... A-CAB LH05S 5F... A/O..

3.900 3860

ILLUSTRATION INDEX GROUP

ENGINE POWERTRAIN CHASSIS&TOOL ELECTRICAL CAB

ILLUSTRATION

FIG-NO.

-	-	-	-	-
-	-	-	-	-

KEY-NO.

--	--	--	--	--

DESCRIPTION SEARCH

DESCRIPTION KEY-NO. FIG-NO.

3:KEY-NO SRC 4:CAT-NO LIST 5:DATA-LOAD 9:CLEAR 10:EXECUTE 11:MENU


(5) "GENERAL SEARCH" screen is displayed.

(6) The procedure is finished.




## 3-8. When VIN Is Available


Model and PSC are identified by VIN-NO.

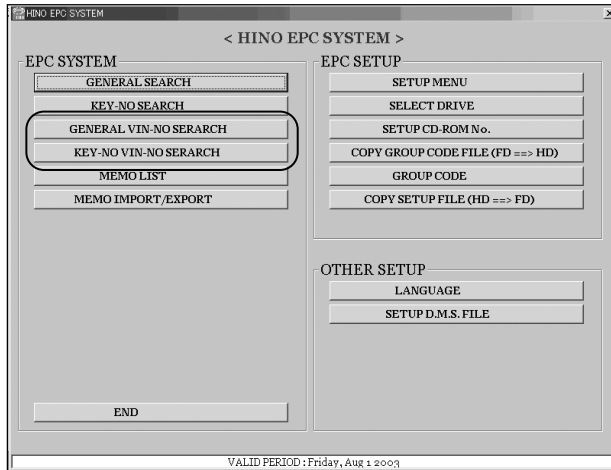

(1) Select VIN-NO SEARCH on HINO EPC SYSTEM screen.

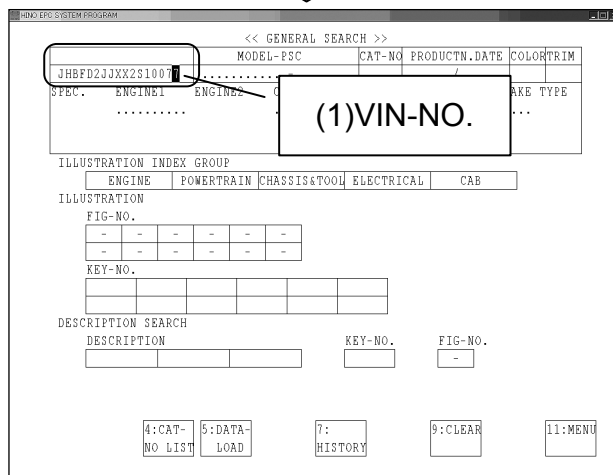

(2) Enter VIN-NO.

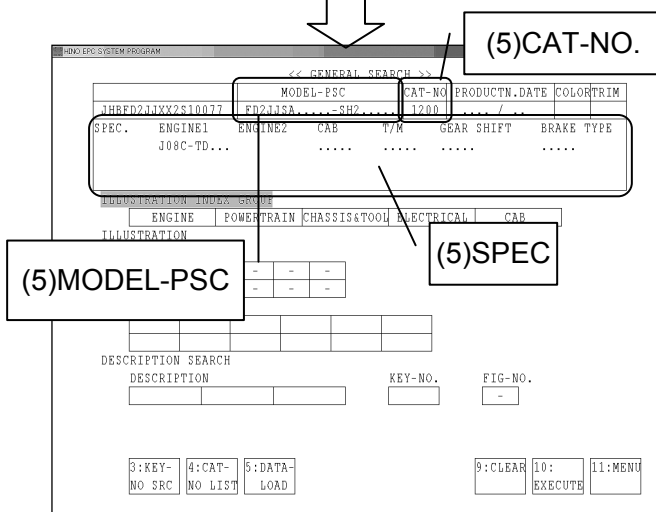

(3) MODEL-PSC, CAT-NO. and SPEC are displayed.  
(Eg. FB4JGLA-BAU)

(When the model is a "Dutro",  
COLOR and TRIM columns are also displayed.)

(4) The procedure is finished.



# 4. General Search




GENERAL SEARCH is a menu to search for KEY-NO..

<b>4-1. Outline of General Search</b>	<b>67</b>
4-1-1.Outline of General Search	67
4-1-2.Search KEY-NO. Using Illustration Index	68
4-1-3.Search KEY-NO by FIG-NO	68
4-1-4. Enter KEY-NO	68
4-1-5.Search KEY-NO by Part Description	68
<b>4-2. Display GENERAL SEARCH Screen</b>	<b>69</b>
<b>4-3. Explanation of Screen</b>	<b>70</b>
4-3-1.Explanation of Each Column	70
4-3-2.Explanation of PF-key	71
<b>4-4. Search KEY-NO. Using Illustration Index</b>	<b>73</b>
4-4-1.Illustration Index (Details)	73
4-4-2.Illustration Index (Component)	74
<b>4-5. Search KEY-No. by FIG-NO.</b>	<b>76</b>
<b>4-6. Input KEY-NO.</b>	<b>77</b>
<b>4-7. Search KEY-NO. BY Part Description</b>	<b>78</b>

## 4-1.Outline of General Search

GENERAL SEARCH is a menu to search for PART NUMBER by entering VEHICLE INFORMATION, and selecting KEY-NO.

Searching method for KEY-NO. is explained in this chapter.

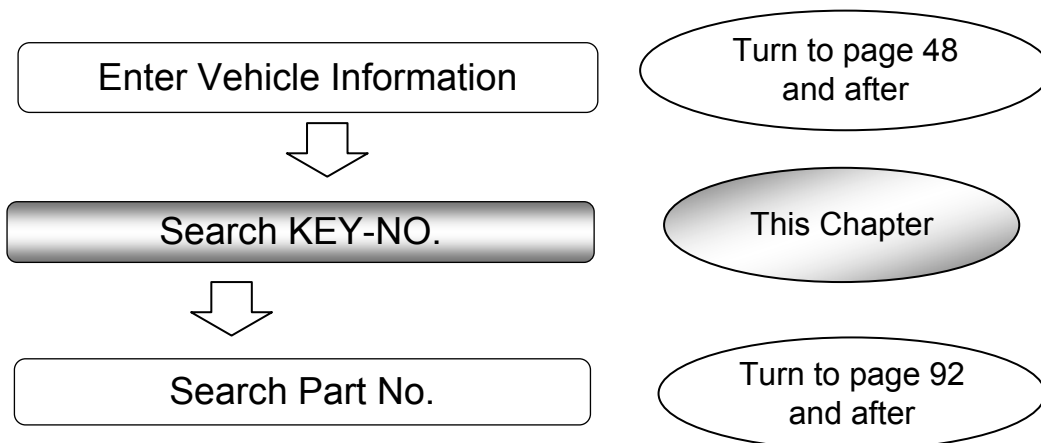

### 4-1-1..Outline of General Search

There are four ways to search KEY-NO.

The way to search KEY-NO. referencing ILLUSTRATION.

1. Search KEY-NO. using ILLUSTRATION INDEX GROUP

2. Search KEY-NO by FIG-NO.

When KEY-NO. you want to search is available:

3. Enter KEY-NO.


Another way to search KEY-NO.

4. Search KEY-NO. by PART DESCRIPTION.

## 4-1-2.Search KEY-NO. Using ILLUSTRATION INDEX GROUP

A vehicle consists of such UNIT as ENGINE, POWERTRAIN, CAB and CHASSIS, and each UNIT consists of some COMPONENTS. HINO EPC provides ILLUSTRATION INDEX per such UNIT, and you can display ILLUSTRATION of COMPONENT selecting FIG-NO. ILLUSTRATION of COMPONENT shows KEY-NO. assigned to each part.


Turn to page 73 and after

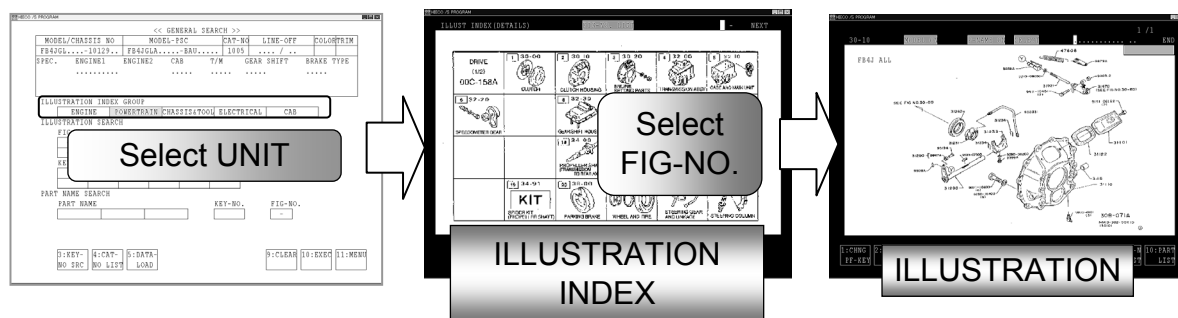

## 4-1-3.Search KEY-NO. by FIG-NO.

When FIG-NO. is available, you can proceed directly to ILLUSTRATION by entering it.

Turn to page 76 and after

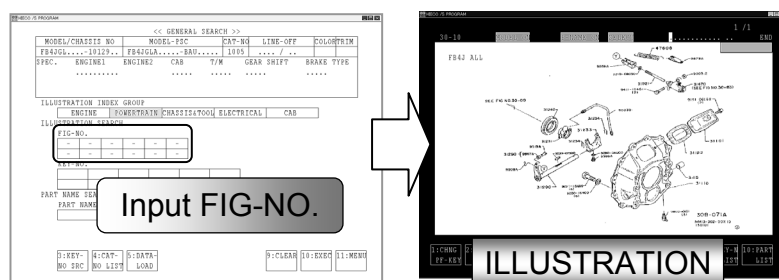

## 4-1-4.Enter KEY-NO.

When KEY-NO. is available, PART NUMBER can be searched directly.


Turn to page 77 and after

## 4-1-5.Search KEY-NO. by PART DESCRIPTION

PART DESCRIPTION is available, you can search PART NUMBER by entering PART DESCRIPTION.


Turn to page 78 and after

## 4-2. Display GENERAL SEARCH Screen

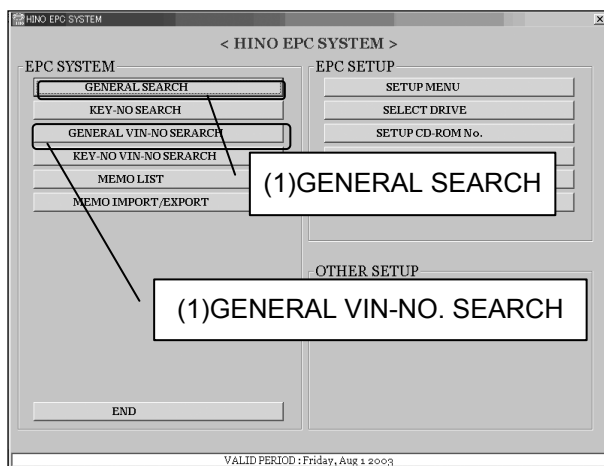

(1) Click on GENERAL SEARCH on "HINO EPC SYSTEM" screen.

When VIN is available, click on GENERAL VIN-NO SEARCH.

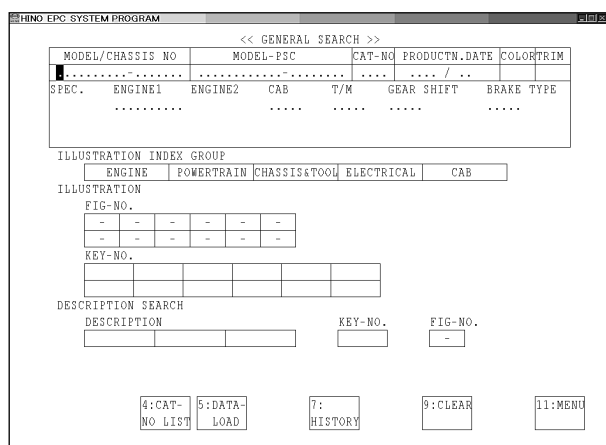

(2) "GENERAL SEARCH" screen is displayed.

## 4-3. Explanation of Screen

### 4-3-1.Explanation of Each Column

The screenshot shows the HINO EPC SYSTEM PROGRAM interface. At the top, there's a title bar 'HINO EPC SYSTEM PROGRAM' and a menu bar '<< GENERAL SEARCH >>'. Below this is a table for vehicle information with columns: MODEL/CHASSIS NO, MODEL-PSC, CAT-NO, SPEC., ENGINE1, ENGINE2, CAB, T/M, GEAR SHIFT, and BRAKE TYPE. Below the table is the 'ILLUSTRATION INDEX GROUP' with a row of buttons: ENGINE, POWERTRAIN, CHASSIS&TOOL, ELECTRICAL, and CAB. Underneath is the 'ILLUSTRATION' section with input fields for FIG-NO. and KEY-NO. Below that is the 'DESCRIPTION SEARCH' section with a 'DESCRIPTION' input field and buttons for '4:CAT-NO LIST', '5:DATA-LOAD', and '11:MENU'. Callouts point to these sections: (1)VEHICLE INFORMATION points to the table; (2)ILLUSTRATION INDEX GROUP points to the row of buttons; (3)FIG-NO. points to the FIG-NO. input field; (4)KEY-NO. points to the KEY-NO. input field; and (5)PART DESCRIPTION points to the DESCRIPTION input field.

#### (1) VEHICLE INFORMATION

Input column of VEHICLE INFORMATION.  
(Refer to 3.VEHICLE INFORMATION)

#### (2) ILLUSTRATION INDEX GROUP

Select column of ILLUSTRATION INDEX you want to see.

(Refer to 4-4.SEARCH KEY-NO. BY ILLUSTRATION INDEX)

#### (3) FIG-NO.

Input column of FIG-NO.

When FIG-NO. is entered, you can display only ILLUSTRATION of FIG-NO. entered.

(Refer to 4-5.SEARCH KEY-NO. BY FIG-NO.)

#### (4) KEY-NO.

When KEY-NO. is entered, you can search for PART NUMBER

(Refer to 4-6.INPUT KEY-NO.)

#### (5) PART DESCRIPTION

You can search for PART NUMBER using PART DESCRIPTION.

(Refer to 4-7.SEARCH KEY-NO. BY PART DESCRIPTION)

## 4-3-2.Explanation of PF-KEY

This is an explanation of PF-KEY in screens.

You can start each PF by clicking on PF column at the bottom of screen or pressing function key on keyboard.

(1) PF-KEY in "GENERAL SEARCH" screen.

(Refer to 3-2-2.EXPLANATION OF PF-KEYS)

PF-KEY

(2) PF-key in "ILLUSTRATION INDEX (DETAILS)"screen

PF-KEY

4:GNRL  
SEARCH

Calls "GENERAL SEARCH" screen.

5:DISP  
COMPNT

Calls "ILLUSTRATION INDEX(COMPONENT)" screen.  
(Refer to 4-4-2.ILLUSTRATION INDEX(COMPONENT))

6:PREV  
PAGE

Calls the previous page of "ILLUSTRATION INDEX(DETAILS)".

7:NEXT  
PAGE

Calls the next page of "ILLUSTRATION INDEX(DETAILS)"

8:ILLUS  
TRATION

Calls "ILLUSTRATION"screen selected.



THINO EPC SYSTEM PROGRAM

<< DESCRIPTION SEARCH >>      END

CLUTCH	COVER	KEY-NO.	KEY-NO.	FIG NO.	KEY-NO.	QTY
DESCRIPTION						
COVER ASSY,CLUTCH		31210		30-00		
COVER SUB ASSY,CLUTCH		31201		30-00		
COVER SUB ASSY,CLUTCH HOUSING,N01		31101		30-10		

PLEASE SELECT KEY-NO..

3:KEY-N O. SRC	4:GNRL SEARCH	6:PREV PAGE	7:NEXT PAGE	8:ILLUS TRATION	10:PART LIST
-------------------	------------------	----------------	----------------	--------------------	-----------------

(3) PF-key in "DESCRIPTION SEARCH" screen

PF-KEY

<b>3:KEY-N O. SRC</b>	Calls"KEY-NO.SEARCH"screen. (Refer bto 7:KEY-NO.SEARCH)
---------------------------	--

<b>4:GNRL SEARCH</b>	Calls"GENERAL SEARCH"screen
--------------------------	-----------------------------

<b>6:PREV PAGE</b>	Calls the previous page of "DESCRIPTION SEARCH"screen.
------------------------	--

<b>7:NEXT PAGE</b>	Calls the next page of "DESCRIPTION SEARCH"screen.
------------------------	--

<b>8:ILLUS TRATION</b>	Calls"ILLUSTRATION"screen.
----------------------------	----------------------------

<b>10:PART LIST</b>	Displays PART NUMBER LIST. (Refer to 6:PART NO. LIST)
-------------------------	--

## 4-4.Search KEY-NO. Using Illustration Index

You can search KEY-NO. using illustration index.

### 4-4-1.Illustration Index (Details)

This is a way to display illustration by selecting FIG-NO. from illustration index (details).

(1) Enter VEHICLE INFORMATION.  
(Refer to 3, VEHICLE INFORMATION)

(2) Move cursor to ILLUSTRATION INDEX GROUP column.

(3) Click on UNIT you want to see.

(4) The column selected is highlighted in blue.  
(To cancel the selection, click again.)

(5) Click on PF10:EXECUTE.


(6) "ILLUSTRATION INDEX (DETAILS)" screen is displayed.

(7) Click on FIG-NO. you want to see.  
(You can select multiple FIG-NO. at one time.)

(8) The FIG-NO. selected is highlighted in blue.

(9) Press PF8:ILLUSTRATION.


*Continued*

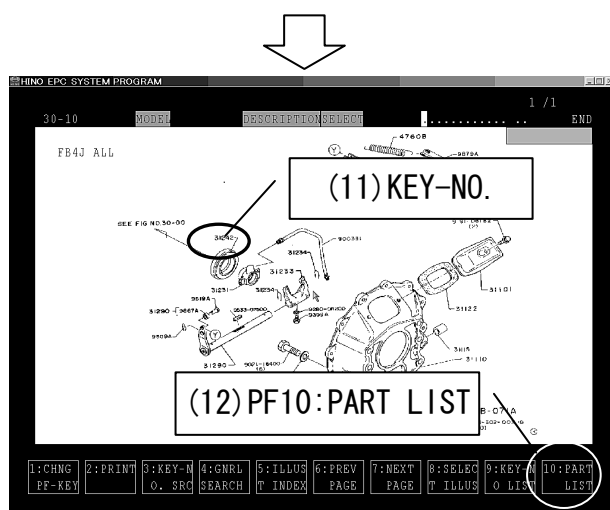

(10) "ILLUSTRATION" screen selected is displayed.  
(Refer to 5.ILLUSTRATION)

(11) Click KEY-NO.  
you want to see.


(12) Press PF10:PART LIST.

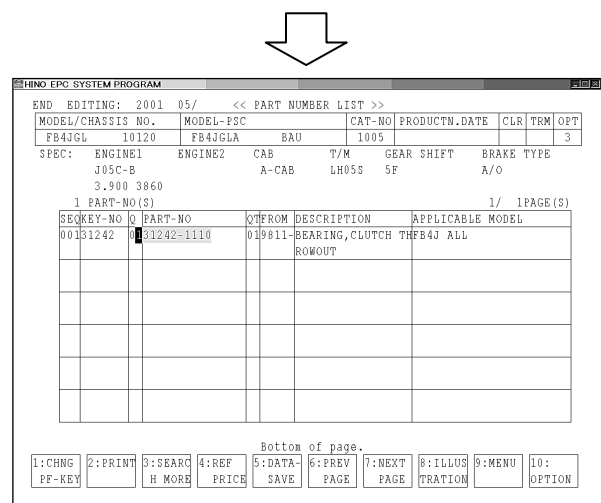

(13) "PART NUMBER LIST" screen is displayed.  
(Refer to 6.PART NUMBER LIST)


## 4-4-2.Illustration Index (Component)

You can display ILLUSTRATION selecting FIG-NO. in ILLUSTRATION INDEX.

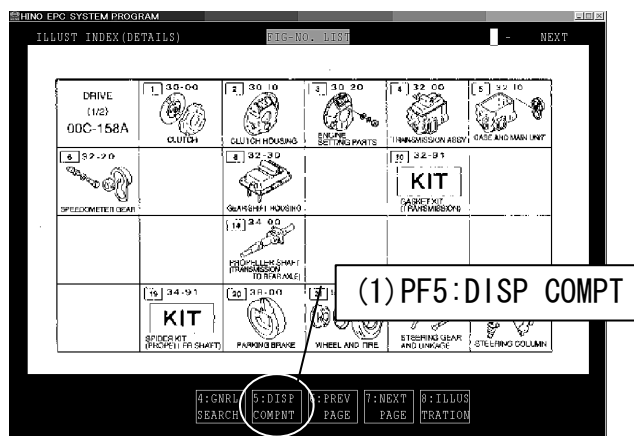

(1) Click on PF5:DISP COMPT  
on "ILLUSTRATION INDEX  
(DETAILS)" screen.


Continued

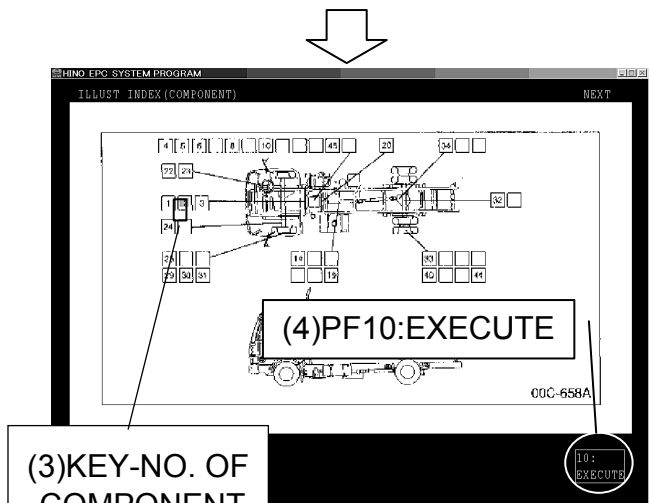

(2) "ILLUSTRATION INDEX (COMPONENT)" screen is displayed.

(3) Click on KEY-NO of COMPONENT.

(4) Click on PF10:EXECUTE.

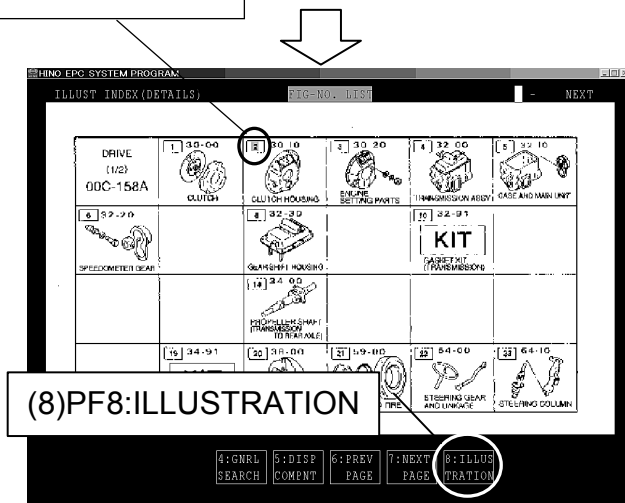


(5) Screen returns to "ILLUSTRATION INDEX(DETAILS)"

(6) The KEY-NO. selected is highlighted in blue.

(7) When the COMPONENT of KEY-NO. highlighted is OK, click on FIG-NO of the COMPONENT.

(8) Click on PF8:ILLUSTRATION.

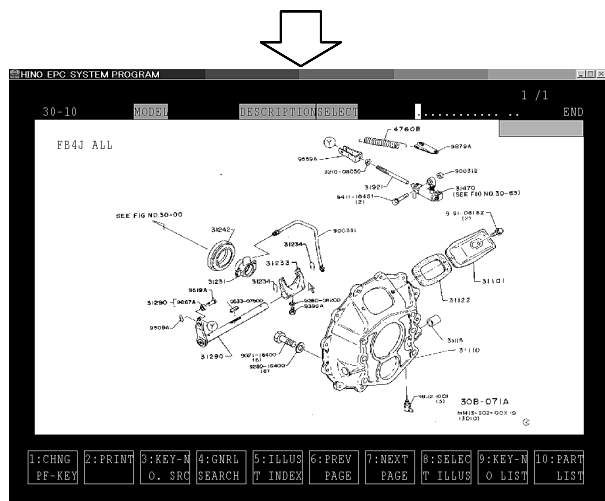

## 4-5. Search KEY-NO. by FIG-NO.

When FIG-NO. of the part you want to see is available,  
you can search KEY-NO. by entering FIG-NO.

HINO EPC SYSTEM PROGRAM

<< GENERAL SEARCH >>

MODEL/CHASSIS NO.	MODEL-PSC	CAT-NO	PRODUCTN.DATE	COLORTRIM
FB4JGL...-10120..	FB4JGLA...-BAU....	1005	.... / ..	

SPEC. ENGINE1 ENGINE2 CAB T/M GEAR SHIFT BRAKE TYPE

J05C-B... A-CAB LH05S 5F A/O

3.900 3860

(1)VEHICLE INFORMATION

ILLUSTRATION INDEX GROUP

ENGINE	POWERTRAIN	CHASSIS&T
--------	------------	-----------

ILLUSTRATION

FIG-NO.					
30-10	-	-	-	-	-

KEY-NO.

--	--	--	--	--	--

DESCRIPTION SEARCH

DESCRIPTION

KEY-NO.

(2)(3)FIG-NO.

(4)PF10:EXECUTE

NO SRC NO LIST LOAD

9:CE&AF 10:EXECUTE 11:MENU



HINO EPC SYSTEM PROGRAM

30-10 MODEL DESCRIPTION SELECT 1 / 1 END

FB4J ALL

SEE FIG NO 30-00

(6)KEY-NO.

(7)PF10:PART LIST

1:CHNG 2:PRINT 3:KEY-M 4:GNRL 5:ILLUS 6:PREV 7:NEXT 8:SELEC 9:KEY-N 10:PART  
PF-KEY O. SRC SEARCH T INDEX PAGE PAGE T ILLUS O LIST LIST



HINO EPC SYSTEM PROGRAM

END EDITING: 2001 05/ << PART NUMBER LIST >>

MODEL/CHASSIS NO.	MODEL-PSC	CAT-NO	PRODUCTN.DATE	CLR	TRM	OPT
FB4JGL 10120	FB4JGLA	BAU	1005			3

SPEC: ENGINE1 ENGINE2 CAB T/M GEAR SHIFT BRAKE TYPE

J05C-B A-CAB LH05S 5F A/O

3.900 3860

1 PART-NO(S) 1/ 1PAGE(S)

SEQ	KEY-NO	PART-NO	QTY	FROM	DESCRIPTION	APPLICABLE MODEL
001	31242	0131242-1110		019811	BEARING,CLUTCH TH	FB4J ALL
					ROWOUT	

Bottom of page.

1:CHNG 2:PRINT 3:SEARC 4:REF 5:DATA- 6:PREV 7:NEXT 8:ILLUS 9:MENU 10:  
PF-KEY H MORE PRICE SAVE PAGE PAGE TRATION OPTION

(1) Enter VEHICLE INFORMATION.

(Refer to 3.VEHICLE INFORMATION)

(2) Move cursor to FIG-NO. column by pressing down arrow key and pressing ENTER key.

(3) Enter FIG-NO. you want to see.

(4) Click on PF10:EXECUTE.

(5) "ILLUSTRATION"screen is displayed.  
(Refer to 5.ILLUSTRATION)

(6) Click on KEY-NO. you want to search.

(7) Click on PF10:PART LIST.

(8) "PART NUMBER LIST"screen is displayed.  
(Refer to 6:PART NUMBER LIST)

## 4-6.Input KEY-NO.

When KEY-NO. of PART you want to see is available,  
you can search PART-NO. by entering KEY-NO.

(1)VEHICLE INFORMATION

(2)KEY-NO.

(4)PF10:EXECUTE



(6)(7)(8) KEY-NO.

(9)PF10:PART LIST



END EDITING: 2001 05/ << PART NUMBER LIST >>

MODEL/CHASSIS NO.	MODEL-PSC	CAT-NO	PRODUCTN.DATE	CLR	TRM	OPT
FB4JGL	10120	FB4JGLA	BAU	1005		3

SPEC: ENGINE1 ENGINE2 CAB T/M GEAR SHIFT BRAKE TYPE

J05C-B A-CAB LH053 5F A/O

3.900 3860

1 PART-NO(5) 1/ 1PAGE(5)

SEQ	KEY-NO	PART-NO	QTY	FROM	DESCRIPTION	APPLICABLE MODEL
001	31242	019811	1	019811	BEARING, CLUTCH THROMOUT	FB4J ALL

Bottom of page.

1:CHNG 2:PRINT 3:SEARCH 4:REF 5:DATA- 6:PREV 7:NEXT 8:ILLUS 9:MENU 10: OPTION

PF-KEY H MORE PRICE SAVE PAGE PAGE TRATION

(1) Enter VEHICLE INFORMATION.  
(Refer to 3.VEHICLE INFORMATION)

(2) Move cursor to KEY-NO. column  
by pressing down arrow key  
and pressing Enter key.

(3) Input KEY-NO. you want to see.

You can put a asterisk(\*) at  
any position when you are not  
sure of the KEY-NO. to be  
retrieved.  
(Eg. 312\*, 9881\* etc.)

(4) Press PF10:EXECUTE.

(5) "ILLUSTRATION" screen  
is displayed.

(6) The KEY-NO. entered is  
highlighted in green.

(7) Click on KEY-NO. to  
confirm it.

(8) KEY-NO. is highlighted in blue.

(9) Press PF10:PART LIST

(10) "PART NUMBER LIST" screen  
is displayed.  
(Refer to 6:PART NUMBER LIST)

## 4-7. Search KEY-no. by Part Description

You can search for PART NO. by entering the PART DESCRIPTION.

MODEL/CHASSIS NO: FB4JGL...-10120.. MODEL-PSC: FB4JGLA...-BAU... CAT-NO: 1005 PRODUCTN.DATE: / / COLOR/TRIM: / /

SPEC.: J05C-B... ENGINE1: ENGINE2: CAB: T/M: GEAR SHIFT: BRAKE TYPE: A/O..

3.900 3860 A-CAB LH05S 5F... A/O..

ILLUSTRATION: ENGINE: ILLUSTRATION: FIG-NO.: KEY-NO.: DESCRIPTION SEARCH: DESCRIPTION: CLUTCH COVER KEY-NO.: FIG-NO.: S: CLEAR 10: EXECUTE 11: MENU



CLUT: NO. KEY-NO. FIG NO. KEY-NO. QTY

DESCRIPTION: COVER ASSY 31210 30-00

COVER SUB ASSY,CLUTCH 31201 30-00

COVER SUB ASSY,CLUTCH HOUSING,NO1 31101 30-10

0. SRC SEARCH PAGE PAGE 8: ILLUSTRATION 10: PART LIST



(1) Enter VEHICLE INFORMATION.

(2) Move cursor to part description column by pressing downward on the arrow key.

(3) Enter PART DESCRIPTION.  
(Partial description is accepted.)

Eg. When you want to see "COVER CLUTCH", enter "COVER" and "CLUTCH" into each column. The KEY-NO. including "COVER" or "CLUTCH" is searched.

(4) Move cursor to KEY-NO. column and enter KEY-NO. of the PART DESCRIPTION when available.

(5) Move cursor to FIG-NO. column and enter FIG-NO. of the PART DESCRIPTION when available.

(6) Press PF10:EXECUTE.

(7) "DESCRIPTION SEARCH" screen is displayed.

(8) Click on KEY-NO. while checking PART DESCRIPTION and FIG-NO.

(9) The line of the KEY-NO. selected is highlighted in yellow.

(10) When you want to see PART NO., press PF10:PART LIST.

(11) When you want to see ILLUSTRATION, press PF8: ILLUSTRATION.

*Continued*

(When pressing PF10:PART LIST)



END EDITING: 2001 05/ << PART NUMBER LIST >>

MODEL/CHASSIS NO.	MODEL-PSC	CAT-NO	PRODUCTN.DATE	CLR	TRM	OPT
FB4JGL 10120	FB4JGLA	BAU	1005			3

SPEC: ENGINE1 ENGINE2 CAB T/M GEAR SHIFT BRAKE TYPE  
 J05C-B A-CAB LH05S 5F A/O  
 3.900 3860

1 PART-NO(S) 1/ 1PAGE(S)

SEQ	KEY-NO	Q	FROM	DESCRIPTION	APPLICABLE MODEL
00131210	019811			COVER ASSY,CLUTCHFB4J ALL	

Bottom of page.

1:CHNG	2:PRINT	3:SEARCH	4:REF	5:DATA	6:PREV	7:NEXT	8:ILLUS	9:MENU	10:
PF-KEY		H MORE	PRICE	SAVE	PAGE	PAGE	TRATION		OPTION

(11) "PART NUMBER LIST" screen is displayed.

(When pressing PF8: ILLUSTRATION)



END EDITING: 2001 05/ << PART NUMBER LIST >>

MODEL/CHASSIS NO.	MODEL-PSC	CAT-NO	PRODUCTN.DATE	CLR	TRM	OPT
FB4JGL 10120	FB4JGLA	BAU	1005			3

SPEC: ENGINE1 ENGINE2 CAB T/M GEAR SHIFT BRAKE TYPE  
 J05C-B A-CAB LH05S 5F A/O  
 3.900 3860

1 PART-NO(S) 1/ 1PAGE(S)

30-00

FB4J ALL

(12)(13)KEY-NO.

(13)PF10:PART LIST

1:CHNG 2:PRINT 3:KEY-M 4:GNRL 6:PREV 7:NEXT 8:SELEC 9:KEY-M 10:PART  
 PF-KEY O. SRC SEARCH PAGE PAGE T ILLUS O LIST LIST

(12) "ILLUSTRATION" screen is displayed.

(12) The KEY-NO. selected in (9) is highlighted in green.

(13) Confirm KEY-NO. by clicking on it, and press PF10:PART LIST.



END EDITING: 2001 05/ << PART NUMBER LIST >>

MODEL/CHASSIS NO.	MODEL-PSC	CAT-NO	PRODUCTN.DATE	CLR	TRM	OPT
FB4JGL 10120	FB4JGLA	BAU	1005			3

SPEC: ENGINE1 ENGINE2 CAB T/M GEAR SHIFT BRAKE TYPE  
 J05C-B A-CAB LH05S 5F A/O  
 3.900 3860

1 PART-NO(S) 1/ 1PAGE(S)

SEQ	KEY-NO	Q	FROM	DESCRIPTION	APPLICABLE MODEL
00131210	019811			COVER ASSY,CLUTCHFB4J ALL	

Bottom of page.

1:CHNG	2:PRINT	3:SEARCH	4:REF	5:DATA	6:PREV	7:NEXT	8:ILLUS	9:MENU	10:
PF-KEY		H MORE	PRICE	SAVE	PAGE	PAGE	TRATION		OPTION

(14) "PART NUMBER LIST" screen is displayed.  
 (Refer to 6:PART NUMBER LIST)



# 5. Illustration

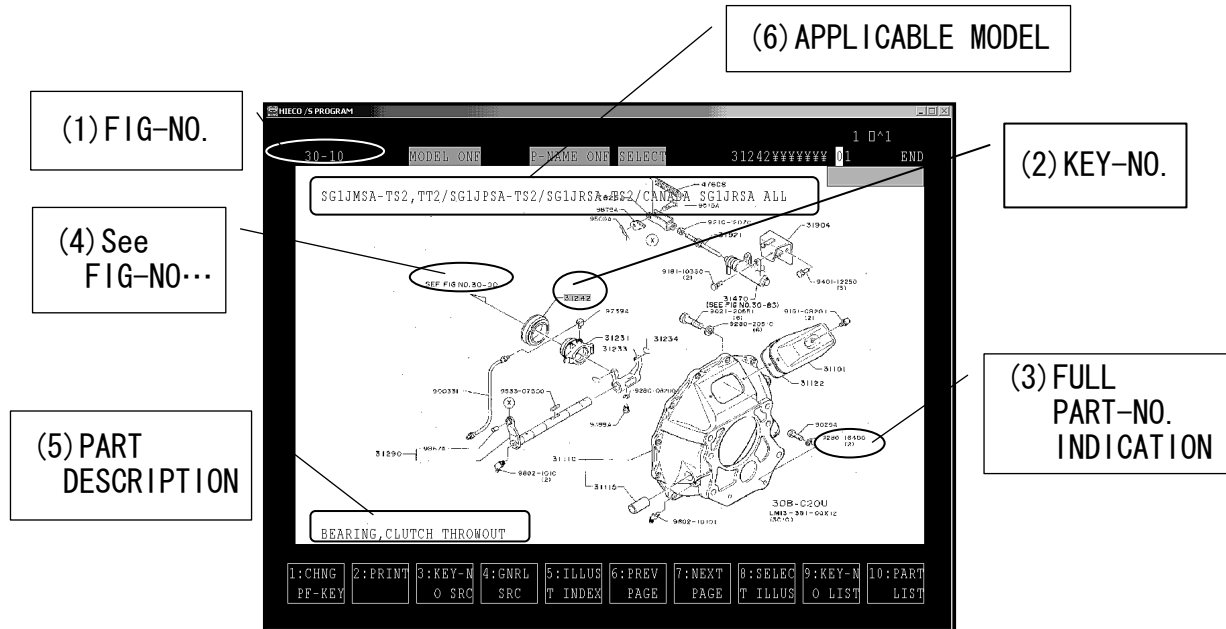


ILLUSTRATION screen is explained in this chapter.

<b>5-1. Explanation of Illustration Screen</b>	<b>81</b>
5-1-1. Explanation of Each Column	81
5-1-2. Explanation of PF-key	82
<b>5-2. Search Part Number</b>	<b>85</b>
<b>5-3. Function of Illustration Screen</b>	<b>86</b>
5-3-1. Model	86
5-3-2. Part Description	87
5-3-3. Key-no. List	87
<b>5-4. Display All the Illustrations</b>	<b>88</b>
<b>5-5. Key-no. List</b>	<b>89</b>
<b>5-6. Zooming-in</b>	<b>90</b>
5-6-1. Zooming-in	90
5-6-2. Scrolling	91

## 5-1.Explanation of Illustration Screen

### 5-1-1.Explanation of Each Column



#### (1) FIG-NO.

FIG-NO. indicates group of ILLUSTRATION displayed.

#### (2) KEY-NO.

You can search PART NUMBER by selecting KEY-NO. assigned to each PART.

#### (3) FULL PART NO. INDICATION

There are some cases that the FULL PART NO. is displayed in illustration. The NUMBER in parenthesis means necessary QUANTITY.

#### (4) See FIG-NO....

There are some cases that "...See FIG-NO...." is assigned to a PART. Click the indication, and ILLUSTRATION of COMPONENT PART is displayed.

### (5) DESCRIPTION


Point cursor to KEY-NO., and DESCRIPTION is indicated.  
(Refer to 5-3-2.PART DESCRIPTION)

### (6) APPLICABLE MODEL

APPLICABLE MODEL for ILLUSTRATION is indicated.  
(Refer to 5-3-1.MODEL)

## 5-1-2.EXPLANATION OF PF-KEY

This an is explanation of PF-KEY on "ILLUSTRATION" screen.  
You can start each PF by clicking on PF column or by pressing PF-KEY  
on the keyboard.

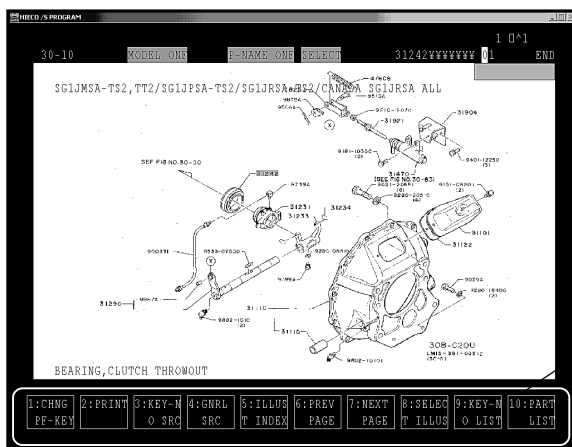

(1) PF-key in ILLUSTRATION screen

1: CHNG PF-KEY	Changes PF-KEY.
2: PRINT	Prints "ILLUSTRATION" creen.
3: KEY-N 0. SRC	Calls "KEY-NO.SEARCH" screen. (Refer to 7.KEY-NO. SEARCH)
4: GNRL SEARCH	Calls "GENERAL SEARCH" screen.
5: ILLUS T INDEX	Calls "ILLUSTRATION INDEX(DETAILS)" screen

*Continued*

6:PREV PAGE	Calls the previous page of "ILLUSTRATION" screen.
7:NEXT PAGE	Calls the next page of "ILLUSTRATION" screen.
8:SELEC T ILLUS	Calls all "ILLUSTRATION" of FIG-NO..
9:KEY-N O. LIST	Calls "KEY-NO.LIST" screen.
10:PART LIST	Search PART NUMBERS.

HINO EPC SYSTEM PROGRAM

<< KEY-NO LIST >>

FIGNO 30-10

KEY-NO	DESCRIPTION	KEY-NO	QTY
31101	COVER SUB ASSY,CLUTCH HOUSING,NO1		
31110	HOUSING ASSY,CLUTCH		
31115	BEARING,RELEASE SHAFT		
31122	GASKET,CLUTCH HOUSING,NO1		
31231	HUB,CLUTCH RELEASE BRG		
31233	FORK,CLUTCH RELEASE		
31234	SPRING,RELEASE FORK ANTIRATTLE		
31242	BEARING,CLUTCH THROWOUT		
31290	LEVER ASSY,RELEASE		
31470	CYLINDER ASSY,CLUTCH RELEASE		
31904	BRACKET SUB ASSY,FR		
31921	ROD,PUSH		
78251	JOINT,LINK ROD		
900331	HOSE,OIL		
9029A	BOLT		

Please select KEY-NO..


3:KEY-N O. SRC 4:GNRL SEARCH 6:PREV PAGE 7:NEXT PAGE 8:ILLUS TRATION 10:PART LIST

PF-KEYS

(2) PF-key in KEY-NO. LIST screen

3:KEY-N O. SRC	Calls "KEY-NO.SEARCH" screen. (Refer to 7.KEY-NO.SEARCH)
4:GNRL SEARCH	Calls" GENERAL SEARCH" screen.
6:PREV PAGE	Calls the previous page of "KEY-NO.LIST" screen.
7:NEXT PAGE	Calls the next page of "KEY-NO.LIST" screen.
8:ILLUS TRATION	Calls "ILLUSTRATION INDEX DETAILS)" screen
10:PART LIST	Search PART NUMBERS.

*Continued*

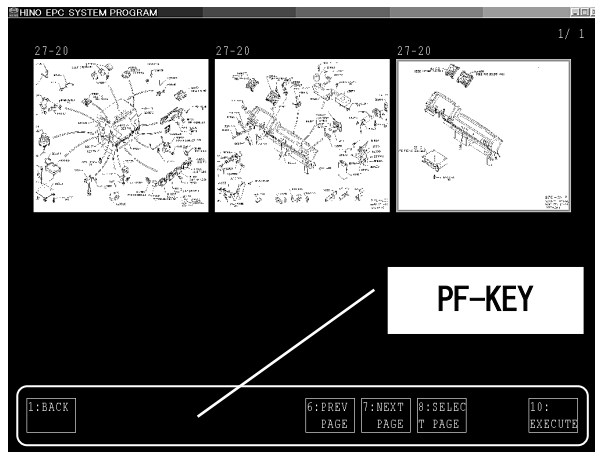


(3) PF-key in GROUP ILLUSTRATION screen

1:BACK	Calls "GENERAL SEARCH" screen.
6:PREV PAGE	Calls the previous page of "ILLUSTRATIONS".
7:NEXT PAGE	Calls the next page of "ILLUSTRATIONS".
8:SELC T PAGE	Calls the page you want to see.
10: EXECUTE	Calls "ILLUSTRATION" screen selected.

## 5-2. Search Part Number

You can search part number clicking on KEY-NO.

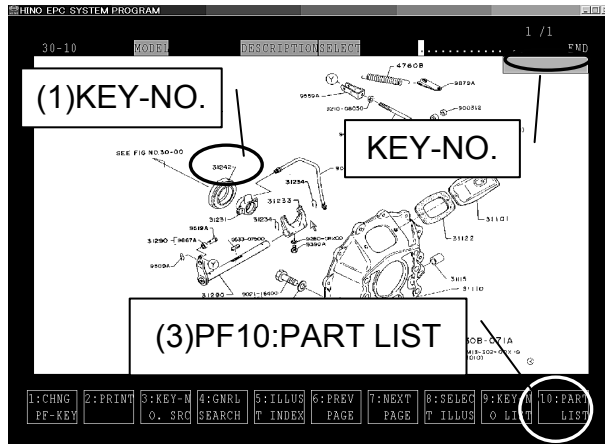


- (1) Click on KEY-NO. assigned to each part you want to see.

KEY-NO. is indicated at right upper corner of the screen when you move cursor to KEY-NO.

- (2) KEY-NO. is highlighted in blue.


- (3) Click on PF10:PART LIST.

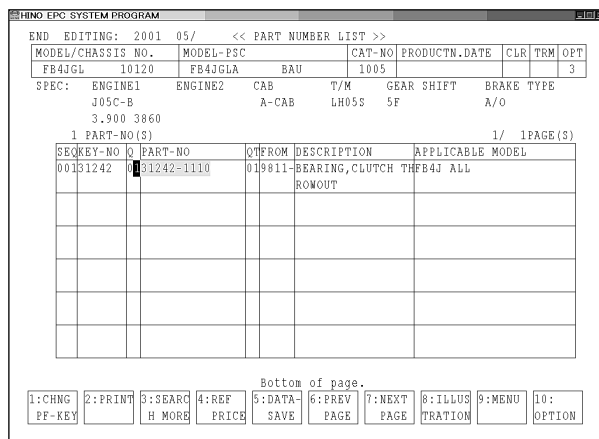

- (4) "PART NUMBER LIST" is displayed.

## 5-3. Function of Illustration Screen

This is an explanation of the various functions of ILLUSTRATION screen.

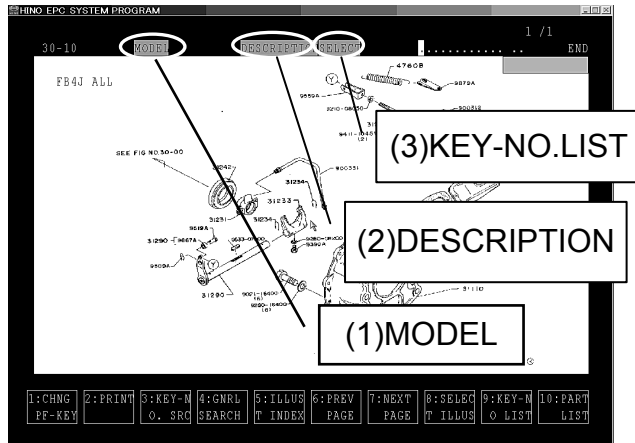

### (1) MODEL

The applicable model for the illustration is indicated.

### (2) DESCRIPTION


Part Description of KEY-NO. where cursor stops is indicated.

### (3) KEY-NO. LIST

The list of the KEY-NO. you selected is indicated.

### 5-3-1. Model

The applicable model for the illustration is indicated.

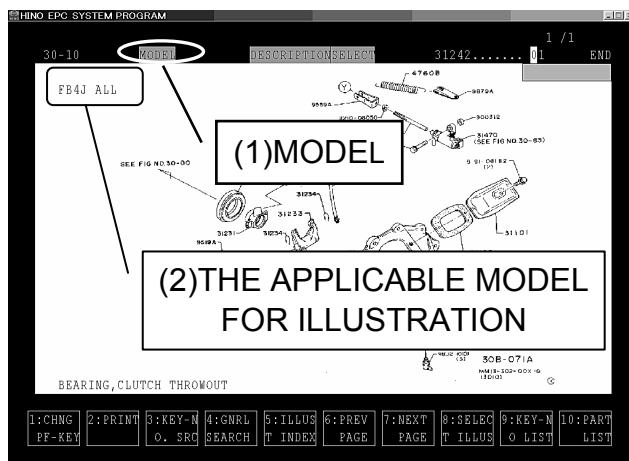


### (1) Click on MODEL

### (2) The applicable model for the illustration is indicated.

APPLICABLE MODEL can be displayed or hidden by clicking on MODEL.

## 5-3-2.Description

PART DESCRIPTION of KEY-NO. you selected is indicated.

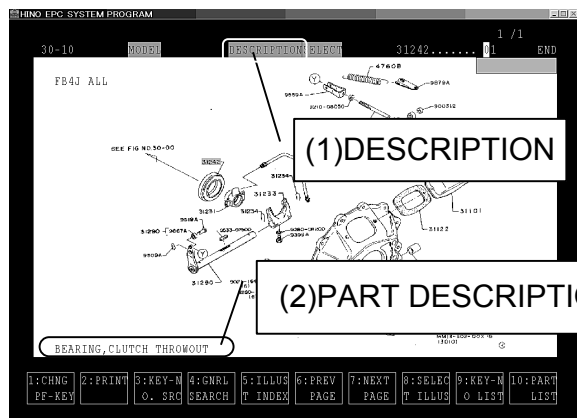


(1) Click on DESCRIPTION.

(2) PART DESCRIPTION of the KEY-NO. where cursor stops is indicated.

## 5-3-3. Key-no. List

The list of KEY-NO. you selected is indicated.

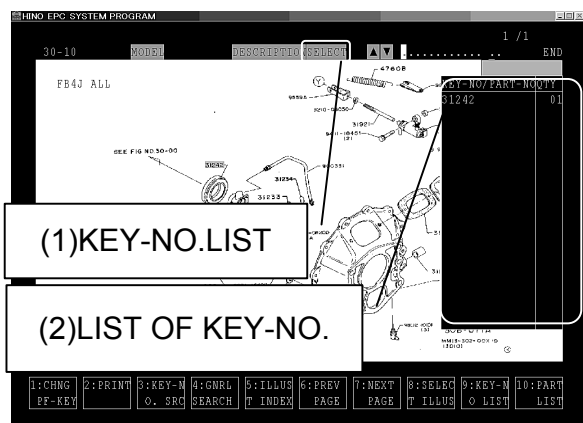


(1) Click on SELECT

(2) The list of KEY-NO. you selected is indicated.




## 5-4. Display All the Illustrations

All the illustrations under common FIG-NO. are displayed.

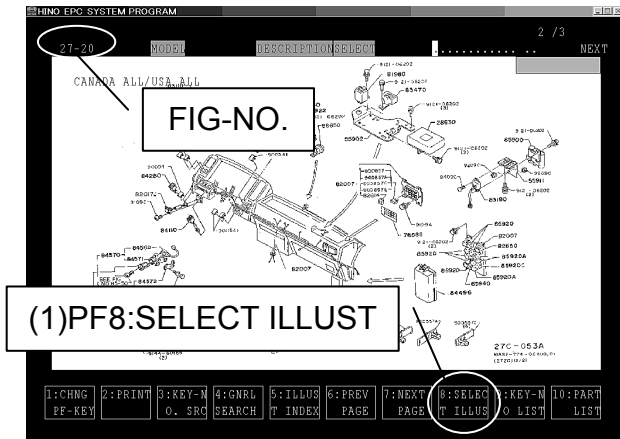


(1) Click on PF8:SELECT ILLUST.

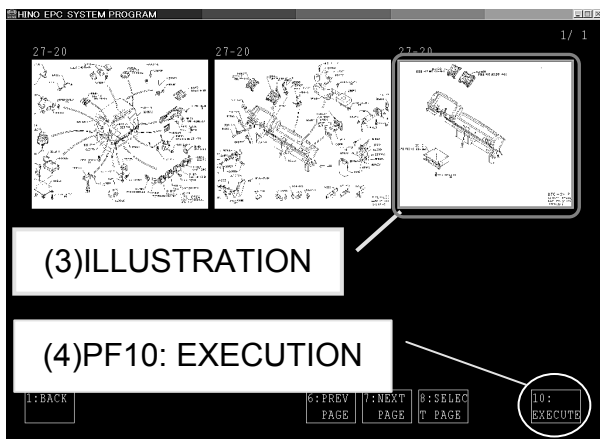

(2) All the illustrations are displayed.

(3) Click on the illustration you want to see.


(4) Press PF10:EXECUTE.

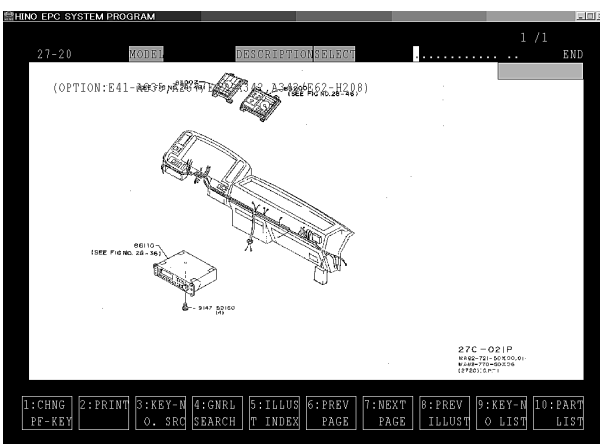


(5) The illustration you selected is displayed.

## 5-5. Key-no. List

Displays a list of all the KEY-NO. indicated on an illustration

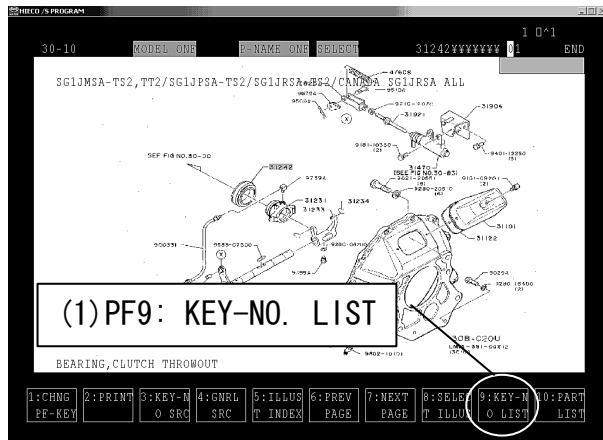

(1) Click on PF9:KEY-NO LIST.

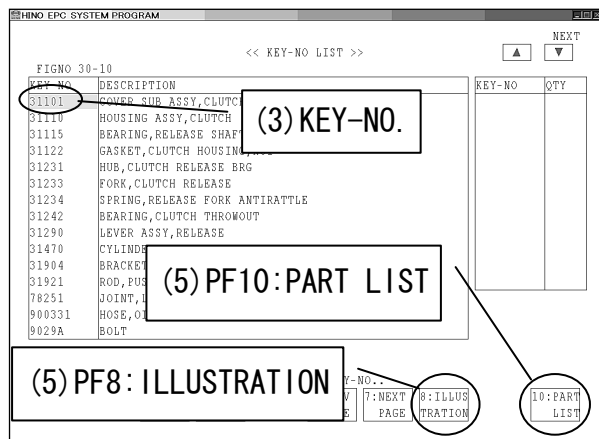


(2) "KEY-NO. LIST" is displayed.

(3) Click on KEY-NO. you want to see.

(4) The line of the KEY-NO. selected is highlighted yellow.

When you see ILLUSTRATION of KEY-NO. selected, press PF8:ILLUSTRATION.

When you search PART-NO., press PF10: PART LIST

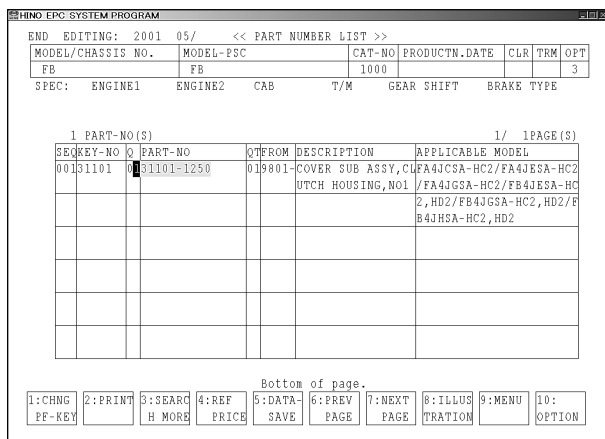

(When pressing PF10 )


(6) "PART NUMBER LIST" screen is displayed.

## 5-6. Zooming-in


You can zoom in on a certain area of an illustration.

### 5-6-1. Zooming-in

This function zooms in on an ILLUSTRATION.

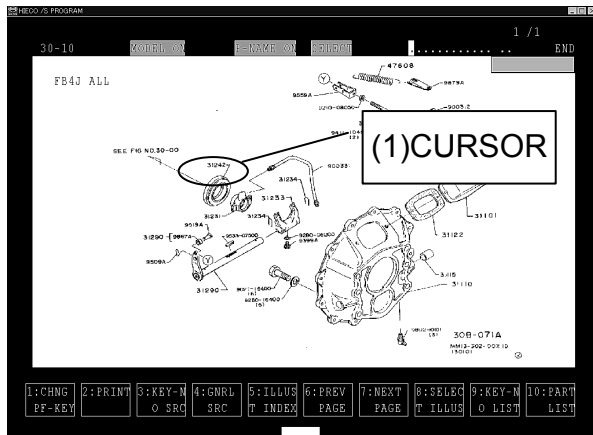

- (1) Move cursor to the position on illustration screen you want to see.

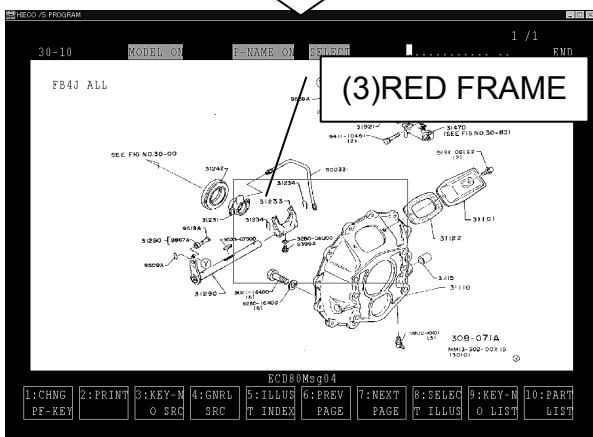


- (2) Right-click.

- (3) A frame is indicated.

When you press the downward arrow key, the frame is enlarged.  
When you press the upward arrow key, the frame is minimized.

- (4) Set the frame position, then click.

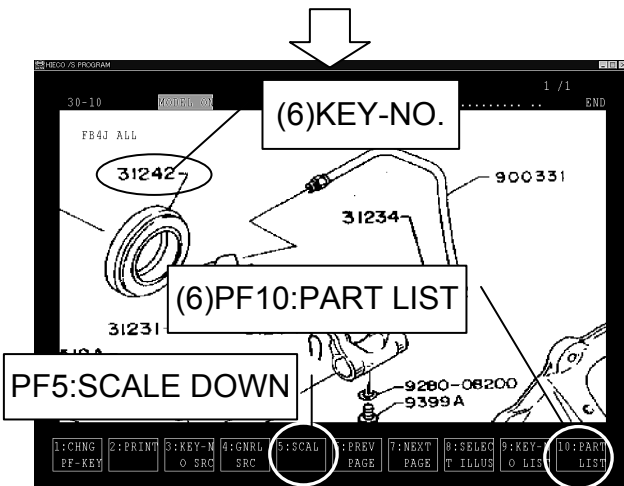

- (5) The illustration is enlarged.

- (6) You can see "PART NUMBER LIST", by clicking KEY-NO. and pressing PF10:PART LIST

When you press PF5:SCALE DOWN, the illustration goes back to normal size.

*Continued*



END EDITING: 2001 05/ << PART NUMBER LIST >>

MODEL/CHASSIS NO.	MODEL-PSC	CAT-NO	PRODUCTN.DATE	CLR	TRM	OPT
FB	FB	1000				3

SPEC: ENGINE1 ENGINE2 CAB T/M GEAR SHIFT BRAKE TYPE

1 PART-NO(S)	2 KEY-NO	3 PART-NO	4 FROM	5 DESCRIPTION	6 APPLICABLE MODEL
00131101	0	31101-1250	019801	COVER SUB ASSY,CL	FA4JGSA-HC2/FA4JESA-HC2
				UTCH HOUSING,NOL	FA4JGSA-HC2/FA4JESA-HC2
					2,HD2/FA4JGSA-HC2,HD2/F
					B4JHSA-HC2,HD2

Bottom of page.


1:CHNG PF-KEY	2:PRINT	3:SEARC H MORE	4:REF PRICE	5:DATA- SAVE	6:PREV PAGE	7:NEXT PAGE	8:ILLUS TRATION	9:MENU	10: OPTION
------------------	---------	-------------------	----------------	-----------------	----------------	----------------	--------------------	--------	---------------

(When clicking KEY-NO. and pressing PF10:PART LIST.)


(7) "PART NUMBER LIST" screen is displayed.

## 5-6-2. Scrolling

You can scroll the enlarged illustration.

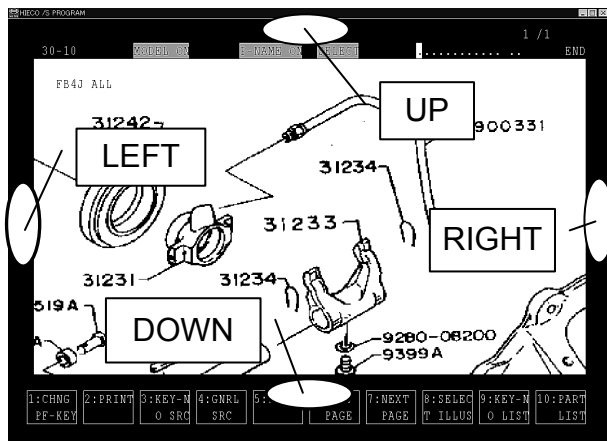

(1) Right click on the area out of illustration frame while the illustration is enlarged.

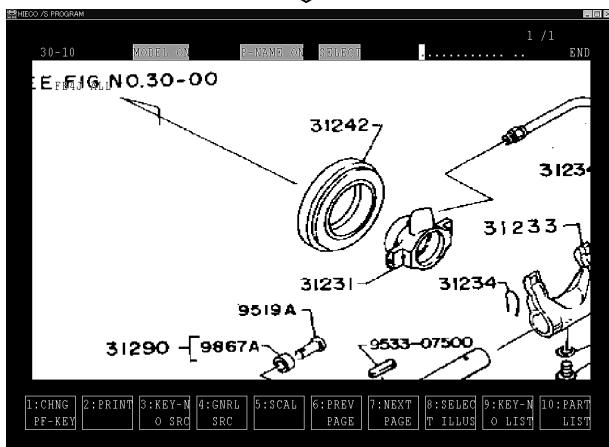

(2) The illustration is scrolled.

# 6. Part Number List



PART NUMBER LIST is explained in this chapter.  
You can make operations such as searching a part number,  
saving data, recording a memo, referring price, and  
connecting D.M.S.

<b>6-1. Outline of Part Number List</b>	<b>93</b>
6-1-1. Search Applicable Part Number	93
6-1-2. Various Functions	93
<b>6-2. Explanation of Screen</b>	<b>94</b>
6-2-1. Explanation of Each Column	94
6-2-2. Explanation of PF-key	96
<b>6-3. Search Part Number</b>	<b>99</b>
<b>6-4. Save Data</b>	<b>100</b>
6-4-1. Save Data	100
6-4-2. Call Saved data	101
<b>6-5. Memo Function</b>	<b>102</b>
6-5-1. Input Memo	102
6-5-2. Delete Memo	103
6-5-3. Memo List	104
<b>6-6. D.M.S. Connection</b>	<b>106</b>
6-6-1. D.M.S. Connection	106
6-6-2. D.M.S. Setting	107
<b>6-7. Reference Price</b>	<b>108</b>

## 6-1. Outline of Part Number List

PART NUMBER LIST is displayed when entering VEHICLE INFORMATION and selecting KEY-NO.

### 1. Search Applicable Part Number

You can make the following operations using PART NUMBER LIST.

#### 2. Save Data

#### 3. Record Memo

#### 4. Price Reference

#### 5. Connect D.M.S.


### 6-1-1. Search Applicable Part Number

Part number of KEY-NO. selected is displayed.  
Both standard spec. and optional spec. parts are displayed.  
You have to choose either.

Refer to  
6-3


### 6-1-2. Various Functions

You can make various operations using PART NUMBER LIST.

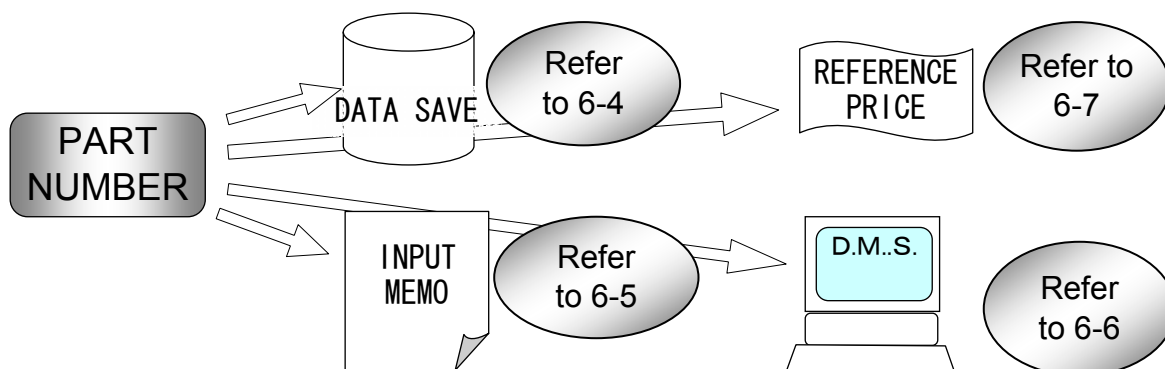

## 6-2.Explanation of Screen

### 6-2-1.Explanation of Each Column

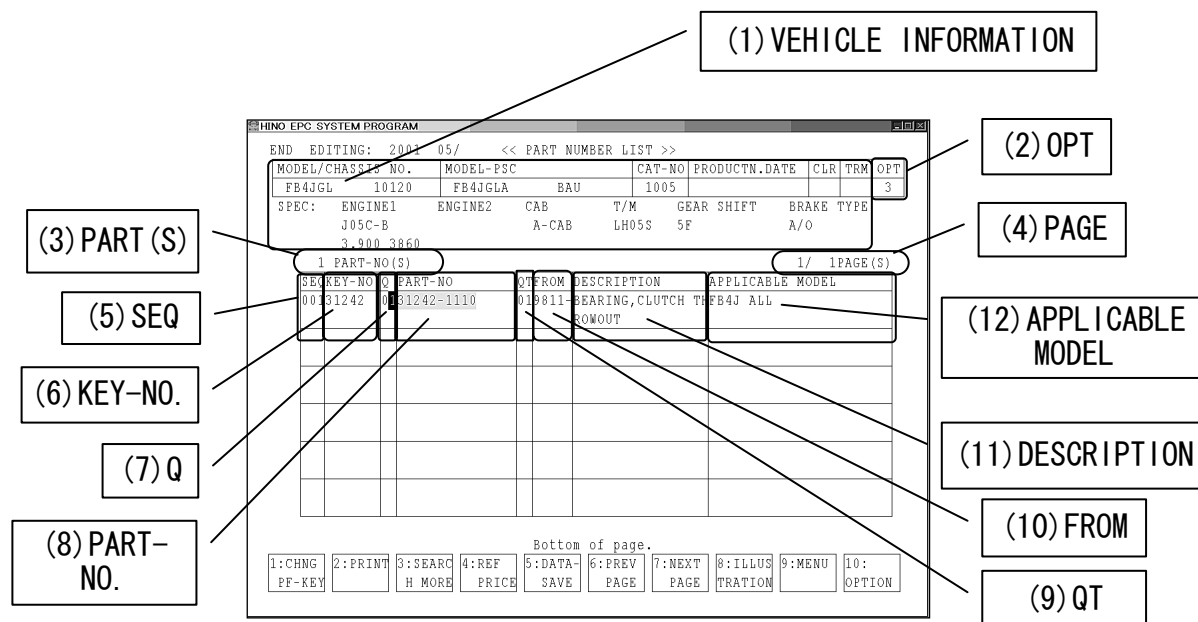

(1) VEHICLE INFORMATION  
VEHICLE INFORMATION entered is displayed.  
(Refer to 3. ENTERING VEHICLE INFORMATION)

(2) OPT  
SPEC of PART NUMBER is indicated,  
1 ...Displaying standard spec. part  
2 ...Displaying optional spec. part.  
3 ...Displaying both standard and optional spec parts.  
You can change the display mode clicking on PF10:OPT.  
(Refer to 6-3. SEARCHING PART NUMBER)

(3) PART(S)  
Total number of PART NUMBERS is indicated.  
You can display another page by clicking on PF6:PREV PAGE.  
or PF7:NEXT PAGE, when PART NUMBER LIST has multiple pages.

*Continued*

**(4) PAGE(S)**

Current page of PART NUMBER LIST is indicated.  
You can display other pages by clicking on PF6:PREV PAGE  
or PF7:NEXT PAGE when PART NUMBER LIST has multiple pages.

**(6) KEY-NO.**

KEY-NO. you entered is indicated.

**(7) Q**

Enter column of QUANTITY you need.

**(8) PART NO.**

This indicates PART NUMBER searched.  
An asterisk "\*" is displayed in the top right corner of PART NO.  
when it has a MEMO. (Refer to 6-5.MEMO FUNCTION)

**(9) QT**

This indicates the necessary quantity for each vehicle application.

**(10) FROM**

This indicates YEAR and MONTH when the PART NUMBER has been  
modified. You have to select APPLICABLE PART NUMBER  
considering VEHICLE PRODUCTION DATE and PART MODIFICATION.

**(11) DESCRIPTION**

This indicates PART DESCRIPTION.

**(12) APPLICATION MODEL**

This indicates APPLICABLE MODEL for PART NUMBER.



## 6-2-2. Explanation of PF-key

This is an explanation of PF-key in screens.  
You can start each PF by clicking on PF column at the bottom of the screen or pressing function key on keyboard.

### (1) PF keys in PART NUMBER LIST screen

**PF-KEY**

Bottom of page.


1:CHNG 2:PRINT 3:SEARCH 4:REF 5:DATA 6:PREV 7:NEXT 8:ILLUS 9:MENU 10: PF-KEY H MORE PRICE SAVE PAGE PAGE TRATION OPTION

1:CHNG 2:D.M.S 3:KEY-N 4:GNRL 5:MEMO PF-KEY O. SRC SEARCH LIST

1:CHNG PF-KEY	Changes PF-KEY.
2:PRINT	Prints "PART NUMBER LIST".
2:D. M. S.	Connects part number list to D.M.S. (Refer to 6-6.D.M.S.CONNECTION.)
3:SEARCH H MORE	
3:KEY-N 0. SRC	Calls KEY-NO SEARCH screen (Refer to 7.KEY-NO SEARCH)
4:REF PRICE	Calls REF PRICE screen. (Refer to 6-7.REFERENCE PRICE)
4:GNRL SEARCH	Calls GENERAL SEARCH screen.
5:DATA SAVE	Saves PART NUMBER LIST.

*Continued*

6:PREV PAGE	Calls the previous page of "PART NO.LIST" screen.
6:MEMO LIST	Calls MEMO FUNCTION screen.
7:NEXT PAGE	Calls the next page of "PART NO.LIST" screen.
8:ILLUS TRATION	Calls ILLUSTRATION of PART NUMBER selected.
9:MENU	Returns to initial menu of HINO EPC SYSTEM.
10: OPTION	Changes the display mode. (STD SPEC PART or OPTIONAL SPEC PART)

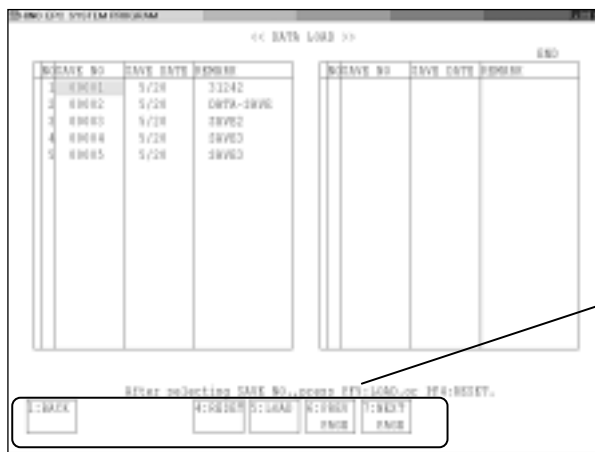

(2) PF-keys in DATA LOAD screen

PF-KEY

1:BACK	Calls "PART NUMBER LIST" screen.
4: RESET	Resets saved data.
5:LOAD	Loads saved data.
6:PREV PAGE	Calls the previous page of "DATA-LOAD" screen.
7:NEXT PAGE	Calls the next page of "DATA-LOAD" screen.

*Continued*

HIHINO EPC SYSTEM PROGRAM

<< MEMO LIST >>      END

SEARCH KEY :

USER-ID	DATE	PART NO.	MEMO
121	01/05/2013 22:39:56	1101-1250	memo002
121	01/05/2013 22:41:27	1115-1040	memo004
121	01/05/2013 22:40:47	1210-2353	memo004
121	01/05/2013 22:37:19	1242-1141	memo001
121	01/05/2013 22:40:30	1250-5320	memo003
121	01/05/2013 22:41:41	1290-2610	memo005
121	01/05/2013 23:08:57	1904-1860	MEM003

Top of page.

1:BACK 2:ENTER 3:PART 4:DATE 5:USER 6:PREV 7:NEXT 8:SEARCH 9: 10:   
 MEMO NO.SEQ SEQ SEQ PAGE PAGE H MEMO DELETE UPDATE

(3) PF-key in "MEMO LIST" screen

PF-KEY

1:BACK	Calls" PART NUMBER LIST" screen.
2:ENTER MEMO	Moves cursor to MEMO column of MEMO FUNCTION screen.
3:PART SEQ	Sorts MEMO LIST in the order of PART NUMBER.
4:DATE SEQ	Sort MEMO LIST in the order of DATE.
5:USER SEQ	Sorts MEMO LIST in the order of USER-ID.
6:PREV PAGE	Calls the previous page of" MEMO LIST" screen.
7:NEXT PAGE	Calls the next page of "MEMO LIST" screen.
8:SEARCH H MEMO	Moves cursor to input column of part number you want to search.
9:DELETE	Deletes MEMO .
10:UPDATE	Saves the MEMO.

## 6-3. Search Part Number

This is an explanation of searching part number on "PART NUMBER LIST" screen.

END EDITING: 2001YY02MM << PART NUMBER LIST >>

MODEL/CHASSIS NO.	MODEL-FSC	CAT-NO	LINE-OFF	CLR	TRM	OPT
SG	SG	1901	YYY MM			1

SPEC: Engine1 Engine2 CabType T/MTtype HesokuSuu BreikiHousiki

1 PART-NO(S)	1/ 1PAGE(S)
00131242 0031242-1060	019801 BEARING,CLUTCH THSGIJMSA-TS2,TT2/SGIJPSA-TS2/SGIJRSA-TS2,TT2

(1)PART NO(S)

(2)PAGE(S)

You are looking last page.

1:CHNG 2:PRINT 3:SRC 4:REF 5:DATA 6:PREV 7:NEXT 8:ILLUS 9:MENU 10:OPT  
PF-KEY MORE PRICE SAVE PAGE PAGE TRATION

(1) Check PART-NO(S) column.

(2) Check PAGE(S) column.

When PART NO. LIST has multiple pages, you can change the page by clicking on PF6:PREV PAGE or PF7:NEXT PAGE.

END EDITING: 2001YY02MM << PART NUMBER LIST >>

MODEL/CHASSIS NO.	MODEL-FSC	CAT-NO	LINE-OFF	CLR	TRM	OPT
SG	SG	1901	YYY MM			1

SPEC: Engine1 Engine2 CabType T/MTtype HesokuSuu BreikiHousiki

1 PART-NO(S)	1/ 1PAGE(S)
00131242 0031242-1060	019801 BEARING,CLUTCH THSGIJMSA-TS2,TT2/SGIJPSA-TS2/SGIJRSA-TS2,TT2

(3)OPT

(4)PF10:OPTION

You are looking last page.

1:CHNG 2:PRINT 3:SRC 4:REF 5:DATA 6:PREV 7:NEXT 8:ILLUS 9:MENU 10:OPT  
PF-KEY MORE PRICE SAVE PAGE PAGE TRATION

(3) Check OPT column.

The number in OPT column indicates mode of display.

1. Displaying STD spec parts.
2. Displaying optional spec parts.
3. Displaying both STD and optional spec parts.

(4) By clicking PF10:OPTION repeatedly, you can change the indication mode of OPT column and display part number of spec you want to see.

END EDITING: 2001YY02MM << PART NUMBER LIST >>

MODEL/CHASSIS NO.	MODEL-FSC	CAT-NO	LINE-OFF	CLR	TRM	OPT
SG	SG	1901	YYY MM			1

SPEC: Engine1 Engine2 CabType T/MTtype HesokuSuu BreikiHousiki

1 PART-NO(S)	1/ 1PAGE(S)
00131242 0031242-1060	019801 BEARING,CLUTCH THSGIJMSA-TS2,TT2/SGIJPSA-TS2/SGIJRSA-TS2,TT2

(5)FROM

(6)APPLICABLE MODEL

You are looking last page.

1:CHNG 2:PRINT 3:SRC 4:REF 5:DATA 6:PREV 7:NEXT 8:ILLUS 9:MENU 10:OPT  
PF-KEY MORE PRICE SAVE PAGE PAGE TRATION

(5) Select applicable PART NUMBER by checking "FROM" column (PART MODIFICATION) and "APPLICABLE MODEL" column.

An asterisk "\*" is displayed in the top right corner of PART NO., when the part number has a memo.

(Refer to 6-5.MEMO FUNCTION)

## 6-4. Save Data

You can save PART NUMBER LIST PC's local disk.  
You can call saved data again.

### 6-4-1. Save Data

This is an explanation of saving "PART NUMBER LIST" into PC's local disk.

END EDITING: 2001 05/ << PART NUMBER LIST >>

MODEL/CHASSIS NO.	MODEL-PSC	CAT-NO	PRODUCTN.DATE	CLR	TRM	OPT
FB	FB	1000				3

SPEC: ENGINE1 ENGINE2 CAB T/M GEAR SHIFT BRAKE TYPE

1 PART-NO(S)	2 PART-NO	3 FROM	4 DESCRIPTION	5 APPLICABLE MODEL
00131242	0131242-1141	019801	BEARING, CLUTCH ROWOUT	THFA4JCSA-HC2/FA4JESA-HC2 /FA4JGSA-HC2/FB4JESA-HC2/FB4JHSA-HC2,HD2

(1),(2)PART NO.

(3)PF5:DATA SAVE

Bottom of page.

1:CHNG 2:PRINT 3:SEARCH 4:REF 5:DATA 6:PREV 7:NEXT 8:ILLUS 9:MENU 10: PF-KEY H MORE PRICE SAVE PAGE PAGE TRATION MENU OPTION

- (1) Move cursor to the part number you want to save, pressing arrow key.,
- (2) Press Enter key when cursor is in the position of part number you select. And then, the parts number is highlighted in Yellow.
- (3) press PF5: DATA SAVE.



END EDITING: 2001 05/ << PART NUMBER LIST >>

MODEL/CHASSIS NO.	MODEL-PSC	CAT-NO	PRODUCTN.DATE	CLR	TRM	OPT
FB	FB	1000				3

SPEC: ENGINE1 ENGINE2 CAB T/M GEAR SHIFT BRAKE TYPE

1 PART-NO(S)	2 PART-NO	3 FROM	4 DESCRIPTION	5 APPLICABLE MODEL
00131242	0131242-1141	019801	BEARING, CLUTCH ROWOUT	THFA4JCSA-HC2/FA4JESA-HC2 /FA4JGSA-HC2/FB4JESA-HC2/FB4JHSA-HC2,HD2

(4)(5)REMARK

(6)PF5:DATA SAVE

After inputting REMARK, click PF5.

4:PART LIST 5:SAVE EXECUTE

REMARK ==> DATA-SAVE

- (4) "REMARK ==>" is indicated in the right lower corner of the screen.
- (5) Enter a save name. (max:10 characters)
- (6) Press PF5: DATA SAVE
- (7) "PART NUMBER LIST" is saved.

# 6-4-2. Call Saved Data

You can call saved data by clicking on PF5:DATA LOAD on "GENERAL SEARCH" or "KEY-NO.SEARCH" screen.

(1) Click on PF5:DATA LOAD.

The screen image on the left displays "GENERAL SEARCH" screen.

(2) "DATA LOAD" screen is displayed.

(3) Click SAVED NO. while confirming SAVED DATE and REMARKS.

(4) The SAVED NO. is highlighted in blue.

(5) Press PF5:LOAD.

(6) SAVED DATA is displayed.

When you click on PF5:DATA SAVE, saved period is updated.

## 6-5. Memo Function

You can enter memo on "PART NUMBER LIST" screen.  
You can call the MEMO on "PART NUMBER LIST" screen.

### 6-5-1. Input Memo

You can enter a MEMO on "PART NUMBER LIST" screen.

HINO EPC SYSTEM PROGRAM

END EDITING: 2001 05/ << PART NUMBER LIST >>

MODEL/CHASSIS NO.	MODEL-PSC	CAT-NO	PRODUCTN.DATE	CLR TRM	OPT
FB	FB	1000			3

SPEC: ENGINE1 ENGINE2 CAB T/W GEAR SHIFT BRAKE TYPE

1 PART-NO(S)

SEQ	KEY-NO	Q	FROM	DESCRIPTION	1/	1PAGE(S)
001	31904	0	01904-1860	BRACKET SUB ASSY, FR	FA4JCSA-HC2/FA4JESA-HC2	
					/FA4JGSA-HC2/FA4JESA-HC2	
					2,HD2/FA4JGSA-HC2,HD2/F	
					B4JHSA-HC2,HD2	

(2)PF1:CHNG PF-KEY

1:CHNG PF-KEY 2:PRINT H MORE 3:SEARCH 4:REF PRICE 5:DATA SAVE 6:PREV PAGE 7:NEXT PAGE 8:ILLUS TRATION 9:MENU 10:OPTION

- (1) Select a part number for which you want to enter a memo/remarks by pressing up/downward arrows and ENTER keys. The selected part number is highlighted in yellow.

You can enter memo on more than two part numbers at one time.

- (2) Press PF1:CHNG PF KEY.



HINO EPC SYSTEM PROGRAM

END EDITING: 2001 05/ << PART NUMBER LIST >>

MODEL/CHASSIS NO.	MODEL-PSC	CAT-NO	PRODUCTN.DATE	CLR TRM	OPT
FB	FB	1000			3

SPEC: ENGINE1 ENGINE2 CAB T/W GEAR SHIFT BRAKE TYPE

1 PART-NO(S)

SEQ	KEY-NO	Q	FROM	DESCRIPTION	1/	1PAGE(S)
001	31904	0	01904-1860	BRACKET SUB ASSY, FR	FA4JCSA-HC2/FA4JESA-HC2	
					/FA4JGSA-HC2/FA4JESA-HC2	
					2,HD2/FA4JGSA-HC2,HD2/F	
					B4JHSA-HC2,HD2	

(4)PF6:MEMO LIST

Bottom of page


1:CHNG PF-KEY 2:D.M.S 3:KEY-M O. SRC 4:GNRL SEARCH 6:MEMO LIST

- (3) PF-KEY is changed.


- (4) Press PF6:MEMO LIST.



Continued

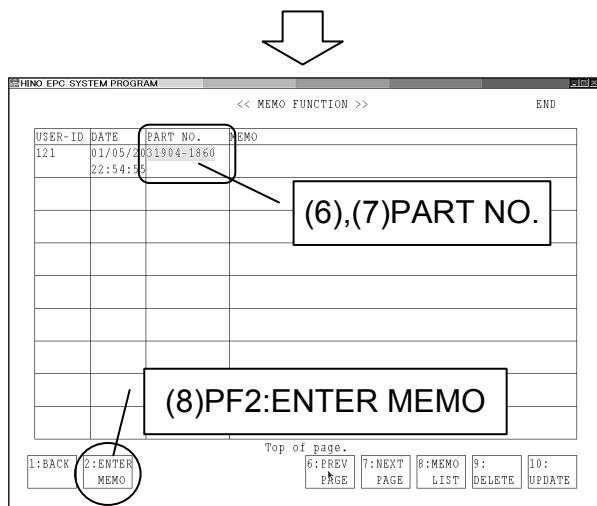


- (5) "MEMO FUNCTION" screen is displayed.
- (6) Press ENTER key on PART NUMBER you want to record memo.
- (7) The PART NUMBER is highlighted in yellow.
- (8) Press PF2:ENTER MEMO

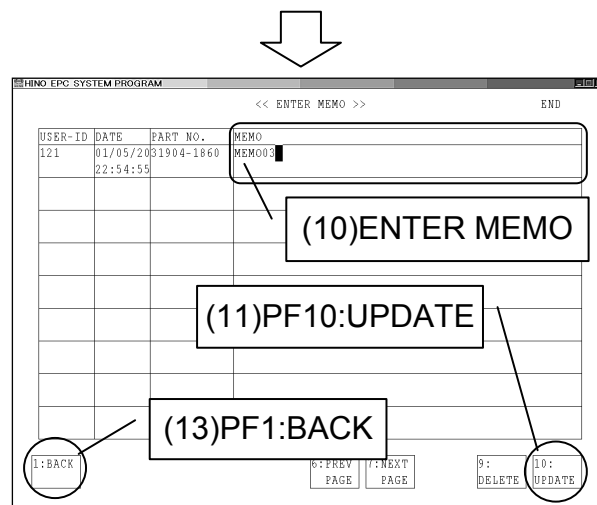

- (9) Cursor moves to MEMO column.
- (10) Enter MEMO as you like.
- (11) Press PF10:UPDATE.
- (12) The MEMO is saved in your PC's local disk.
- (13) When you press,PF1:BACK, "PART NO.LIST" is displayed.

## 6-5-2.Delete Memo

You can delete MEMO in MEMO FUNCTION screen.

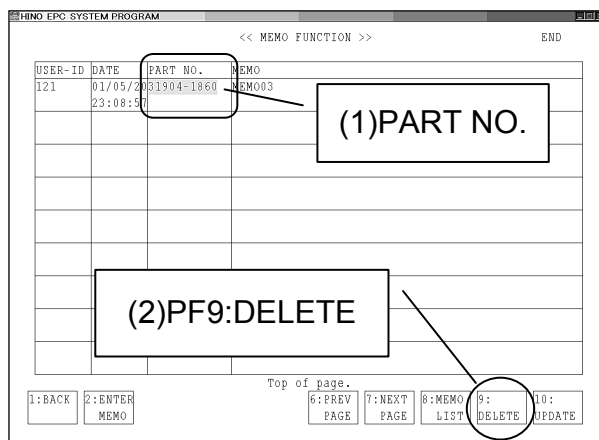


- (1) Press ENTER key on the PART NUMBER with the memo you want to delete.
- (2) Press PF9:DELETE.
- (3) The memo is deleted.
- (4) When you press PF1:BACK, "PART NO.LIST" is displayed.




## 6-5-3. Memo List

You can view the list of all the memos entered.

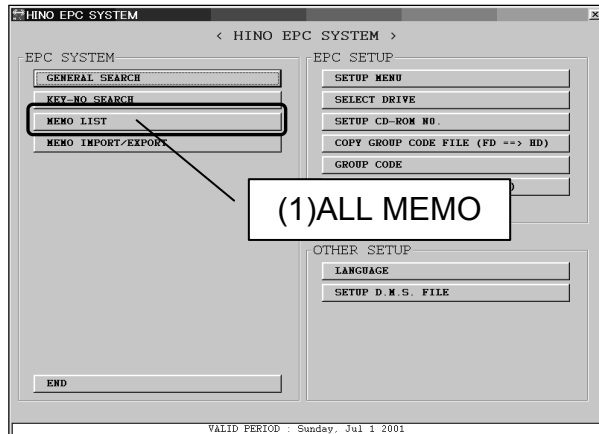


- (1) Click on MEMO LIST of "HINO EPC SYSTEM" screen.

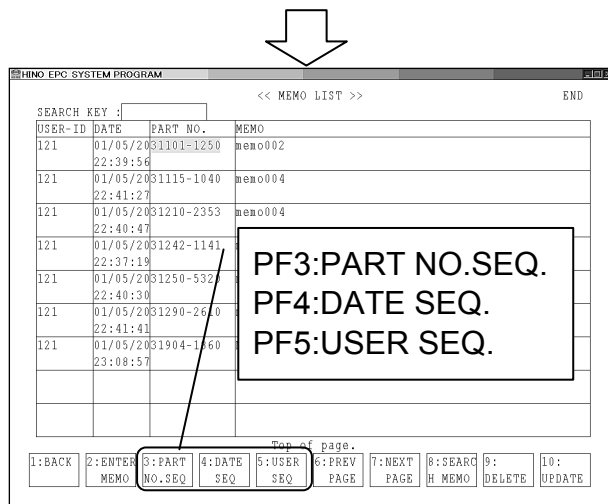

- (2) "MEMO LIST" screen is displayed.


You can sort MEMO LIST by clicking on PF3:PART NO.SEQ, PF4:DATE SEQ. and PF5:USER SEQ.

- (3) You can search MEMO for PART NUMBER you want to see.

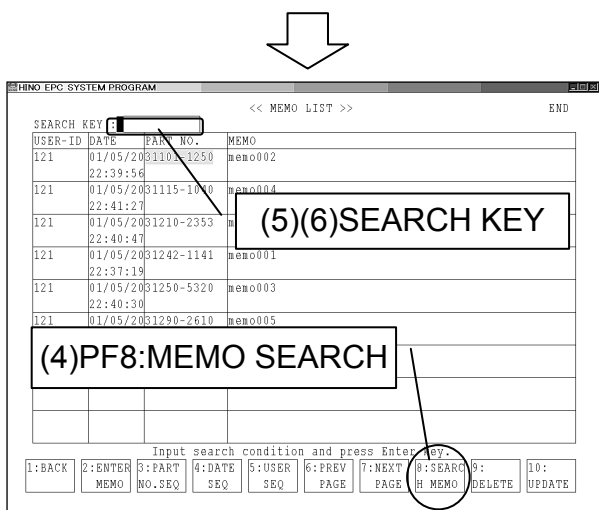


- (4) Click on PF8:SEARCH MEMO.
- (5) Cursor moves to SEARCH-KEY column.
- (6) Enter the PART NUMBER you want to see. (Eg : 31242-1170)
- (7) Press ENTER key.

Continued

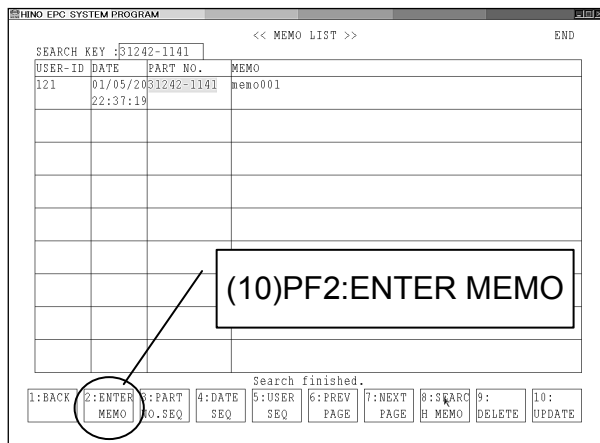

(9) When you want to add more data to a MEMO, point cursor to PART NUMBER and press ENTER key.

(10) Press PF2:ENTER MEMO.

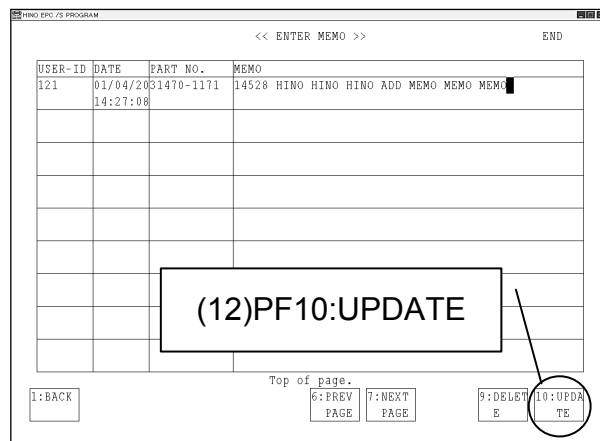

(12) Click on PF10:UPDATE.

(13) MEMO is updated.

## 6-6.D.M.S. Connection

This is a function to connect HINO EPC SYSTEM with DMS (Dealer Management System) such as placing an order, stock inquiry, etc.

### 6-6-1.D.M.S. Connection

END EDITING: 2001 05/ << PART NUMBER LIST >>

MODEL/CHASSIS NO.	MODEL-PSC	CAT-NO	PRODUCTN.DATE	CLR	TRM	OPT
FB	FB	1000				3

SPEC: ENGINE1 ENGINE2 CAB T/M GEAR SHIFT BRAKE TYPE

1 PART-NO(S)	1/ 1PAGE(S)
SEQKEY-NO 0 PART-NO QTFROM DESCRIPTION APPLICABLE MODEL	
00131904 0 31904-1860 019801-BRACKET SUB ASSY. FA4JCSA-HC2/FA4JESA-HC2	
	FR /FA4JGSA-HC2/FB4JESA-HC
	2,HD2/FB4JGSA-HC2,HD2/F
	B4JHSA-HC2,HD2

(1)PART NO.

(3)PF2:D.M.S.

Bottom of pag 6.MEMO LIST

1:CHNG 2:D.M.S. 3:KEY-N 4:GNRL 5:PART 6:MEMO  
PF-KEY 0. SRC SEARCH LIST

(1) Move cursor to PART NUMBER and press ENTER KEY.

(2) Press PF1:CHG PF-KEY.

(3) Press PF2:D.M.S.

END EDITING: 2001 05/ << PART NUMBER LIST >>

MODEL/CHASSIS NO.	MODEL-PSC	CAT-NO	PRODUCTN.DATE	CLR	TRM	OPT
FB4JGL 10120	FB4JGLA	BAU	1005			3

SPEC: ENGINE1 ENGINE2 CAB T/M GEAR SHIFT BRAKE TYPE

J05C-B A-CAB LH05S 5F A/O

3.900 3860

1 PART-NO(S)	1/ 1PAGE(S)
SEQKEY-NO 0 PART-NO QTFROM DESCRIPTION APPLICABLE MODEL	
00131242 0 31242-1110 019811-BEARING,CLUTCH THFB4J ALL	
	ROMOUT

(4),(5)REMARK

After inputting REMARK. click PF5. REMARK ==> D.M.S....

4:PART 5:PART  
LIST EXECUTE

(4) "REMARK==>"is indicated in the lower right corner of the screen.

(5) Enter Remark/Note (MAX:10 characters)

(6) Press PF5:EXECUTE

Information is output into D.M.S. file.  
(Refer to 6-6-2. D.M.S. Setting)

END EDITING: 2001 05/ << PART NUMBER LIST >>

MODEL/CHASSIS NO.	MODEL-PSC	CAT-NO	PRODUCTN.DATE	CLR	TRM	OPT
FB4JGL 10120	FB4JGLA	BAU	1005			3

SPEC: ENGINE1 ENGINE2 CAB T/M GEAR SHIFT BRAKE TYPE

J05C-B A-CAB LH05S 5F A/O


3.900 3860

1 PART-NO(S)	1/ 1PAGE(S)
SEQKEY-NO 0 PART-NO QTFROM DESCRIPTION APPLICABLE MODEL	
00131242 0 31242-1110 019811-BEARING,CLUTCH THFB4J ALL	
	ROMOUT


1:CHNG 2:D.M.S. 3:KEY-N 4:GNRL 5:PART 6:MEMO  
PF-KEY 0. SRC SEARCH LIST

## 6-6-2.D.M.S. Setting

Output file for D.M.S. is set by selecting SETUP D.M.S. FILE on HINO EPC SYSTEM.

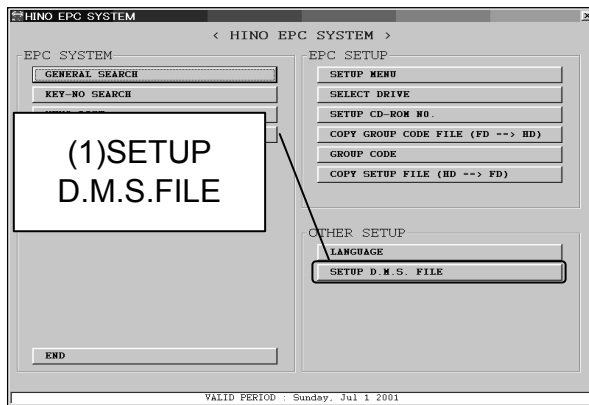

(1) Click on SETUP D.M.S. FILE on "SETUP D.M.S. FILE".

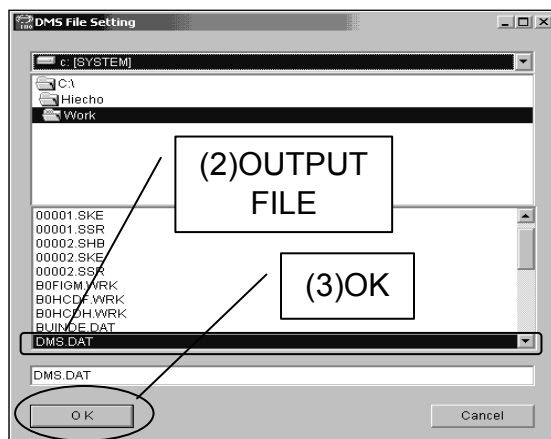

(2) Select output file for D.M.S.

(3) Click on OK button.

Output file of D.M.S. is fixed record length file.  
File layout is shown below.

Column From	Upto	Characters	Description
1	15	15	Part Number
20	21	2	Quantity
28	37	10	Dealer ID (The Dealer ID entered at the time of log-in. See p.16.)
38	45	8	Date (YYYYMMDD)
46	55	10	Remark (The remark entered on the Part Number List Screen)

## 6-7. Reference Price

REFERENCE PRICE of PART NUMBER is displayed.

END EDITING: 2001 05/ << PART NUMBER LIST >>

MODEL/CHASSIS NO.	MODEL-PSC	CAT-NO	PRODUCTN.DATE	CLR	TRM	OPT
FB	FB	1000				3

SPEC: ENGINE1 ENGINE2 CAB T/M GEAR SHIFT BRAKE TYPE

1 PART-NO(S) 1/ 1PAGE(S)

SEQ-KEY-NO	Q	PART-NO	Q	FROM	DESCRIPTION	APPLICABLE MODEL
00131904	0	01904-1860	019801		BRACKET SUB ASSY, FR	FA4JCSA-HC2/FA4JESA-HC2 /FA4JGSA-HC2/FB4JESA-HC2, HD2/FB4JGSA-HC2, HD2/FB4JHSA-HC2, HD2

(1)PF4:REF PRICE

1:CHNG 2:PRINT 3:SEARCH 4:REF 5:DATA 6:PREV 7:NEXT 8:ILLUS 9:MENU 10:  
PF-KEY H MORE PRICE SAVE PAGE PAGE TRATION OPTION

(1) Move cursor to PART NUMBER and press ENTER KEY.

(2) Press PF4:REF PRICE.



(01YV04MM01DD-PRICE) << REF-PRICE >> END

SEQ-KEY-NO	Q	PART-NO	DESCRIPTION	L/P
(CHG)		(CHG-PARTNO)		
00131242	0	0131242-1210	BEARING, CLUTCH THROWOUT	0000000000

(2)REF PRICE

ECD70-011  
ECD70Msg01

2:PRINT 4:BACK 6:PREV 7:NEXT  
PAGE PAGE

(3) "REF-PRICE" screen is displayed.



# 7. Key-no Search



KEY-NO SEARCH menu is explained in this chapter.

<b>7-1 Outline of Key-no Search</b>	<b>111</b>
7-1-1. Search by Key-no.	111
7-1-2. Search by Group Code	111
7-1-3. Search Applicable Model	111
<b>7-2 Display Key-no Search Screen</b>	<b>112</b>
<b>7-3 Explanation of Screen</b>	<b>113</b>
7-3-1. Explanation of Each Column	113
7-3-2. Explanation of PF Key	114
<b>7-4 Search Part Number by Group Code</b>	<b>116</b>
7-4-1 Set Group Code	116
7-4-2 Set Group Code Contents	118
7-4-3 Search Part Number by Group Code	119
<b>7-5 Key-no Search</b>	<b>121</b>
<b>7-6 Search Applicable Model for Part Number</b>	<b>122</b>

## 7-1.Outline of Key-no Search

KEY-NO SEARCH has the following three functions.

1 . Search Part Number by Key-no

2 . Search Part Number by GROUP CODE.


3 . Search Applicable Model for Part Number

### 7-1-1.Search by Key-no.

You can enter KEY-NO.(MAX:990)and search PART NUMBERS.


### 7-1-2.Search by GROUP-CODE

You can set GROUP-CODE containing KEY-NO'S to search PART NUMBERS.

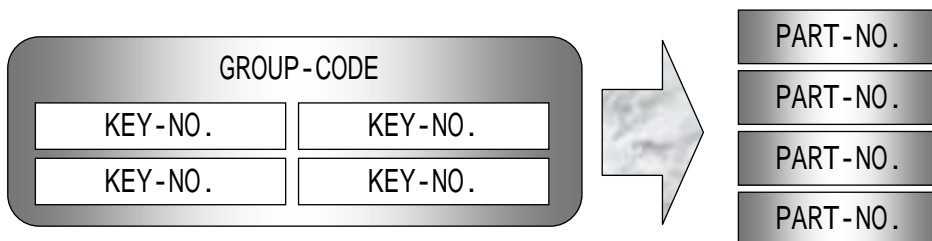

### 7-1-3.Search Applicable Model


You can search applicable models by entering part numbers.

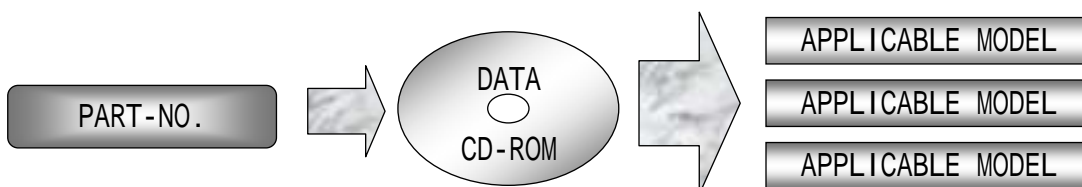



## 7-2. Display Key-no Search Screen

KEY-NO. SEARCH screen is displayed by selecting KEY-NO. SEARCH of "HINO EPC SYSTEM" screen.

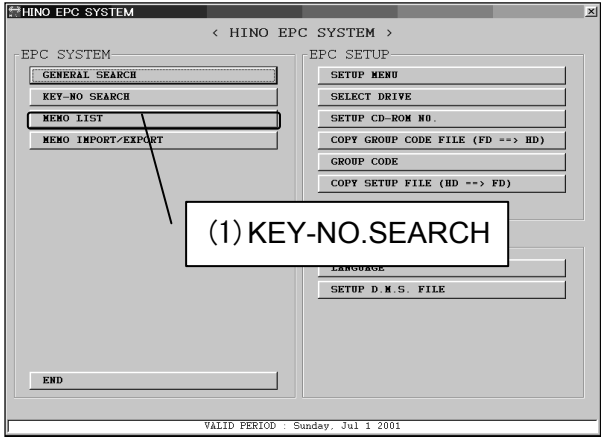

(1) Click on KEY-NO. SEARCH of "HINO EPIC SYSTEM" screen.



MODEL/CHASSIS NO	MODEL-PSC	CAT-NO	PRODUCTN.DATE	COLOR/TRIM
SPEC.	ENGINE1	ENGINE2	CAB	T/M

☐ GROUP CODE

NO.	KEY-NO	QTY	NO.	KEY-NO	QTY	NO.	KEY-NO	QTY	NO.	KEY-NO	QTY
1			2			3			4		
5			6			7			8		
9			10			11			12		
13			14			15			16		
17			18			19			20		
21			22			23			24		
25			26			27			28		
29			30			31			32		
33			34			35			36		
37			38			39			40		

2:APPL MODEL    4:CAT-NO LIST    5:DATA-LOAD    7:HISTORY    9:CLEAR    11:MENU

(2) "KEY-NO. SEARCH" screen is displayed.

## 7-3.Explanation of Key-no. Search Screen

### 7-3-1.Explanation of Each Column

This is an explanation of each column on "KEY-NO.SEARCH" screen.

The screenshot shows the "HINO EPC SYSTEM PROGRAM" interface with the title "KEY-NO SEARCH". It features several input fields and a table. Callouts identify the following sections:

- (1) VEHICLE INFORMATION:** Points to the top section containing fields for MODEL/CHASSIS NO, MODEL-PSC, CAT-NO, PRODUCTN.DATE, and COLORTRIM.
- (2) GROUP CODE:** Points to a checkbox labeled "GROUP CODE".
- (3) KEY-NO. & QTY:** Points to a table with columns for NO., KEY-NO, and QTY, containing 40 rows of data.
- (4) APPLICABLE MODEL:** Points to a button labeled "2:APPL MODEL".

At the bottom of the screen, there are several function buttons: "4:CAT-NO LIST", "5:DATA-LOAD", "7:HISTORY", "9:CLEAR", and "11:MENU".

#### (1) VEHICLE INFORMATION

This is the column in which you enter the VEHICLE INFORMATION (Refer to 3.VEHICLE INFORMATION)

#### (2) GROUP CODE

This is the column in which you enter the GROUP CODE to search parts numbers. (Refer to 7-4.Search PART NO. BY GROUP CODE)

#### (3) KEY-NO. & QTY

This is the column in which you enter KEY-NO to search part numbers. (Refer to 7-5.KEY-NO SEARCH)

#### (4) APPLICABLE MODEL

This is PF-KEY to search APPLICABLE MODEL for PART NUMBER. (Refer to 7-6.SEARCH APPLICABLE MODEL FOR PART NO.)

## 7-3-2.Explanation of PF-key

This is an explanation of PF-KEY on KEY-NO. SEARCH screen  
You can start each PF by clicking on PF column or by pressing PF-KEY on keyboard.

The screenshots show the 'HINO EPC SYSTEM PROGRAM' interface with the '<< KEY-NO SEARCH >>' title. Each screen displays a search form with fields for MODEL/CHASSIS NO, MODEL-PSC, CAT-NO, PRODUCTN.DATE, and COLORTRIM. Below the form is a table with columns NO, KEY-NO, and QTY. The bottom of each screen features a row of PF keys.

**Screenshot 1 (Top Left):** The PF key row includes: 2:APPL MODEL, 4:CAT-NO LIST, 5:DATA-LOAD, 7:HISTORY, 9:CLEAR, and 11:MENU.

**Screenshot 2 (Top Right):** The PF key row includes: 3:GNRL SEARCH, 4:GROUP CNTNTS, 8:GROUP LIST, 9:CLEAR, and 11:MENU.

**Screenshot 3 (Bottom Left):** The PF key row includes: 3:GNRL SEARCH, 6:PREV PAGE, 7:NEXT PAGE, 8:ILLUS TRATION, 9:CLEAR, 10:PART LIST, and 11:MENU.

A central box labeled **PF-KEY** has arrows pointing to the 2:APPL MODEL, 3:GNRL SEARCH, and 4:GROUP CNTNTS keys across the three screenshots.

### PF-key in KEY-NO. SEARCH screen

<b>2:APPL MODEL</b>	Calls "APPLICABLE MODEL LIST" screen. (Refer to 7-6.SEARCH APPLICABLE MODEL FOR PART NO.)
<b>3:GNRL SEARCH</b>	Calls "GENERAL SEARCH" screen. (Refer to 4.GENERAL SEARCH)
<b>4:CAT- NO. LIST</b>	Calls" CATALOG-NO. LIST" screen. (Refer to 3-6.SELECT CAT NO.)
<b>4:GROUP CNTNTS</b>	Calls "GROUP-CODE CONTENTS LIST" screen. (Refer to 7-4-3.SEARCH PART NO. BY GROUP CODE)

*Continued*


5:DATA- LOAD	Calls "PART NUMBER LIST" screen saved. (Refer to 6-4.SAVE DATA )
6:PREV PAGE	Calls the previous page of "KEY-NO. SEARCH" screen. (Refer to 7-5.KEY NO. SEARCH )
7: HISTORY	Calls History Function Screen. (Refer to 3-7.History Function)
7:NEXT PAGE	Calls the next page of "KEY-NO. SEARCH" screen. (Refer to 7-5.KEY NO. SEARCH )
8:GROUP LIST	Calls "GROUP-CODE LIST." screen. (Refer to 7-4.SEARCH PART NO. BY GROUP CODE)
8: ILLUST RATION	Displays ILLUSTRATION.
9:CLEAR	Cancels input data.
10:PART LIST	Searches PART NUMBERS. (Refer to 7-5.KEY-NO.SEARCH)
11:MENU	Calls initial menu of HINO EPC SYSTEM.

## 7-4. Search Part Number by Group Code

This is a function to set GROUP CODE containing multiple KEY-NO's to search PART NUMBER.


### 7-4-1. Set GROUP CODE

You have to set GROUP CODE in advance before searching PART NO. by GROUP CODE.

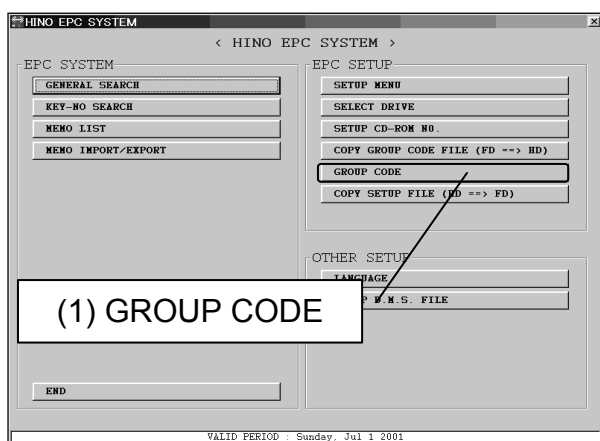

(1) Click on GROUP CODE of "HINO EPC SYSTEM" screen.

(1) GROUP CODE

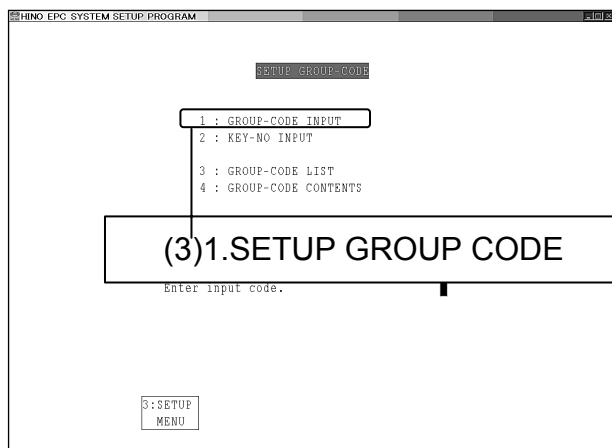

(2) "SETUP GROUP CODE" screen is displayed.

(3) Click on 1.GROUP CODE INPUT.

(3) 1.SETUP GROUP CODE

Enter input code.



*Continued*



SHINO EPC SYSTEM SETUP PROGRAM

GROUP-CODE INPUT

MODE(1:CREATE 2:MODIFY 3:DELETE)

GROUP-CODE 001

GROUP-CODE NAME TEST

NO	GROUP-CODE	GROUP-CODE NAME
001	111	111
002		
003		
004		
005		
006		
007		
008		
009		
010		

(5)MODE

(6)GROUP CODE

(7)GROUP CODE NAME

(8)PF10:EXECUTE

PF3:MENU PF4:PAGE PF5:PAGE PF6:PAGE PF7:PAGE PF8:PAGE PF9:PAGE PF10:EXECUTE

(4) "GROUP CODE INPUT" screen is displayed.

(5) Enter "1" in MODE column when creating a new group code.

(6) Enter a 3-digit figure as you like in GROUP CODE column.

(7) Enter characters as you like in GROUP CODE NAME column. (MAX: 39 characters)

(8) Press PF10:EXECUTE.

(9) GROUP CODE has been set.


You can change GROUP-CODE NAME by entering "2" in MODE column.

You can delete GROUP-CODE by entering "3" in MODE column, specifying GROUP CODE, and GROUP CODE NAME, and pressing ENTER key.


(10) You can go back to the previous screen by pressing PF3:GROUP MENU.

## 7-4-2. Set GROUP CODE CONTENTS

After setting the GROUP CODE, you have to set contents.

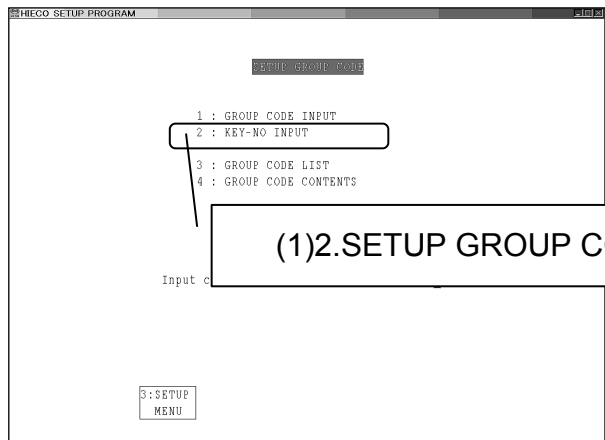

- (1) Click on 2.KEY-NO.INPUT on "SETUP GROUP CODE" screen.

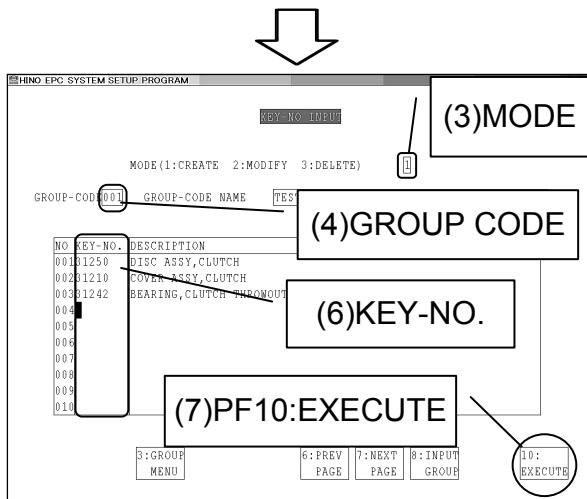

- (2) "KEY-NO. INPUT" screen is displayed.
- (3) Enter "1" in MODE column when creating new data.
- (4) Enter GROUP CODE selected in GROUP CODE column.
- (5) Cursor moves to KEY-NO. column.
- (6) Enter KEY-NO. you want to set in GROUP CODE.

You can put an asterisk (\*) at any position when you are not sure of KEY-NO. to be retrieved.  
(Eg.312\*, 9881\* etc.)

When number of KEY-NO. is over 10, press PF7:NEXT PAGE and input screen is displayed.

- (7) Click PF10:EXECUTE.
- (8) CONTENTS OF GROUP CODE have been set.
- (9) You can go back to the previous screen by pressing PF3:GROUP MENU.

### 7-4-3. Search Part Number by GROUP CODE

You can search PART-NO. after setting GROUP CODE.

1:VEHICLE INFORMATION

2:GROUP CODE

3:PF8:GROUP LIST

- (1) Enter VEHICLE INFORMATION.  
(REFER TO 3.VEHICLE INFORMATION)
- (2) Move cursor  
to GROUP CODE column.
- (3) Press PF8:GROUP LIST.

5: GROUP CODE

7: PF8:GROUP LIST

- (4) "GROUP CODE LIST"screen  
is displayed.
- (5) Click on GROUP CODE  
you want to see.
- (6) The GROUP CODE is  
highlighted in yellow.
- (7) Press PF8:GROUP LIST.

9: KEY-NO.

11: PF10:PART LIST

- (8) "GROUP CODE CONTENTS LIST"  
screen is displayed.
- (9) Click or press ENTER key  
on the Key-No. you want to see.  
  
You can select multiple KEY-NO'S
- (10) The line selected is highlighted  
in yellow.
- (11) Press PF10:PART LIST.

*Continued*





END EDITING: 2001 05/ << PART NUMBER LIST >>

MODEL/CHASSIS NO.	MODEL-PSC	CAT-NO	PRODUCTN.DATE	CLR	TRM	OPT
FB4JGL 10120	FB4JGLA	BAU	1005			3

SPEC: ENGINE1 ENGINE2 CAB T/M GEAR SHIFT BRAKE TYPE  
J05C-B A-CAB LH05S 5F A/O  
3.900 3860

3 PART-NO(S) 1/ 1PAGE(S)

SEQ-NO	PART-NO	QTY	FROM	DESCRIPTION	APPLICABLE MODEL
00131250	0131250-5101	019811		DISC ASSY,CLUTCH	FB4J ALL
00231210	0131210-2050	019811		COVER ASSY,CLUTCH	FB4J ALL
00331242	0131242-1110	019811		BEARING,CLUTCH TH	FB4J ALL
				ROWOUT	

Bottom of page.

1:CHNG PF-KEY	2:PRINT	3:SEARCH H MORE	4:REF PRICE	5:DATA- SAVE	6:PREV PAGE	7:NEXT PAGE	8:ILLUS TRATION	9:MENU	10: OPTION
------------------	---------	--------------------	----------------	-----------------	----------------	----------------	--------------------	--------	---------------

(12) "PART NUMBER LIST" screen.  
is displayed.  
(Refer to 6.PART NO. LIST)

## 7-5. Key-no Search

When KEY-NO. you want to search is available,  
you can search the PART NUMBER by entering KEY-NO's  
at 990 max.

<< KEY NO SEARCH >>

MODEL/CHASSIS NO	MODEL-PSC	CAT-NO	PRODUCTN.DATE	COLOR/TRIM
FB4JGL.....10120	FB4JGLA.....BAU....	1005	.... / ..	

SPEC.

ENGINE1  
J05C-B....  
3.900 3860

ENGINE2  
CAB  
A-CAB

T/M  
LH05S

GEAR SHIFT  
5F...

BRAKE TYPE  
A/O..

☐ GROUP CODE

## (1)VEHICLE INFORMATION

NO.	KEY	1	2	3	4	5	6
1							
5							
9		9		4		8	
13		10		11		12	
17		14		15		16	
21		18		19		20	
25		22		23		24	
29		26		27		28	
33		30		31		32	
37		34		35		36	
41		38		39		40	

3:GNRL  
SEARCH

6:PREV  
PAGE

7:NEXT  
PAGE

8:ILLUS  
TRATION

9:CLEAR

10:PART  
LIST

11:MENU

(1) Enter VEHICLE INFORMATION.

(Refer to 3.VEHICLE INFORMATION)

(2) Move cursor to KEY-NO. column with downward arrow and ENTER keys.

(3) Enter KEY-NO.

You can put an asterisk (\*) at any position when you are not sure of the KEY-NO. to be retrieved.  
(Eg. 312\*, 9881\* etc.)

MINI PC SYSTEM PROGRAM

<< KEY NO SEARCH >>

MODEL/CHASSIS NO	MODEL-PSC	CAT-NO	PRODUCTN.DATE	COLOR/TRM
FB4JGL.....10120..	FB4JGLA.....BAU.....	1005	1005	/ / /

SPEC. ENGINE1 ENGINE2 CAB T/M NOOS CAB SHIPT BRAKE TYPE

J05C-B..... A-CAB LH05S 5F..

3.900 3860

(5)QTY

☐ GROUP CODE

NO.	KEY-NO	QTY	NO.	KEY-NO	QTY	NO.	KEY-NO	QTY	NO.	KEY-NO	QTY
1	31250	01	2	31210	01	3	31242	01	4		
5			6			7			8		
9			10			11			12		
13			14			15			16		
17			18			19			20		
21			22			23			24		
25			26			27			28		
									29		
									30		
									31		
									32		
									33		
									34		
									35		
									36		
									37		
									38		
									39		
									40		

(3)KEY-NO.

(6)PF10:PART LIST

0:MENU 1:SEARCH 0:KEY PAGE 1:KEY PAGE 0:CALLS TRATION 0:CLEAR 10:PART LIST 11:MENU

(4) Press ENTER key, and cursor moves to QTY column.

(5) Enter quantity as you like  
in QTY column.  
(Blank is acceptable.)

The quantity is used for  
D.M.S. CONNECTION  
(ordering etc..)  
or PRICE REFERENCE.

When number of key-no. is over 40,press PF7:NEXT PAGE and next input screen is displayed.

(6) Press PF10:PART LIST.

(7) "PART NUMBER LIST" screen is displayed.  
(Refer to 6.PART NO. LIST)

SEHNO EPC SYSTEM PROGRAM									
END EDITING: 2001		05/		<< PART NUMBER LIST >>					
MODEL/CHASSIS NO.		MODEL-PSC		CAT-NO	PRODUCTN.DATE		CLR	TRM	OPT
FB4JGL	10120	FB4JGLA	BAU	1005					3
SPEC:	ENGINE1 J05C-B 3.900 3860	ENGINE2	CAB A-CAB	T/M LH05S	GEAR SHIFT 5F	BRAKE TYPE A/O			
3 PART-NO(S)							1/ 1PAGE(S)		
SEQEY-NO	PART-NO	QTY	FROM	DESCRIPTION		APPLICABLE MODEL			
00131250	0131250-5101	01	19811-	DISC ASSY,CLUTCH		FB4J ALL			
00231210	0131210-2050	01	19811-	COVER ASSY,CLUTCHF		FB4J ALL			
00331242	0131242-1110	01	19811-	BEARING,CLUTCH THF		FB4J ALL ROWOUT			

Bottom of page.

1:CHNG PF-KEY	2:PRINT	3:SEARCH H MORR	4:REF PRICE	5:DATA- SAVE	6:FREVIEW PAGE	7:NEXT PAGE	8:ILLUS TRATION	9:MENU	10: OPTION
------------------	---------	--------------------	----------------	-----------------	-------------------	----------------	--------------------	--------	---------------

Continued

## 7-6. Search Applicable Model for Part Number

You can search applicable models for a part number.  
Applicable model is searched in contents of Hino EPC.

(1) Press PF2:APPL MODEL

(2) "PART NO./MODEL SEARCH" screen is displayed.

(3) Enter PART NO. in PART NO. column.

The part number to be entered can be 9-digits with or without a hyphen.  
A part number with an "A" at the end, however, will not be accepted.

(4) Press PF4:CD SELECT

(5) Cursor moves to CD-NO. column.

(6) Click on CD-NO. you want to search.

(7) The CD-NO. is highlighted in red.

(8) Insert CD-ROM of CD-NO. selected.

(9) Press PF8:SEARCH MODEL.

*Continued*

↓

THINO EPC SYSTEM PROGRAM
END

<< PART NO / MODEL SEARCH >>

PART NO.  
31242-1110

A1	A2	B1	B2	B3	B4
B5	B6	B7	B8	B9	A0

NO.	CAT-NO	MODEL SERIES	KEY-NO	PART NO.	QTY	FROM	APPLICABLE MODEL
001	1005	AUS	31242	31242-1110	01	9811	FB43 ALL
002	1210	AUS	31242	31242-1110	01	9101	53WLKA-CAU,CBU/FD3WL
003	1504	AUS	31242	31242-1110	01	9101	961LA ALL/GD3W ALL
					01	9101	FT ALL
						961	

1:BACK 2:PRINT  

PART-NO

4:INPUT  

PART-NO

5:UNSHO  

W MODEL

6:PREV  

PAGE

7:NEXT  

PAGE

8:SEARC  

H MODEL

9:SEARC  

H MORE

(10) Applicable model is displayed.

You can display or hide applicable model by clicking on PF5:SHOW MODEL, UNSHOW MODEL

↓

THINO EPC SYSTEM PROGRAM
END

<< PART NO / MODEL SEARCH >>

PART NO.  
31242-1110

A1	A2	B1	B2	B3	B4
B5	B6	B7	B8	B9	A0

NO.	CAT-NO	MODEL SERIES	KEY-NO	PART NO.	QTY	FROM	APPLICABLE MODEL
001	1005	AUS	31242	31242-1110	01	9811	
002	1210	AUS	31242	31242-1110	01	9101	
						961	
003	1504	AUS	31242	31242-1110	01	9101	
						961	

1:BACK 2:PRINT  

PART-NO

4:INPUT  

PART-NO

5:SHOW  

MODEL

6:PREV  

PAGE

7:NEXT  

PAGE

8:SEARC  

H MODEL

9:SEARC  

H MORE

(11) When pressing PF5:UNSHOW MODEL, applicable model is not displayed.